



INTEL® PRO WIDI QUICK START GUIDE

Launch Intel® Pro Wireless Display with the following steps:

1. In the conference room, have a Pro WiDi **certified** integrated or standalone receiver with latest firmware
2. **Launch** the WiDi application on your PC
3. Users **Connect** to the wireless display receiver according to their Windows* 7, 8.1 or 10 version
4. Users select the receiver name displayed on the monitor or display in the conference room
5. If **first time pairing** is required, user enters the **PIN displayed** on monitor
6. Once connected, users choose to project via the **Duplicate** or **Extend** mode in the Pro WiDi application
7. To end the Pro WiDi session, users click on **Disconnect** in the WiDi application on their PCs



<p>Windows* 7</p> <p>Find the receiver from the list displayed</p>	<p>Windows* 8.1</p> <p>Click Connect & find the receiver 1st time: click on Add a wireless Display</p>	<p>Windows* 10</p> <p>Click Connect & find the receiver</p>	<p>Windows* 10</p> <p>Click Connect & find the receiver</p>
---	--	--	--

NO Pair needed

User(s) select receiver to connect to

Pair needed

User(s) connect to the wireless display. Ready to Present screen is displayed



First time PIN Pairing, user enters the PIN displayed on monitor. Ready to Present screen is displayed

To know more about Pro Wireless Display, visit [A better way to work with Intel Pro Wireless Display](#)