







 






Stone NT310-H User Manual and Hotkeys

Stone NT310-H (W550SU1)

Please find attached the Stone NT310-H (W550SU1) User Manual.

Function Keys / Hotkeys

The function keys will act as hotkeys when pressed whilst the FN key is held down. Some key combinations will also generate an on screen message when the Hotkey utility is installed.

Keys	Function	Keys	Function
Fn + 	Play/Pause (in Audio/Video Programs)	Fn + 	Display Toggle
Fn + 	Fan Control Toggle - Automatic Fan Control / Full Power	Fn +  	Brightness Decrease/Increase
Fn + 	TouchPad Toggle	Fn + 	PC Camera Power Toggle
Fn + 	Turn LCD Backlight Off (Press a key to or use TouchPad to turn on)	Fn + 	Airplane Mode Toggle
Fn + 	Mute Toggle	Fn + NumLk	Number Lock Toggle
Fn + 	Sleep Toggle	Fn + ScrLk	Scroll Lock Toggle
Fn +  	Volume Decrease/Increase	Caps Lock	Caps Lock Toggle

Applies to:

- Stone NT310-H laptop (NOTCHA-260, NOTCHA-265, NOTCHA-271. NOTCHA-272, NOTCHA-274, NOTCHA-282 and ODMKIT-002 (replacement motherboard kit)).

Article ID: 471

Last updated: 12 Jun, 2016

Updated by: Andrew Sharrad

Revision: 5

Stone Branded Products -> Laptops, Netbooks and Tablets -> Installation, Drivers and Software -> Stone NT310-H User Manual and Hotkeys

<https://kb.stonegroup.co.uk/index.php?View=entry&EntryID=471>