

USER'S MANUAL

notebook



Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©March 2013

Trademarks

Intel and **Celeron** are trademarks/registered trademarks of Intel Corporation.

Preface

R&TTE Directive

This device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom, Cyprus, Czech Republic, Estonia, Hungary, Latvia, Lithuania, Malta, Slovakia, Poland, Slovenia.

ErP Off Mode Power Consumption Statement:

The figure below notes the power consumption of this computer in compliance with European Commission (EC) regulations on power consumption in off mode:

- Off Mode < 0.5W

CE Marking

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters “CE”. The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number 0560 after the CE mark.

The CE Marking is not a quality mark. Foremost, it refers to the safety rather than to the quality of a product. Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.

FCC Statement (Federal Communications Commission)

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1. This device may not cause interference.

And

2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

If your purchase option includes both **Wireless LAN** and **3G** modules, then the appropriate antennas will be installed. Note that in order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.

Important Notice - 3G & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3G module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3G module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 2.1A (**40 Watts**) minimum AC/DC Adapter.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

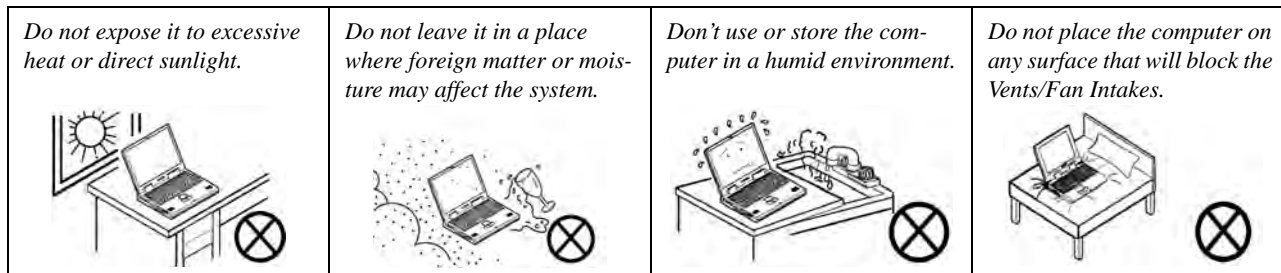

Preface

- Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
- Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

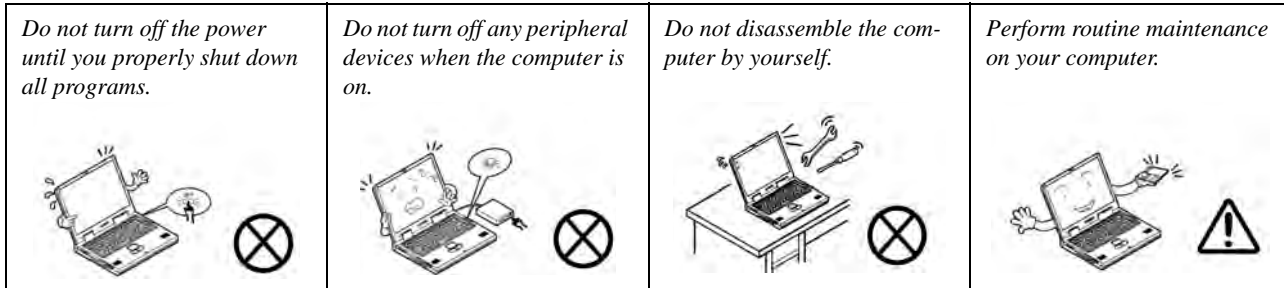

- Take care when using peripheral devices.**



Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.



Do not place heavy objects on the power cord.

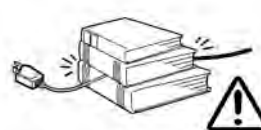

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord).

You must also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer.**

Polymer Battery Precautions

Note the following information which is specific to polymer batteries only, and where applicable, this overrides the general battery precaution information overleaf.

- Polymer batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using polymer batteries. Do not use polymer batteries in high ambient temperature environments, and do not store unused batteries for extended periods.

See also the general battery precautionary information overleaf for further information.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.



Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:

- Hazardous moving parts.
- Keep away from moving fan blades.

Travel Considerations

Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your documents are prepared.



Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vent(s)/fan intake(s)/outlet(s) to be blocked. To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s)/outlet(s) while the computer is in use.

On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

Hand-carry the notebook - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with normal luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

Beware of Electromagnetic fields - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note:** Some airports also scan luggage with these devices.

Fly safely - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

Get power where you can - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.

Keep it dry - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:

- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.



Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.



Lighting

Proper lighting and comfortable display viewing angle can reduce eye strain and muscle fatigue in your neck and shoulders.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

LCD Electro-Plated Logos

Note that in computers featuring a raised LCD electro-plated logo, the logo is covered by a protective adhesive. Due to general wear and tear, this adhesive may deteriorate over time and the exposed logo may develop sharp edges. Be careful when handling the computer in this case, and avoid touching the raised LCD electro-plated logo. Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your distributor/supplier.

Contents

Notice	I
EuP Off Mode Power Consumption Statement:	II
FCC Statement	IV
FCC RF Radiation Exposure Statement:	V
Instructions for Care and Operation	VII
Power Safety	IX
Polymer Battery Precautions	X
Battery Precautions	XI
Cleaning	XII
Servicing	XII
Travel Considerations	XIII

Quick Start Guide

Overview	1-1
Advanced Users	1-2
Beginners and Not-So-Advanced Users	1-2
Warning Boxes	1-2
Not Included	1-3
System Software	1-4
System Startup	1-5
System Map: LCD Panel Open	1-6

Preface

LED Indicators	1-7
Keyboard	1-8
Keyboard Shortcuts	1-9
Function/Hot Key Indicators	1-10
Control Center	1-11
System Map: Front & Left Views	1-12
System Map: Right & Rear Views	1-13
System Map: Bottom View	1-14
Removing the Battery	1-15
3G Module USIM Card Installation	1-16
Windows Control Panel	1-17
Windows 8 Start Screen & Desktop	1-18
Apps & Tiles	1-19
Desktop Application	1-20
Windows 8 Charms Bar	1-22
Windows 8 Control Panel	1-24
Windows 8 Taskbar	1-27
Video Features	1-28
Power Options	1-31
Running Apps	1-32

Features & Components

Overview	2-1
Hard Disk Drive	2-2
Multi-In-1 Card Reader	2-3
Touchpad and Buttons/Mouse	2-4
Finger Sensing Pad Configurator	2-6
Audio Features	2-15

Power Management

Overview	3-1
The Power Sources	3-2
AC/DC Adapter	3-2
Battery	3-2
Turning On the Computer	3-3
Power Plans	3-4
Power-Saving States	3-6
Sleep	3-6
Hibernate	3-7
Shut down	3-7
Configuring the Power Buttons	3-8
Resuming Operation	3-10
Power Conservation Modes	3-11

Preface

Battery Information	3-13
Battery Power	3-13
Conserving Battery Power	3-14
Battery Life	3-15
New Battery	3-15
Recharging the Battery with the AC/DC Adapter	3-15
Proper handling of the Battery Pack	3-16
Battery FAQ	3-17

Drivers & Utilities

What to Install	4-1
Driver Installation	4-2
Updating/Reinstalling Individual Drivers	4-4
User Account Control	4-5
Windows Security Message	4-5
New Hardware Found	4-5
Driver Installation Procedure	4-6
Chipset	4-6
Video (VGA)	4-6
LAN	4-6
Card Reader	4-6
TouchPad	4-6

Airplane	4-6
Hot Key	4-6
MEI Driver	4-7
Audio	4-7
Windows Experience Index	4-8
Optional Drivers	4-9

BIOS Utilities

Overview	5-1
The Setup Utility	5-2
Failing the POST	5-3
Fatal Errors	5-3
Non-Fatal Errors	5-3
Setup Screens	5-4
Main Menu	5-5
System Time & Date (Main Menu)	5-5
SATA Port # (Main Menu)	5-6
System/Extended Memory: (Main Menu)	5-6
MB Series / BIOS Revision / KBC/EC firmware Revision	5-6
Advanced Menu	5-7
SATA Mode (Advanced Menu)	5-7
Boot Logo (Advanced Menu)	5-8

Preface

Power On Boot Beep (Advanced Menu)	5-8
Battery Low Alarm Beep (Advanced Menu)	5-8
Security Menu	5-9
Set Supervisor Password (Security Menu)	5-9
Set User Password (Security Menu)	5-10
Password on boot (Security Menu)	5-10
Secure Boot (Security Menu)	5-10
Boot Menu	5-11
Boot Option Priorities (Boot Menu)	5-12
UEFI Boot (Boot Menu)	5-12
Exit Menu	5-13

Modules & Options

Overview	6-1
PC Camera Module	6-2
PC Camera Audio Setup	6-3
Camera App	6-4
Taking Pictures/Capturing Video	6-6
Wireless LAN Module	6-9
3rd Party 802.11b/g/n Driver Installation	6-10
Intel® WLAN Driver Installation	6-10
WLAN Configuration in Windows 8	6-11

Bluetooth & WLAN Combo Module	6-17
3rd Party Bluetooth (V4.0) Combo Driver Installation	6-18
Intel Bluetooth Combo Driver Installation	6-18
Bluetooth Configuration in Windows 8	6-19
Trusted Platform (Security) Module	6-23
Enabling & Activating TPM	6-24
Trusted Platform Module (TPM) Driver Installation	6-26
Initializing TPM	6-27
Infineon Security Platform Settings Tool	6-29
3G Module	6-37
3G Configuration in Windows 8	6-39
EM820W 3G Module PIN Code & Power-Saving	6-42

Troubleshooting

Overview	7-1
Basic Hints and Tips	7-2
Backup and General Maintenance	7-3
Viruses	7-4
Upgrading and Adding New Hardware/Software	7-5
Problems and Possible Solutions	7-7
Resolving the “Insert a SIM” issue with the 3G Module (Windows 8)	7-12

Interface (Ports & Jacks)

Notebook Ports and JacksA-2

Control Center

OverviewB-1

Intel Video Driver Controls

Intel Video Driver InstallationC-1
VideoC-1
Dynamic Video Memory TechnologyC-1
Intel® Graphics & Media Control PanelC-2
Display Devices & OptionsC-5
Attaching Other DisplaysC-6
To Configure Displays from Devices (Charms Bar)C-9
Configuring an External Display In WindowsC-10
HDMI Audio ConfigurationC-12

Specifications

ProcessorD-2
Core LogicD-2
DisplayD-2
MemoryD-2

Video AdapterD-2

StorageD-2

AudioD-2

Keyboard & Pointing DeviceD-2

InterfaceD-2

Card ReaderD-3

SlotD-3

CommunicationD-3

Operating SystemsD-3

SecurityD-3

BIOSD-3

Power ManagementD-3

PowerD-3

BatteryD-3

Design FeatureD-3

LED IndicatorsD-4

Environmental SpecD-4

Dimensions & WeightD-4


Chapter 1: Quick Start Guide

Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices (hard disk, & card reader)**, **TouchPad & Mouse**, **Audio & Printer**.
- **Chapter 3** The computer's **power** saving options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** A quick guide to the computer's **PC Camera, Wireless LAN, Combination Bluetooth & WLAN, Trusted Platform (security)** and **3G** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 7** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface, ports/jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on **Control Center**.
- **Appendix C** Information on the **Intel Video driver controls**.
- **Appendix D** The computer's **specification**.

Advanced Users


If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *“What to Install” on page 4 - 1*, *“BIOS Utilities” on page 5 - 1* and *“Upgrading The Computer” on page 6 - 1* in the remainder of the User’s Manual. You may also find the notes marked with a  of interest to you.

Beginners and Not-So-Advanced Users




Notes

Check the light colored boxes with the mark above to find detailed information about the computer’s features.

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in the Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User’s Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a  as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *“Interface (Ports & Jacks)” on page A - 1*.

Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the  symbol. Also please note the safety and handling instructions as indicated in the *Preface*.

Not Included

Operating Systems (e.g. *Windows 8*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals.



Drivers

If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the drivers listed in **“Drivers & Utilities” on page 4 - 1**. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed. You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you); refer to **Chapter 4** for installation instructions.

You will need to attach an optical device drive to the computer in order to access the drivers on the **Device Drivers & Utilities + User's Manual** disc. This contains the drivers and utilities necessary for the proper operation of the computer.

Ports and Jacks

See **“Notebook Ports and Jacks” on page A - 2** for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the **Windows 8** operating system is supported.

Note: In order to run **Windows 8** without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM).



Windows 8 OS

In order to run **Windows 8 (32 Bit)** without limitations or decreased performance, your computer requires a minimum **1GB** of system memory (RAM), however if you are running **Windows 8 (64 bit)** your computer requires a minimum **2GB** of system memory (RAM).

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
4. Attach the AC/DC adapter to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
5. Use one hand to raise the lid/LCD to a comfortable viewing angle (**do not exceed 130 degrees**); use the other hand (as illustrated in [Figure 1 - 1](#) below) to support the base of the computer (**Note: Never lift the computer by the lid/LCD**).

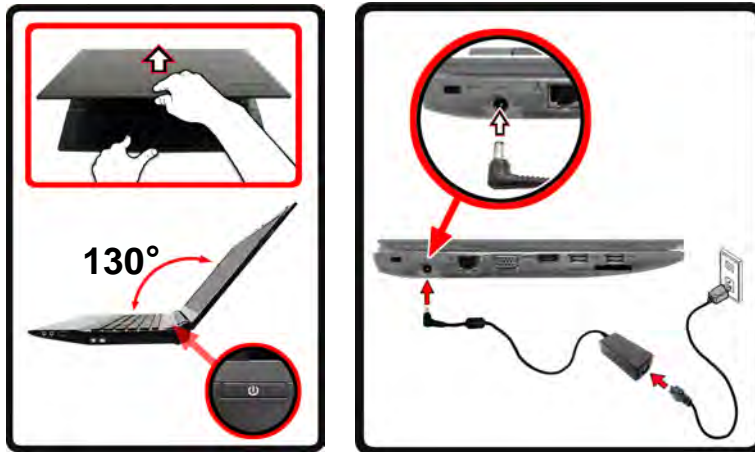


Figure 1 - 1 - Opening the Lid/LCD




Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Power** item in **Settings** in the **Charms Bar** (use the **Windows Logo Key + C** key combination to access the **Charms Bar**) in **Windows 8**. This will help prevent hard disk or system problems.

Figure 1 - 2
LCD Panel Open

1. Built-In PC Camera (Optional)
2. *PC Camera LED
3. Built-In Microphone
4. LCD
5. Power Button
6. Keyboard
7. TouchPad & Buttons

*Note that the PC Camera LED functions with the 1.0HD camera only

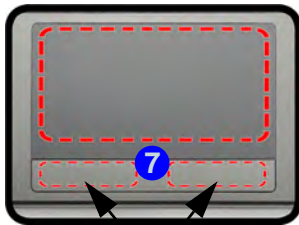

TouchPad Buttons
(valid operation area)

System Map: LCD Panel Open



Note that the TouchPad and Buttons valid operational area is that indicated within the red dotted lines indicated on the left.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **3G/WLAN/Bluetooth** module(s) are OFF if you are using the computer aboard aircraft.

Use **Fn + F11 Airplane Mode** key combination to toggle Airplane Mode On/Off, and check the LED indicator for the power status (see [Table 1 - 3, on page 1 - 10](#) / [Table 1 - 1, on page 1 - 7](#)).

LED Indicators

The LED indicators display helpful information about the current status of the computer.





Icon	Color	Description
	Orange	DC Power is Plugged In
	Green	The Computer is On
	Blinking Green	The Computer is in Sleep Mode
	Orange	The Battery is Charging
	Green	The Battery is Fully Charged
	Blinking Orange	The Battery Has Reached Critically Low Power Status
	Green	Airplane Mode is ON (the WLAN & Bluetooth Modules are OFF)
	Green	HDD/ODD Activity

Table 1 - 1 - LED Indicators



Other Keyboards

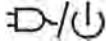If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

NumLK & Scr LK

Hold down the Fn Key and either NumLK or Scr LK to enable number or scroll lock, and check the indicator for status.

Keyboard

The keyboard has an embedded numerical keypad for easy numeric data input, and function keys to change operational features instantly.

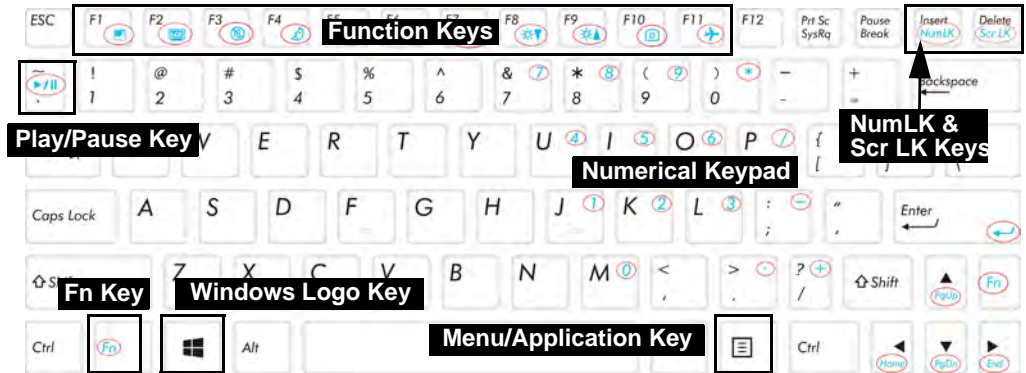


Figure 1 - 3 - Keyboard



Special Characters

Some software applications allow the number-keys to be used with Alt to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that NumLK is on.

Keyboard Shortcuts

The following Windows Logo Key (Winkey) keyboard shortcuts are useful for navigation/operation in *Windows 8*.



Windows Logo  Key +	Description
Tap Winkey	Toggle between the Start screen and the foremost running app or the Windows Desktop
C	Display Charms menu
D	Switch to the Windows Desktop and toggle show Desktop
E	Switch to the Windows desktop and launch Windows Explorer with Computer displayed
F	Display file Search
I	Open the Settings charm
K	Open the Connect charm
L	Lock the computer and display the Lock screen
P	Display the Second Screen menu (see Figure 1 - 22 on page 1 - 28)
R	Switch to the Windows Desktop and display the Run dialog box
Z	Access the App Bar (see Figure 1 - 14 on page 1 - 21)


Table 1 - 2 - Keyboard Shortcuts



Windows Logo Keyboard Shortcut

Use the Windows logo key  + **D** key combination to switch between the Start screen and Windows Desktop.

Menu/Application Keyboard Shortcut

When the Desktop app is running you can use the Menu/Application key  on the keyboard to display the context menu as per a mouse right-click. In the **Start** screen this function is useful to quickly display the **All Apps** icon.

Function/Hot Key Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down. In addition to the basic function key combinations; visual indicators are available (**from the Desktop**) when the hot key utility is installed.













Keys	Function		Keys	Function	
Fn + ~	Play/Pause (in Audio/Video Programs)		Fn + F8/F9	Brightness Decrease/Increase	
Fn + F1	TouchPad Toggle	 	Fn + F10	PC Camera Power Toggle	 
Fn + F2	Turn LCD Backlight Off (Press a key to or use TouchPad to turn on)		Fn + F11	Airplane Mode Toggle	
Fn + F3	Mute Toggle		Fn + NumLK	Number Lock Toggle	 
Fn + F4	Sleep Toggle		Fn + Scr LK	Scroll Lock Toggle	 
Fn + F5/F6	Volume Decrease/Increase		Caps Lock	Caps Lock Toggle	 
Fn + F7	Display Toggle				

Table 1 - 3 - Function & Hot Key Indicators

Control Center

When in the **Windows Desktop application** (not in the **Start** screen) press the **Fn + Esc** key combination, or **double-click the icon**  in the **notification area of the taskbar** to toggle the **Control Center** on/off. The **Control Center** gives quick access to frequently used controls and enables you to quickly turn the camera/Touch Pad on/off (see [Appendix B](#) for full details).



Control Center

Click on any button to turn any of the modules (e.g. TouchPad, Camera) on/off.

Click on the power conservation modes to switch between Performance, Balanced or Energy Star modes (see page [3 - 11](#)). To remove the Power Conservation Modes screen just click in a blank area of the icon or press a key on the keyboard.

Click on the buttons (or just click and hold the mouse button) to adjust the slider for Brightness/Volume.

Click on Display Switch and click to choose a display mode from the menu (see page [C - 9](#)).



Figure 1 - 4 - Control Center - Control Center

Quick Start Guide

Figure 1 - 5
Front & Left Views

1. LED Indicators
(see [Table 1 - 1](#),
[on page 1 - 7](#))
2. Security Lock Slot
3. DC-In Jack
4. RJ-45 LAN Jack
5. External Monitor
Port
6. HDMI-Out Port
7. 2 * USB 2.0 Ports
8. Multi-in-1
Card Reader

System Map: Front & Left Views



Multi-In-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / RSMMC
SD (Secure Digital) / Mini SD / SDHC / SDXC
MS (Memory Stick) / MS Pro / MS Duo

Optical Device Drives

To install applications and drivers etc. you will need to attach an external optical CD/DVD device to the USB ports.

System Map: Right & Rear Views



Figure 1 - 6
Right & Rear Views

1. Microphone-In Jack
2. Headphone-Out Jack
3. 1 * USB 2.0 Port
4. Battery
5. Vent/Fan Intake/Outlet



Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See [“Battery Information” on page 3 - 13](#) for full instructions.

Optical Device Drives

To install applications and drivers etc. you will need to attach an external optical CD/DVD device to the USB ports.

Figure 1 - 7
Bottom View

1. Battery
2. Fan Intake/Vent
3. Speakers

System Map: Bottom View



Overheating

To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intake while the computer is in use.




3G USIM Card Installation

If your model includes the 3G option then remove the battery to access the USIM card slot (see 1 - 16).

CPU

The CPU is not a user serviceable part.

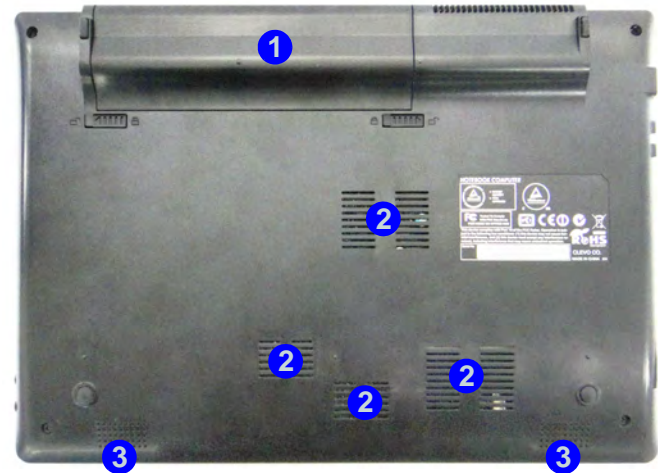

Bottom Cover Removal Warning


Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk or RAM for any reason, please contact your distributor/supplier for further information.

Removing the Battery

If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery.

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow, and hold it in place.
4. Slide the battery out in the direction of the arrow **3**.

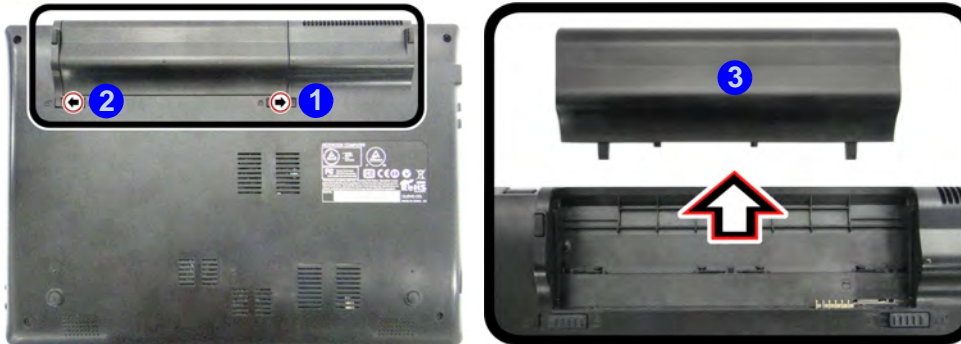

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 1 - 8
Battery Removal



Power Safety Warning

Before you undertake any installation procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

USIM Card Orientation


Note that the USIM card's readable side (with the gold-colored contacts) should face upwards as illustrated.

Figure 1 - 9
**Battery Removal &
USIM Card Insertion**


3G Module USIM Card Installation

If you have included an **optional 3G** module, follow the instructions below to install the USIM card (which will be provided by your service provider). See page **6 - 39** for configuration instructions.

1. Turn **off** the computer, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow, and hold it in place.
4. Remove the battery **3**.
5. Insert the USIM card **4** (at the rear of the battery compartment) as illustrated below until it clicks fully into position, and replace the battery.

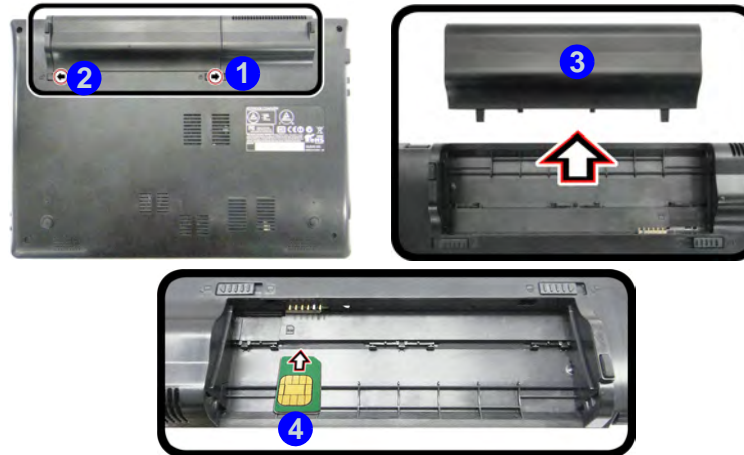

Windows Control Panel

Throughout this manual you will see an instruction to open the **Control Panel**. In *Windows 8* right-click the lower left hot corner to bring up the context menu (or use the **Windows Logo Key**  + **X** key combination) and select **Control Panel**.

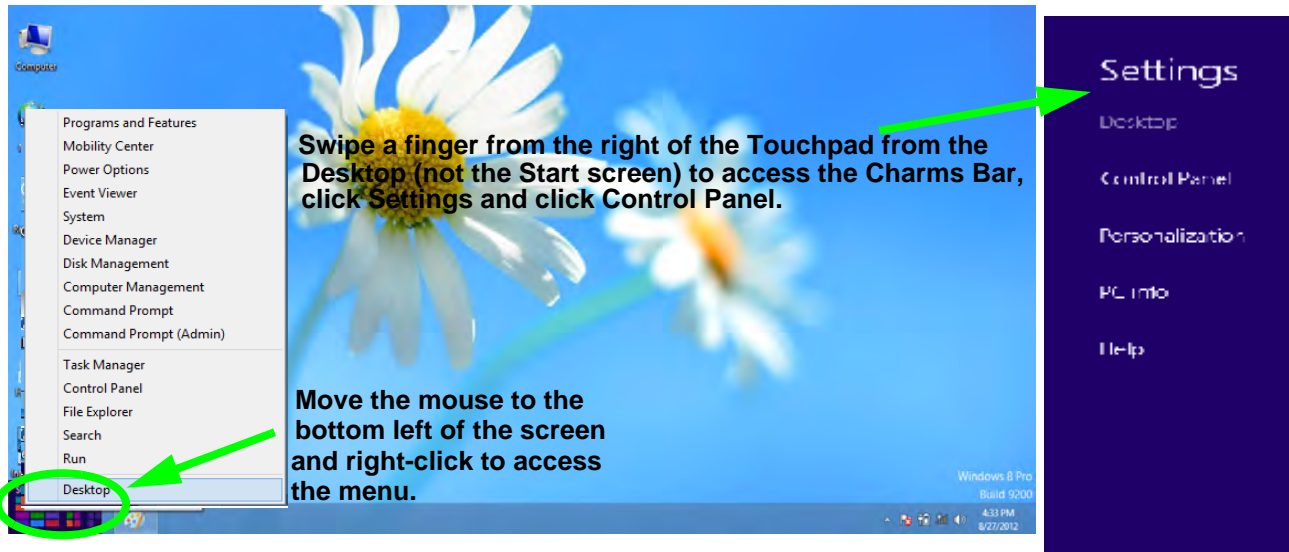


Figure 1 - 10 - Windows 8 Context Menu & Charms Bar Settings (from Desktop App)

Windows 8 Start Screen & Desktop


The Apps, control panels, utilities and programs within *Windows 8* are accessed from the **Start screen** and/or **Windows Desktop app**. The **Desktop** (which runs as an app within the **Start screen**) can be accessed by clicking the **Desktop** item in the Start screen (or by using the **Windows Logo Key**  + **D** key combination).



Figure 1 - 11 - Windows Start Screen

Apps & Tiles

The **Windows 8** Start screen will contain a number of apps, and many more will be installed as you add more applications etc. Not all of these apps can fit on one screen so you will often need use the **slider** at the bottom of the screen in order to view all the necessary Apps.

Accessing Pining/Unpinning All Apps

You can add and remove the tiles for apps and control panels in the Start screen. **Right-click on a blank area of the Start screen**, and you will see the **All Apps** icon. Click the **All Apps** icon to display all the installed applications etc. Right-click any icon to bring up the menu at the bottom of the screen and you can then click the appropriate icon to **pin the App** to (or unpin from) the **Start** screen, or to the **taskbar** in the **Desktop application**.

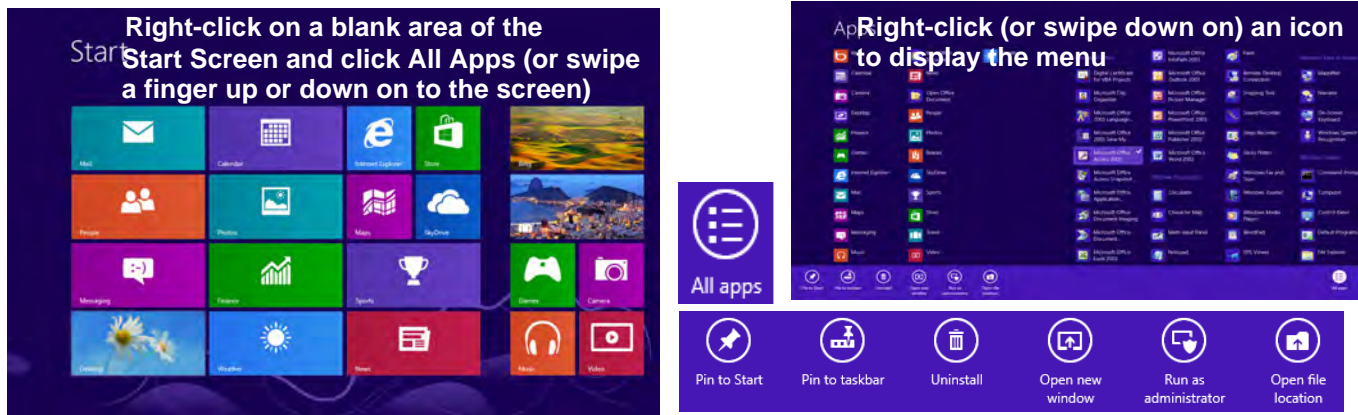



Figure 1 - 12 - All Apps

Quick Start Guide

Desktop Application

When the **Desktop** app is running (click the app in the Start screen or use the **Windows Logo Key**  + **D** key combination) you can use lower left hot corner to switch between the Start screen and the **Windows Desktop** app. To do so move your mouse to hover over the bottom left corner of the screen and click the pop-up.

When you move to the lower left hot corner in the Start screen itself it will take you back to your most recently used app.

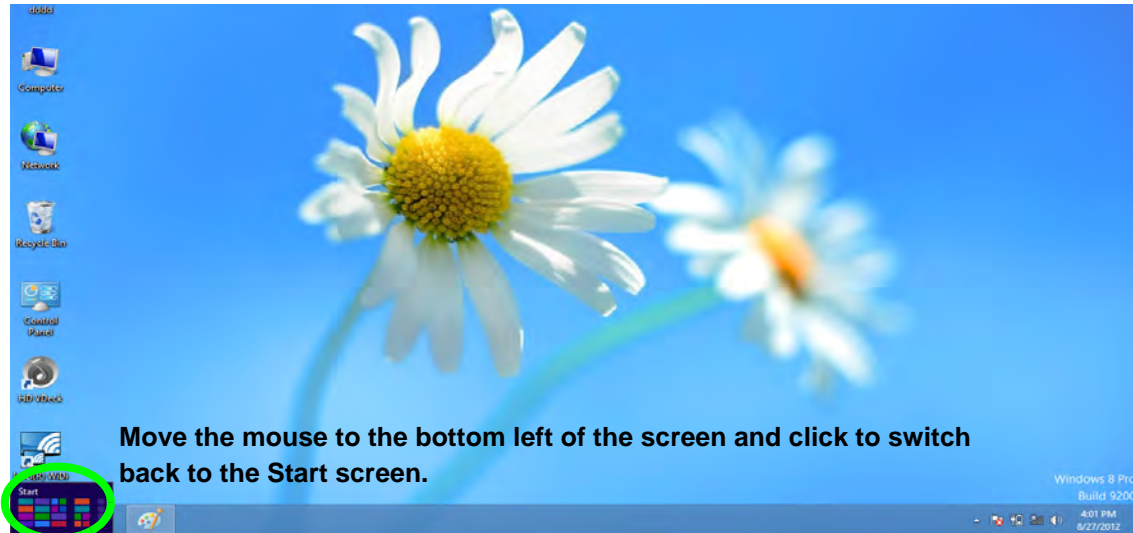



Figure 1 - 13 - Desktop

When the Desktop app is running you can right-click the lower left hot corner (or use the **Windows Logo Key**  + **X** key combination) to bring up an advanced context menu of useful features such as Control Panel, Programs and Features, Power Options, Task Manager, Search, Windows Explorer, Command Prompt, Device Manager and Network Connections etc.

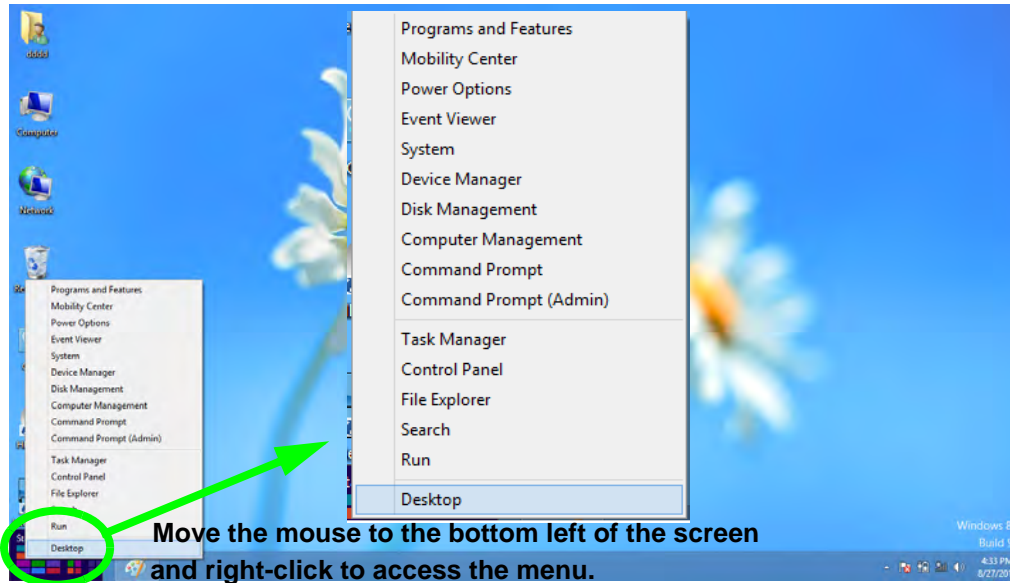


Figure 1 - 14 - Advanced Context Menu (Right-Click lower left hot corner)




Display Most Recently Used Apps

If you are in the **Start** screen, **Desktop** or an app you can move your mouse to the upper left corner of the screen to get back to the most recently used app.

To view all the most recently used Apps hover over the top left of the screen and then move the mouse down along the left side of the screen to display the list.

Windows 8 Charms Bar

The right side of the screen displays the *Windows 8 Charms Bar*. The Charms Bar contains the **Search**, **Share**, **Start**, **Devices** and **Settings** menus. To access up the Charms Bar move the cursor to the upper or lower right corners of the screen, and then hover over one of the items in the Charms Bar to activate it (the bar will be black when it is active), or use the **Windows Logo Key**  + C key combination.







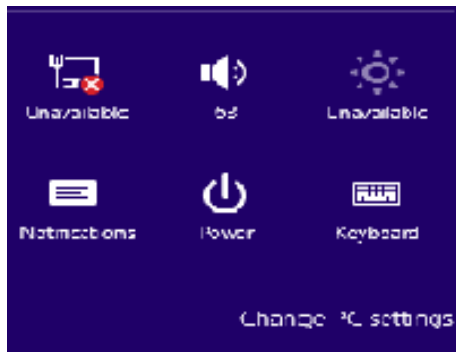


Figure 1 - 15 - Start Screen with Charms Bar

Charms Bar Items

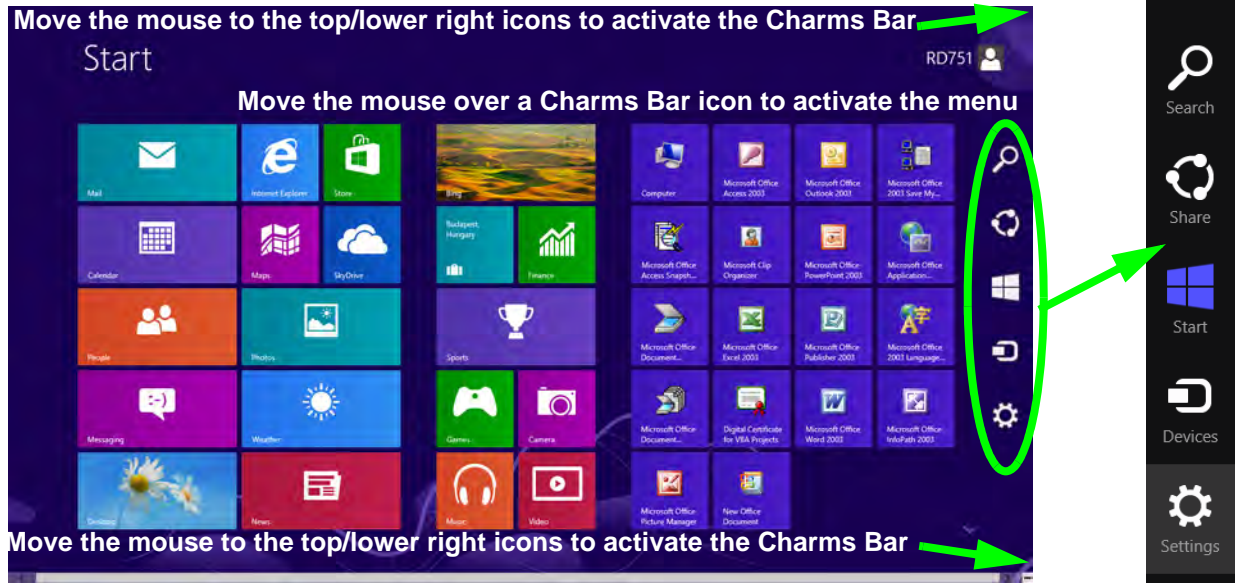- **Search** : You can search for any file, application, Apps and control panel settings with instantaneous results.
- **Share** : This button is used to share information with people via mail or social networks.
- **Start** : Click to bring up the Start Menu (the same function as pressing the Windows Logo Key or clicking the bottom left of the screen).
- **Devices** : Click this button to change connected peripheral device settings e.g. an external display.
- **Settings** : This button gives instant access to the computer settings, such as Network, Audio, Notifications, Power and Keyboard (click **Change PC Settings** to activate the PC Settings menu).



Charms Bar - TouchPad Access

To quick access the **Charms Bar** using the TouchPad:

1. Place your finger **off** the TouchPad (slightly to the right of the pad resting on the computer).
2. Move your finger across to the left on to the TouchPad.
3. The Charms Bar will then pop-up.

Figure 1 - 16 - Settings Menu

Windows 8 Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The Control Panel can be accessed in a number of ways in *Windows 8*.

- Click/ **Search** in the **Windows Charms Bar** (see previous page) and the search pane will pop out. Type *Control Panel* and select it from the results to the left.



Figure 1 - 17 - Search (Control Panel)

- Click on **Computer** (you may need to pin **Computer** to the Start screen) in the **Start** screen, click on **Computer** in the top menu and select **Open Control Panel** from the ribbon.

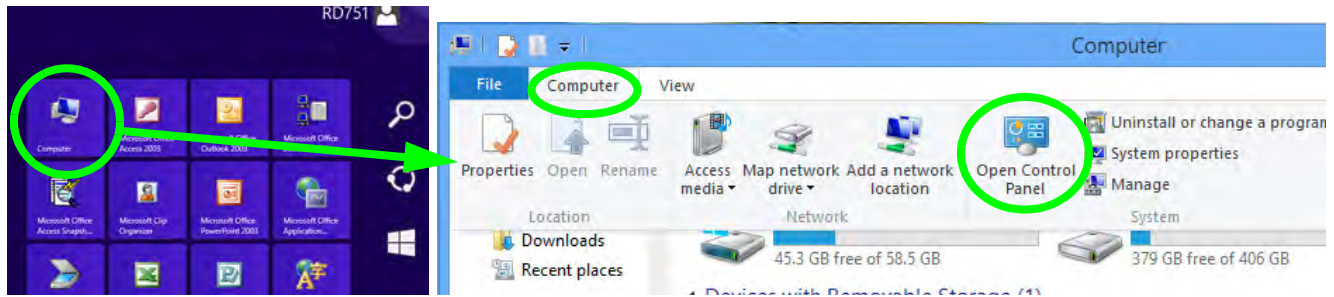


Figure 1 - 18 - Open Control Panel (Computer)

- When in the **Desktop** app (this does not apply to the Start screen) click on **Settings** in the **Windows Charms Bar** and select **Control Panel** from the menu.

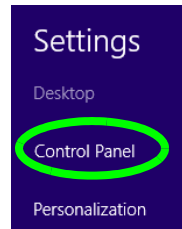


Figure 1 - 19 - Settings Charms Bar (Desktop App Only)

- **Right-click on a blank area of the Start screen, or swipe a finger from the top or bottom of the touch screen.** Click the **All Apps** icon and click Control Panel.

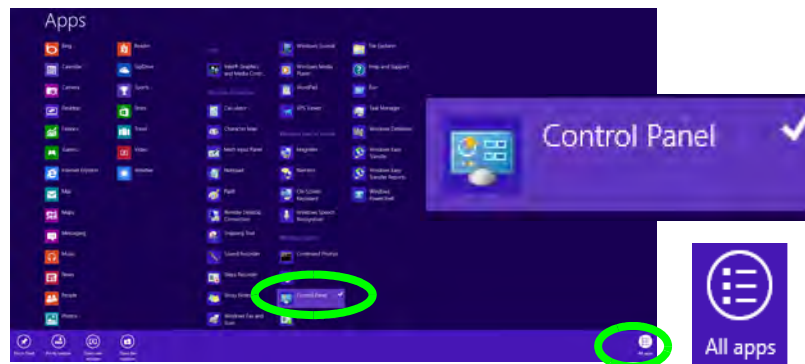




Figure 1 - 20 - All Apps - Control Panel

Quick Start Guide

- Right-click the lower left hot corner to bring up the menu and select Control Panel (see *Figure 1 - 14 on page 1 - 21*).



Keyboard Shortcut to Control Panel

You can also use keyboard shortcuts to access the Control Panel. Press the **Windows logo key**  and **X** to bring up the context menu, and then press **P** to bring up the Control Panel. Alternatively press the **Windows logo key**  and **R** to bring up the **Run** dialog box, and then type **“Control Panel”** and press Enter to access the Control Panel.

Windows 8 Taskbar

In many instances throughout this manual you will see an instruction to access the **notification area of the taskbar**. In *Windows 8* the taskbar is accessed from the **Desktop** application. If you are in the Start screen you will need to click the Desktop app to switch to the Desktop.

The taskbar is displayed at the bottom of the desktop screen, and you can see the notification area of the taskbar in the bottom right of the screen. Some of the Control Panels and applications referred to during the course of this manual can be accessed from here.



Figure 1 - 21 - Desktop Taskbar

You can pin/unpin apps to/from the taskbar in much the same way as you can to the Start screen (see *[“Accessing Pining/Unpinning All Apps” on page 1 - 19](#)*).

Video Features

You can switch display devices, and configure display options, from the **Display** control panel (in **Appearances and Personalization**) in *Windows 8* when running the **Desktop** app (see *“Desktop Application” on page 1 - 20* and *Appendix C*). In *Windows 8* it is possible to quickly configure external displays from the **Devices** menu item in the **Charms Bar** (see *“Windows 8 Charms Bar” on page 1 - 22*).

To Configure Displays from Devices (Charms Bar):

1. Attach your display to the HDMI-Out port, and turn it on.
2. Go the **Charms Bar** and select **Devices**.
3. Click **Second Screen**.
4. Click on any one of the options from the menu to select Duplicate, Extend or a Single display.

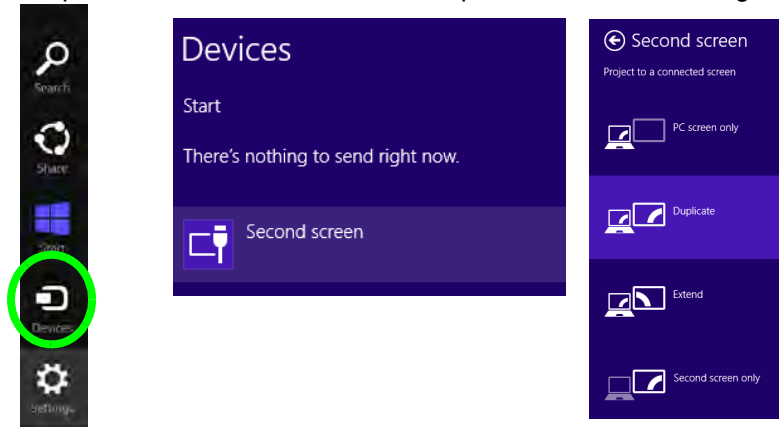


Figure 1 - 22 - Second Screen (Devices)

To access **Display (Control Panel) and Screen Resolution** in *Windows 8*:

1. Go to the **Control Panel**.
2. Click **Display** (icon) - In the **Appearance and Personalization** category.
3. **Adjust resolution.**

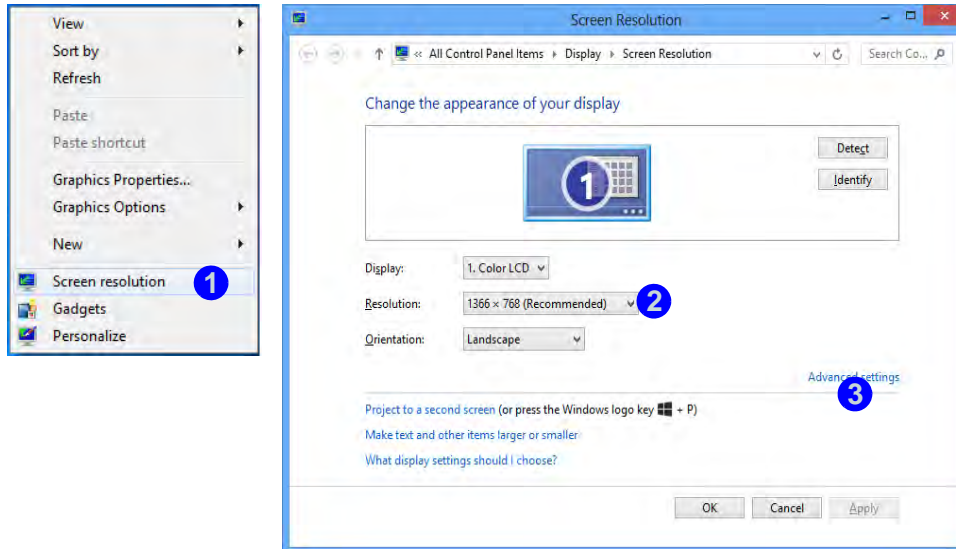


Figure 1 - 23 - Screen Resolution

Right-Click Desktop App

1. You can right-click the desktop and select **Screen resolution** ① (Figure 1 - 23).
2. Use the dropbox to select the screen **Resolution** ② (Figure 1 - 23).
3. Click **Advanced settings** ③ (Figure 1 - 23) to bring up the **Advanced** properties tabs.

Quick Start Guide

To access the *Intel(R) Graphics Media Accelerator Driver for mobile* control panel:

1. Click **Advanced settings** ③ (*Figure 1 - 23 on page 1 - 29*) in the **Screen Resolution** control panel in **Windows**.

2. Click the **Intel(R)...** tab and click **Graphics Properties** (button) ④ (*Figure 1 - 24 on page 1 - 30*).

OR

3. Right-click the desktop and select **Graphics Properties** from the menu.

OR

4. Click the icon  in the notification area of the Desktop taskbar and select **Graphics Properties** from the menu.

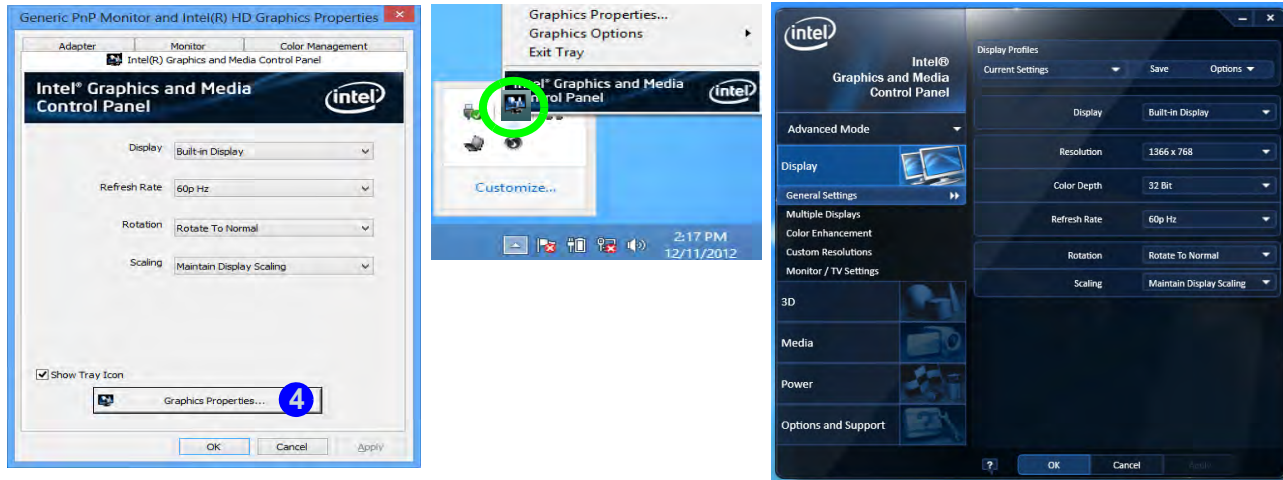


Figure 1 - 24 - Intel GMA Driver for Mobile Control Panel

Power Options

Power Options (Hardware and Sound) can be accessed from the Control Panel. The **Power Menu** item in **Settings** in the **Charms Bar** in *Windows 8* may be used to **Shut down** or **Restart** (you can also add **Hibernate/Sleep** to the menu - see *“Adding Hibernate/Sleep to the Power Menu” on page 3 - 9*).

Shut Down, Restart or Sleep

1. Go to the **Charms Bar** and click **Settings**.
2. Click **Power** .
3. Select **Sleep**, **Shut Down** or **Restart**.

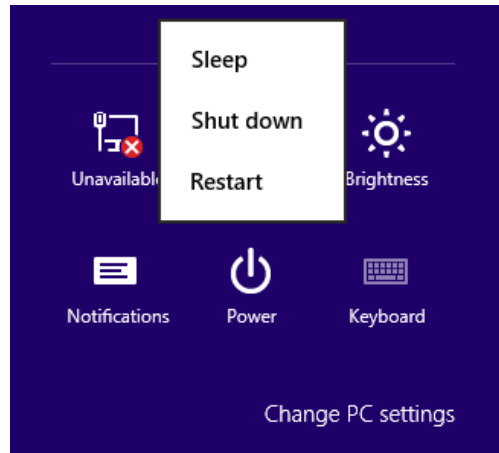



Figure 1 - 25 - Power (Settings)

Running Apps

To run apps in *Windows 8* you will need to check that the **Screen Resolution** and **User Account Control Settings** are compatible with the system requirements.

Screen Resolution Settings

1. Switch to the Windows Desktop (click the app or use the Windows logo key **+** **D** key combination).
2. Right-click a blank area of the Windows Desktop and select **Screen Resolution**. Adjust the **Resolution** to make sure that it is at least **1024 * 768**, although preferably **1366 * 768** or above (see sidebar).

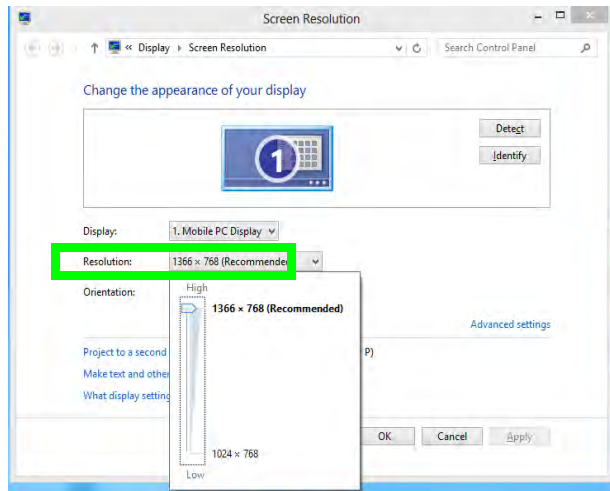

Screen Resolution for Metro Style Apps (Windows 8)

The minimum resolution in which Metro style Apps will run is **1024x768**.

The minimum resolution required to support all the features of Windows 8 (including multitasking with snap) is **1366x768**.

These specs are the minimum screen resolution that supports all the features of Windows 8 on a useful physical size.

Figure 1 - 26 - Screen Resolution

User Account Control Settings

If your computer meets the minimum screen resolution requirements, and still you can't run Metro apps, then that you have to check the status of **User Account Control (UAC)**. Metro apps may fail to open when the UAC is turned off. To check whether the UAC is on or off, follow the instructions below.

1. Open the **Control Panel**.
2. Click on **User Accounts** and then click on **Change User Account Control settings** (or click **System and Security** and click **Change User Account Control Settings** under **Action Center**).
3. If the slider is in the **Never notify** position, then the UAC is disabled.
4. To enable or turn on the UAC, move the slider to **Always notify** or **Notify me when apps try to make changes to my computer (default)** position, and then click **OK**.

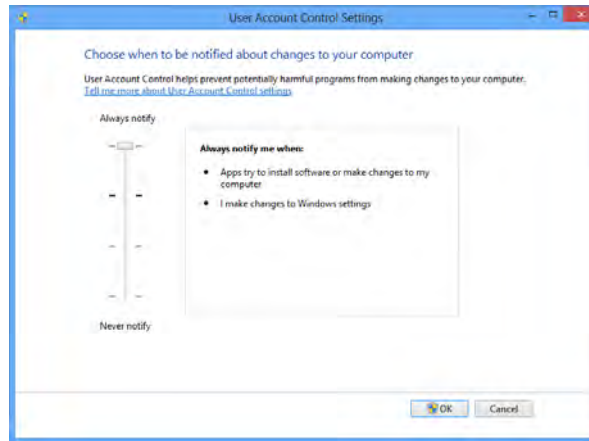


Figure 1 - 27 - User Account Control

Chapter 2: Features & Components

Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive
- Multi-In-1 Card Reader
- Touchpad and Buttons/Mouse
- Audio Features



Bottom Cover Removal Warning

Do not remove any cover(s) and/or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk for any reason, please contact your distributor/supplier for further information.

Hard Disk Drive

The hard disk drive is used to store your data in the computer. The hard disk can be taken out to accommodate other serial (SATA) hard disk drives (see *“Storage” on page D - 2* for specification information), however you will need to contact your distributor/supplier to do this in order to avoid violating the terms of your warranty.

Multi-In-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the card reader driver (see *“Card Reader” on page 4 - 6*).

- MMC (MultiMedia Card) / RS MMC
- SD (Secure Digital) / Mini SD / SDHC / SDXC
- MS (Memory Stick) / MS Pro / MS Duo

Note: Some of these cards require PC adapters that are usually supplied with the cards.



Card Reader Cover

Make sure you keep the rubber cover provided in the card reader when not in use. This will help prevent foreign objects and/or dust getting in to the card reader.

Figure 2 - 1
Left View

1. Card Reader

Touchpad and Buttons/Mouse

The Touchpad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The Touchpad buttons function in much the same way as a two-button mouse.

Touchpad Sensitivity

Note that the Touchpad has a defined valid operational area of sensitivity indicated within the red area of the illustration below (i.e. 1mm from the top, 2.19mm from the left/right sides and 5.25mm from the button area of the touchpad).

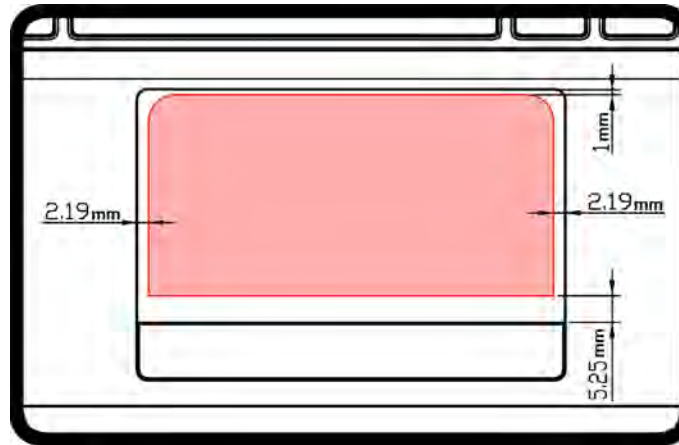

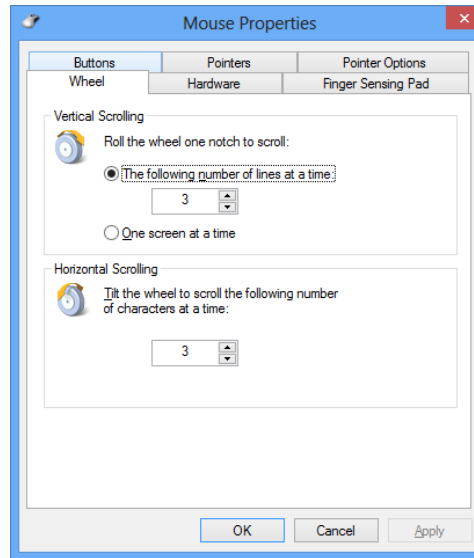
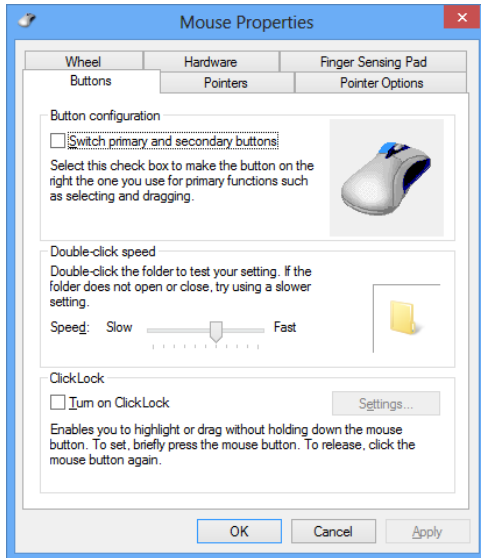



Figure 2 - 2
Touchpad Area of Sensitivity

Once you have installed the Touchpad driver (see *“TouchPad” on page 4 - 6*) you can configure the functions by double-clicking the Touchpad driver icon  in the notification area of the **Desktop** taskbar, or from the **Mouse** control panel in **Windows**. You may then configure the Touchpad tapping, buttons, scrolling (see sidebar), pointer motion and sensitivity options to your preferences.



Tray Icon

Make sure that the Touchpad driver icon  in the notification area of the **Desktop** taskbar.

Go to the control panel (**Mouse** control panel in **Windows**), click **Finger Sensing Pad** (tab), click **Tray Icon** and then make sure **Show Tray Icon** is clicked.

Figure 2 - 3
Mouse Properties



Configuration

Click **Defaults** to restore all the factory settings.

Press **OK** to save the changes and close the configurator.

Click **Apply** to save changes but remain in the configurator.

Finger Sensing Pad Configurator

The **Finger Sensing Pad Configurator** allows you to use a configure the settings for the Finger Sensing Pad device and software. The left pane in the control panel contains all the configurable items, and you can click the “+” to expand the menu selections.

1. Go to the **Control Panel**.
2. Click **Mouse (Hardware and Sound)**.
3. Click **Finger Sensing Pad** (tab) and click **Configure**.
4. Use the menu tree on the left to access the user configurable settings.

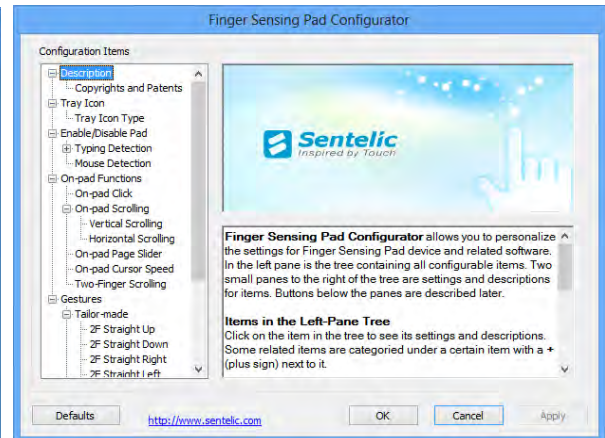
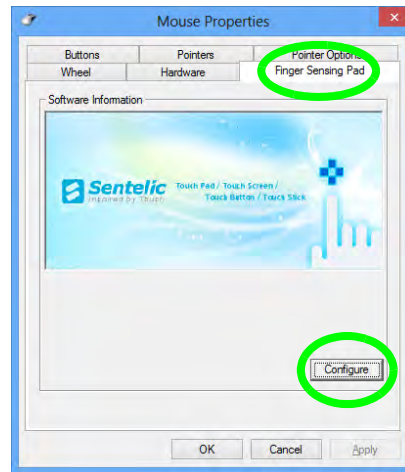


Figure 2 - 4
Finger Sensing
Pad Configurator

Disabling the Touchpad

If you need to disable the Touchpad for any reason (e.g. you may find that when using the computer's internal keyboard you accidentally trigger the Touchpad when resting your wrists or palms on it) you can do so by using **Fn + F1** key combination.

You can also set the system to automatically disable the internal Touchpad when an external USB pointing device (e.g. a USB mouse) is attached, or while you are typing (see over).

1. Go to the **Mouse** control panel and click to select **Finger Sensing Pad** (tab).
2. Click to place a tick in the "**Disable pad while external mouse is plugged in**" box.
3. Click **OK** to save the setting.

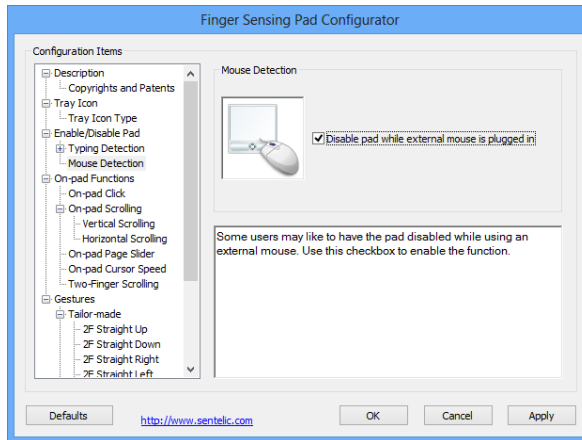


Figure 2 - 5
Mouse Detection

You can also enable **Typing Detection** to disable the pad while you are typing. The pad will be disabled while typing is detected, and will be reactivated after a set interval of time when typing is not detected. You can use the slider to adjust the reactivation time for an appropriate interval.


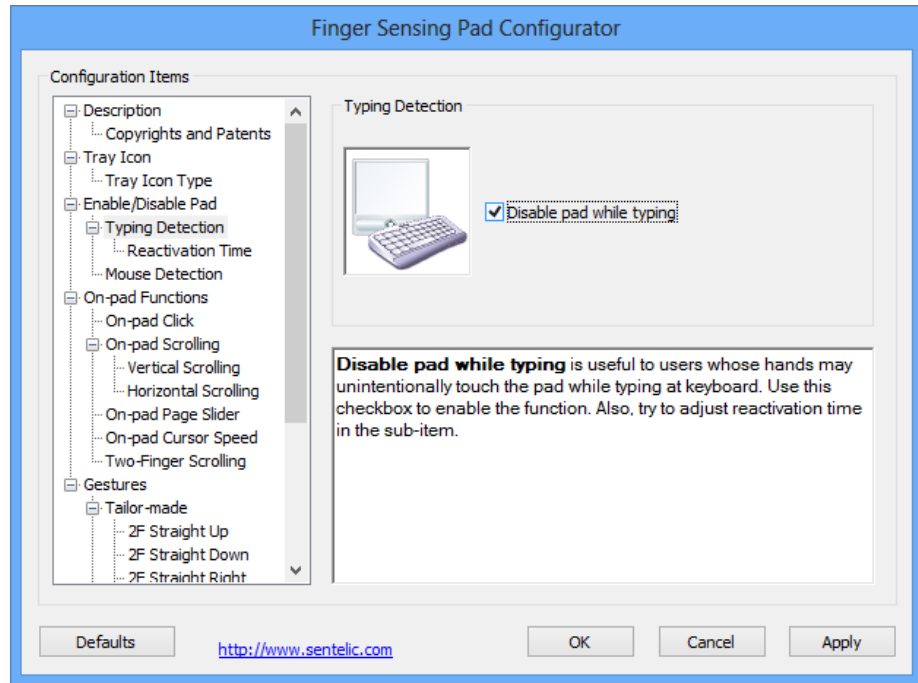


Figure 2 - 6
Disable Pad While Typing

On-pad Functions

Put a tick in the appropriate box to enable the function.

- **On-pad Click** - The same function as a left mouse click.
- **Vertical/Horizontal Scrolling** - This will enable sensing zones on the pad to allow you to touch to enable scrolling.
- **On-pad Click Page Slider** - This will enable sensing zones on the pad to allow you to touch to enable sliding up and down the pad.
- **On-pad Cursor Speed** - Use the slider to adjust the pad pointer speed.
- **Two Finger Scrolling** - You can enable/disable **reverse** two-finger scrolling (see below) from this item.

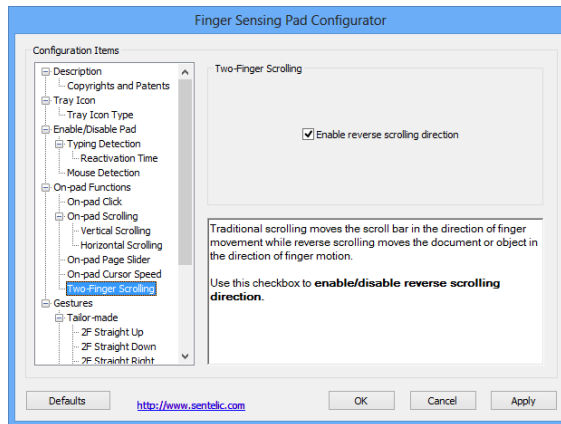

Traditional or Reverse Scrolling

With **traditional scrolling**, when you want to scroll up a web page, you put fingers on the pad and then move upwards. When you want to scroll down, you move your fingers down.

Reverse scrolling reverses the process; to make a webpage scroll down, you have to move fingers up on the pad, and to scroll up you move your fingers down.

Figure 2 - 7
Enable Reverse Scrolling Direction



Play Video

You can get a clearer view of the gestures involved by clicking the **Play Video** option for each gesture item.

Gestures

Click **Gestures** and make sure that the **Enable Gestures** tickbox is clicked. Double-click **Gestures** and then double-click **Tailor-made or Applications** to open the sub-menu. You can enable/disable and configure any of the **Tailor-made** gestures from these submenus.

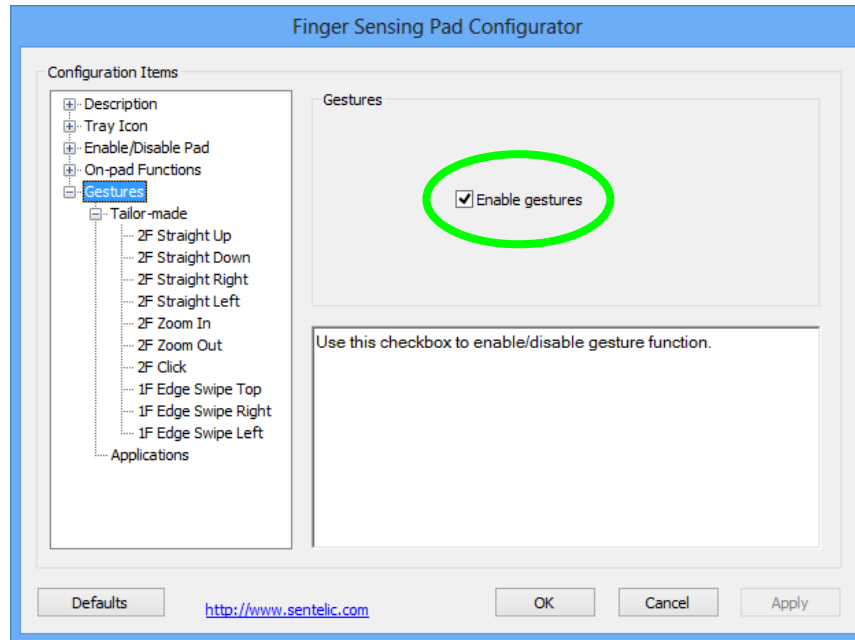


Figure 2 - 8
Finger Sensing Pad - Gestures

- **Two Fingers Straight Up/Down** - Place two fingers side by side on the pad, slightly apart. Slide the fingers upwards/downwards in a continuous motion.



Figure 2 - 9
**2F Straight Up/
Down**

- **Two Fingers Straight Right/Left** - Place two fingers side by side on the pad, slightly apart. Slide the fingers right/left in a continuous motion.



Figure 2 - 10
**2F Straight Right/
Left**

- **Two Fingers Zoom In/Out** - Place two fingers side by side on the pad, slightly apart. Slide the fingers apart in a continuous motion to zoom in, or slide the fingers closer together to zoom out.



Figure 2 - 11
2F Zoom In/Out

- **Two Fingers Click** - Tap the pad with two slightly separated fingers. This simulates the use of a middle mouse button often used in the most common internet browsers.

Figure 2 - 12
2F Click



- **One Finger Edge Swipe Top** - Place a single finger on the top edge of the pad and slide the finger downwards onto the pad. This is used to open the **App** bar in the **Windows Start menu** (not the desktop).

Figure 2 - 13
1F Edge Swipe Top



- **One Finger Edge Swipe Right** - Place a single finger on the right edge of the pad and slide the finger to the left onto the pad. This is used to open the **Charms** bar.



Figure 2 - 14
**1F Edge Swipe
Right**

- **One Finger Edge Swipe Left** - Place a single finger on the left edge of the pad and slide the finger to the right onto the pad. This is used to switch to the last used application.

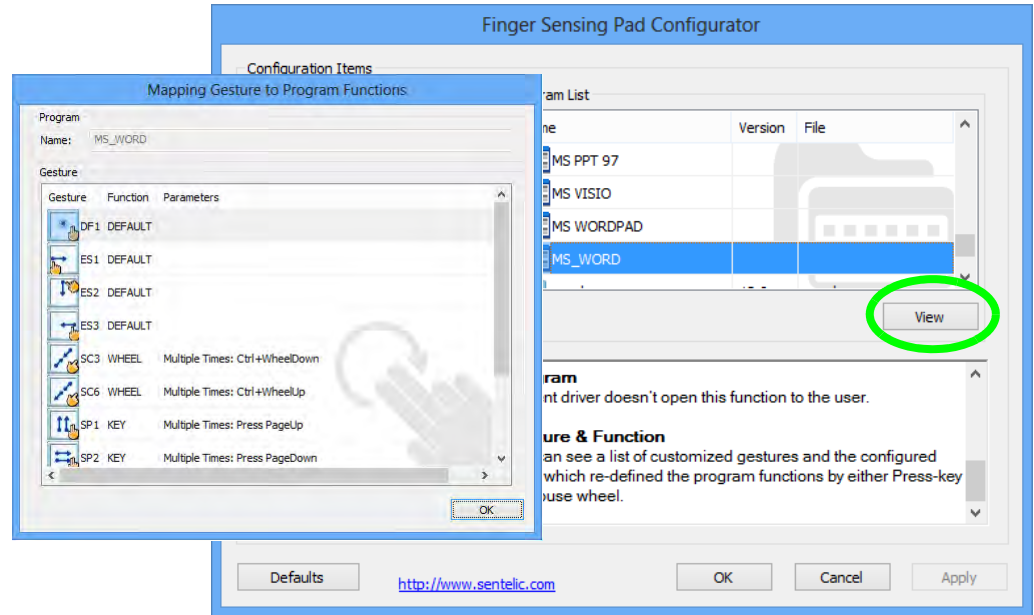


Figure 2 - 15
1F Edge Swipe Left


Applications

A number of programs/applications support gestures which trigger functions within the program. The **Program List** displays the programs/applications supporting these functions, and you can use the scroll bar to the right to scroll up/down the list. Click to select the program/application and click **View** (or just double-click) to see the gestures supported.


Figure 2 - 16
Applications




Audio Features

You can configure the audio options on your computer from the **Sound** control panel in *Windows*, from the **HD VDeck** icon on the desktop or **VIA HD Audio Deck** control panel  [VIA HD Audio Deck](#) .

The volume may also be adjusted by means of the **Fn + F5/F6** key combination.

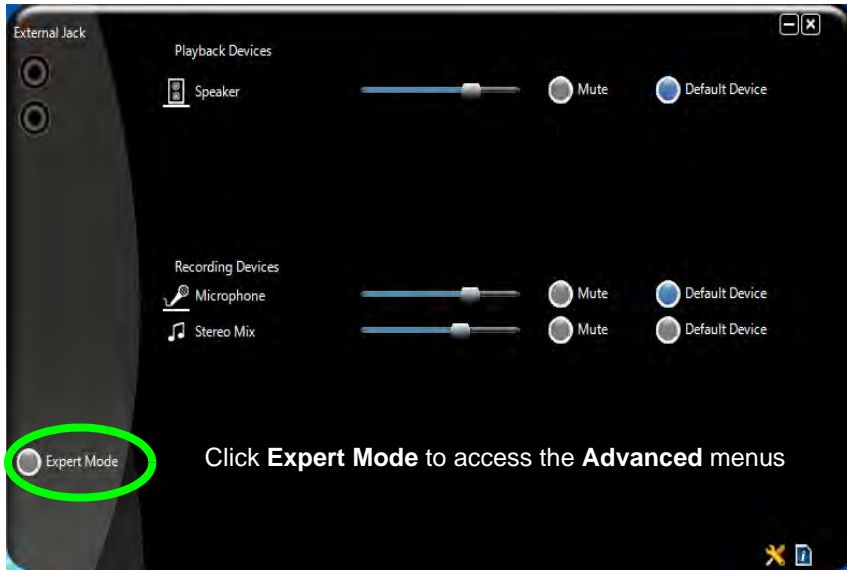



Sound Volume Adjustment

The volume level is set using the volume control within *Windows* (and the volume function keys on the computer). Click the volume icon in the **Desktop** taskbar to check the setting.




Figure 2 - 17
VIA HD Audio Deck



Syncing Left & Right Volume Balance

If you wish to adjust the left and right channel volume levels separately, you will need to adjust this from the **VIA HD Audio Deck in Expert Mode**.

Click **Speaker** in **VIA HD Audio Deck** (in Expert Mode) and click the **Sync Left and Right volume** button (see left). You can then adjust the volume sliders independently (this setting also controls the **Balance** setting in the Windows Sound control panel).

Expert Mode will allow you to access more advanced configuration menus for **Speaker, Microphone and Stereo Mix**.

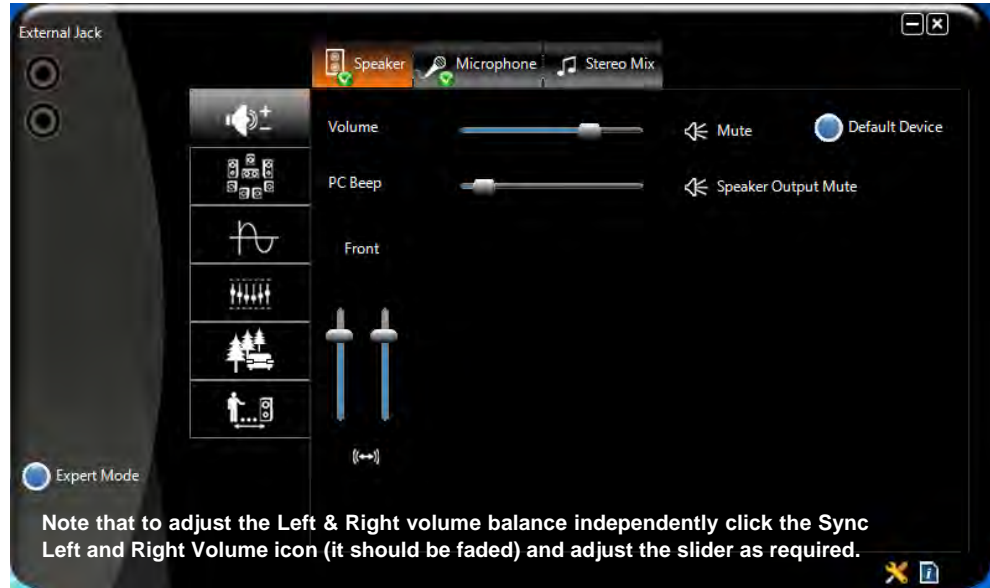


Figure 2 - 18
VIA HD Audio Deck
(Expert Mode)

Chapter 3: Power Management

Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the monitor and hard disk drive) or the whole system. This chapter covers:

- The Power Sources
- Turning On the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Battery Information

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.



OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.



Forced Off

If the system “hangs”, and the **Ctrl + Alt + Del** key combination doesn’t work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components.

1. Attach the AC/DC adapter to the DC-in jack on the left of the computer.
2. Plug the AC power cord into an outlet, and then connect the AC power cord to the AC/DC adapter.
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn “On”.

Battery


The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *“Battery FAQ” on page 3 - 17*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *“Battery Information” on page 3 - 13*.

Turning On the Computer


Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.

When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options (Hardware and Sound)** in the *Windows* control panel to configure this feature.



Power Button as Stand by or Hibernate Button

You can use the OS's "Power Options" control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS's documentation, or "[Configuring the Power Buttons](#)" on page 3 - 8 for details).



Shut Down

Note that you should always shut your computer down by choosing the **Shut Down** command from the **Power Menu** in the **Settings** menu in the *Windows 8 Charms Bar*.

This will help prevent hard disk or system problems. If you want to add **Hibernate/Sleep** to the **Power Menu** see "[Adding Hibernate/Sleep to the Power Menu](#)" on page 3 - 9.

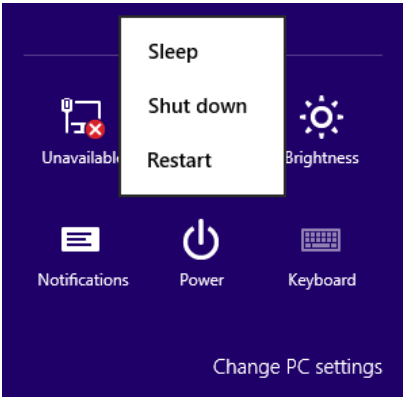


Figure 3 - 1
Power Menu
(Settings - Charms Bar)



Resuming Operation

See [Table 3 - 1, on page 3 - 10](#) for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.


Figure 3 - 2
Power Plan Advanced Settings

Power Plans

The computer can be configured to conserve power by means of **power plans**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click *Change plan settings* and then click *Change advanced power settings* to access further configuration options in **Advanced Settings**.

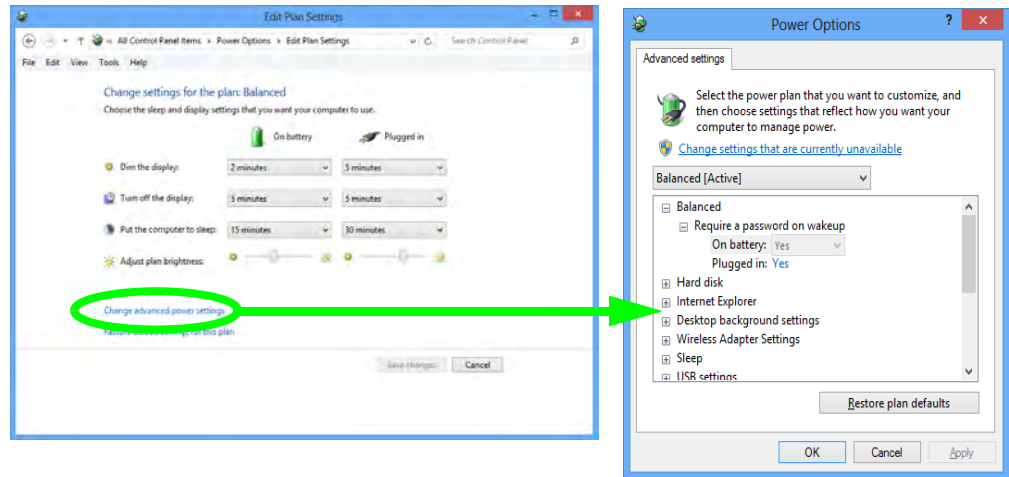

Each **Windows power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

Click to Show/Hide additional power plans


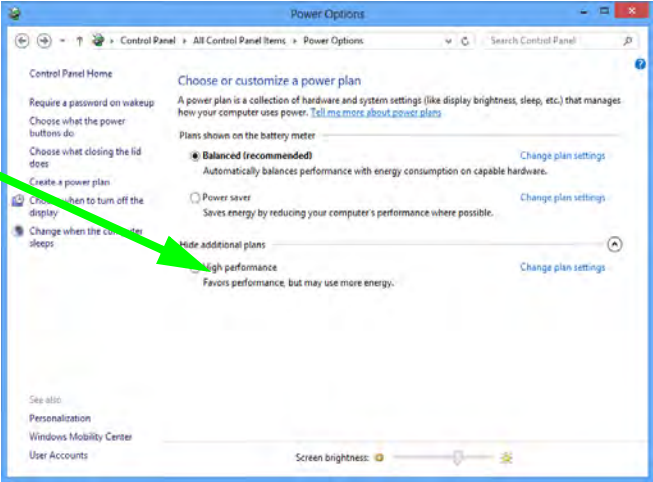


Figure 3 - 3 Power Plans

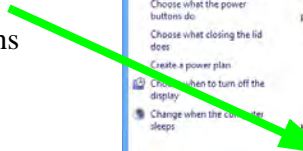

Wake On LAN Support (Windows 8)

Wake-On-LAN is only supported from **Sleep** or **Hibernate** states in *Windows 8*.

If you require your computer to wake up from network activity in *Windows 8* then make sure that the computer is either in **Sleep** or **Hibernate**.

Wake-On-LAN is not supported from Shutdown states in *Windows 8*.

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. *Win 7* uses the **Sleep**, **Hibernate** and **Shut Down** power-saving states.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

To add **Sleep** to the **Power Menu** see *“Adding Hibernate/Sleep to the Power Menu” on page 3 - 9*.

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery. To add **Hibernate** to the **Power Menu** see *“Adding Hibernate/Sleep to the Power Menu” on page 3 - 9.*

Shut down

You should **Shut down** the computer if you plan to install new hardware (don't forget to remove the battery and follow all the safety instructions in **Chapter 6**), plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.

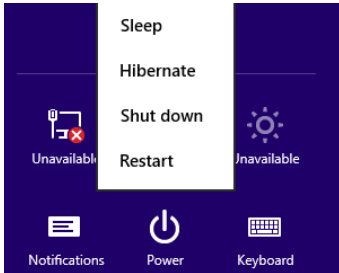


Figure 3 - 4
Power Menu



Password Protection


It is recommended that you enable a password on wake up in order to protect your data.

However you can disable this setting from the **Power Options** menu by clicking **Require a password on wakeup** in the left menu, and selecting the options (click **Change settings that are currently unavailable**).

Figure 3 - 5
Power Options
Define Power Buttons


Configuring the Power Buttons

The power/sleep button (**Fn + F4** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

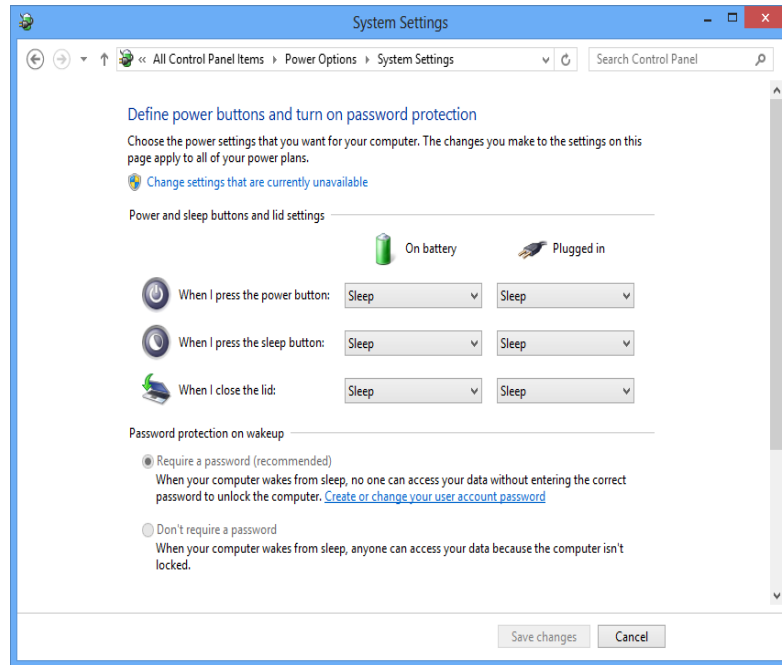

Adding Hibernate/Sleep to the Power Menu

Add **Hibernate/Sleep** to the **Power Menu** as follows.

1. Go to the **Power Options (Hardware and Sound)** control panel (see page **1 - 24**).
2. Click **“Change settings that are currently unavailable”**  [Change settings that are currently unavailable](#) .
3. Click **Choose what the power buttons do**.
4. Click to put a tick in the **Hibernate/Sleep** box under **Shutdown settings**.
5. Click **Save Changes** and close the control panel.

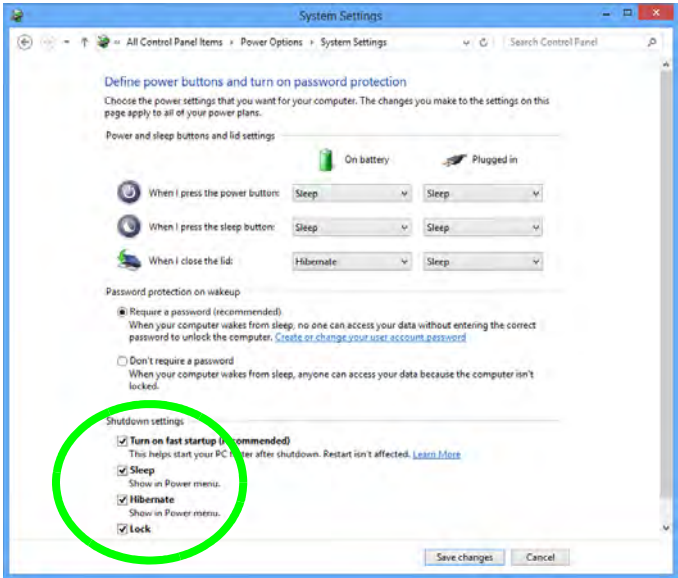



Figure 3 - 6
Power Options
Define Power
Buttons - Shutdown
Settings

Table 3 - 1
Resuming Operation

Resuming Operation

You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F4** key combo).

Power Status	Icon  Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F4 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad



Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.



Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).

Power Conservation Modes

This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity. Adjust **Power Conservation Modes** from the **Control Center**:

- 1. Press the **Fn + Esc** key combination to toggle the **Control Center** on/off.
- 2. Click either the **Performance**, **Balanced** or **Energy Star** button.
- 3. Click in a blank area of the icon or press a key on the keyboard to exit **Power Conservation Mode** without making any changes.



Power Conservation Modes

The **Energy Star** setting will result in maximum power saving, but with the possible loss of some performance.

Setting the mode to **Balance** will give power saving matched with performance.


Performance will give optimum computer performance but with less power conservation.

Figure 3 - 7
Control Center

Ctrl + Alt + Delete Key Combination

You can use the **CTRL + ALT + DEL** key combination from almost any of the *Windows 8* interfaces/Apps to bring up a full-screen displaying **Lock, Switch User, Log off, Change a password** and **Task Manager** options. If you click the **Power** icon in the lower right corner of the screen a power management option menu appears to display **Sleep, Shut down, and Restart**.

Figure 3 - 8
Ctrl + Alt + Delete
Menu

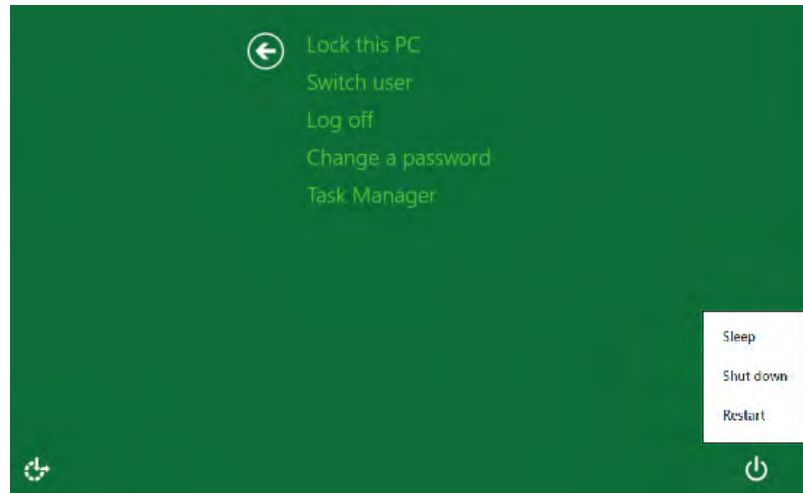


To fully control all the power options (including Hibernate mode) go to the **Power Options** control panel and configure the power button, sleep button and lid to perform the function selected.


Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure 3 - 3 on page 3 - 5*).

Click the battery icon  in the notification area to see the current battery level and charge status.

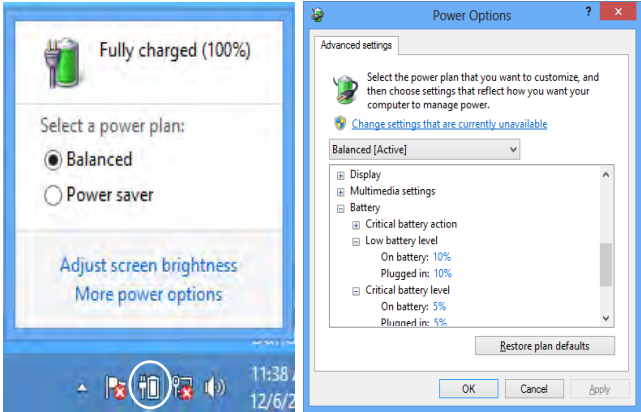


Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

Figure 3 - 9
Battery Icon (Notification Area) & Battery Advanced Settings



Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

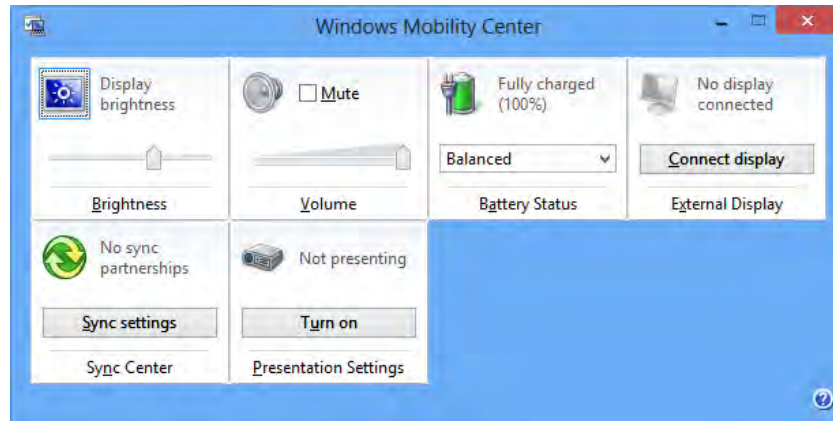


Figure 3 - 10
Windows Mobility Center

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days.**

We recommend that you do not remove the battery yourself (see sidebar).

New Battery

Always completely discharge, then fully charge, a new battery (see *“Battery FAQ” on page 3 - 17* for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. Refer to *“LED Indicators” on page 1 - 7* for information on the battery charge status, and to *“Battery Information” on page 3 - 13* for more information on how to maintain and properly recharge the battery pack.



Bottom Cover Removal Warning

Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk for any reason, please contact your distributor/supplier for further information.



Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances
- DO NOT expose the battery to fire or high temperatures, it may explode
- DO NOT connect the metal terminals (+, -) to each other



Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your distributor/supplier. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

1. Save and close all files and applications.
2. **Create a power plan** for discharging the battery and set all the options to **Never**.



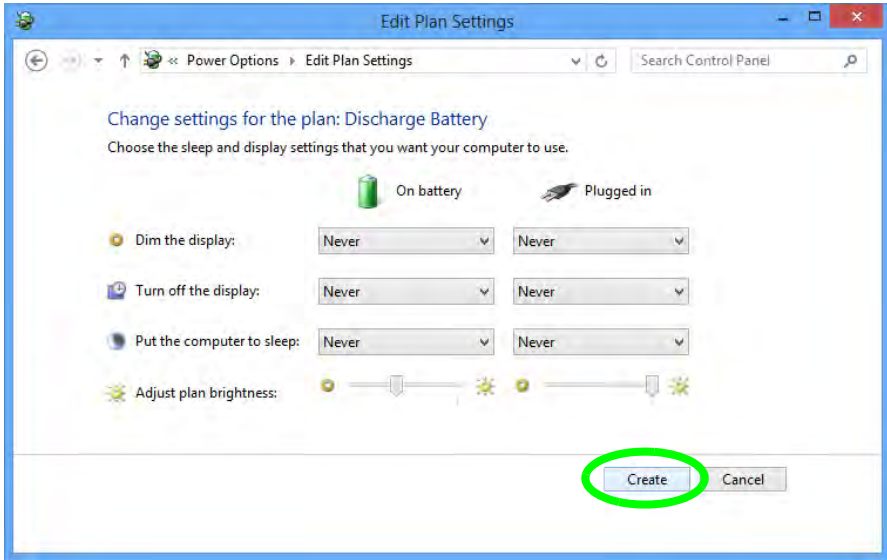


Figure 3 - 11
Power Plan Create

Power Management

3. Click **Change plan settings** (after creating it) and click **Change plan settings > Change advanced power settings**.

Figure 3 - 12
Change Plan
Settings / Change
Advanced Power
Settings

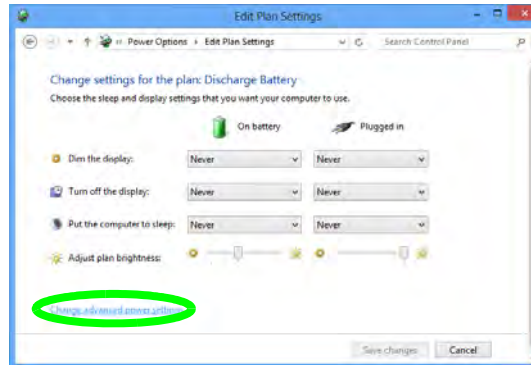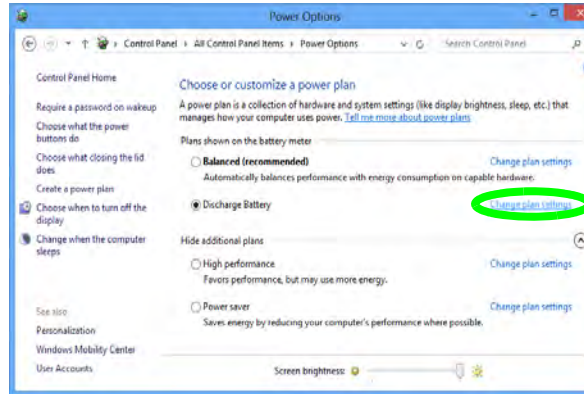

- 4. Scroll down to **Battery** and click **+** to expand the battery options.
- 5. Choose the options below (click **Yes** if a warning appears):

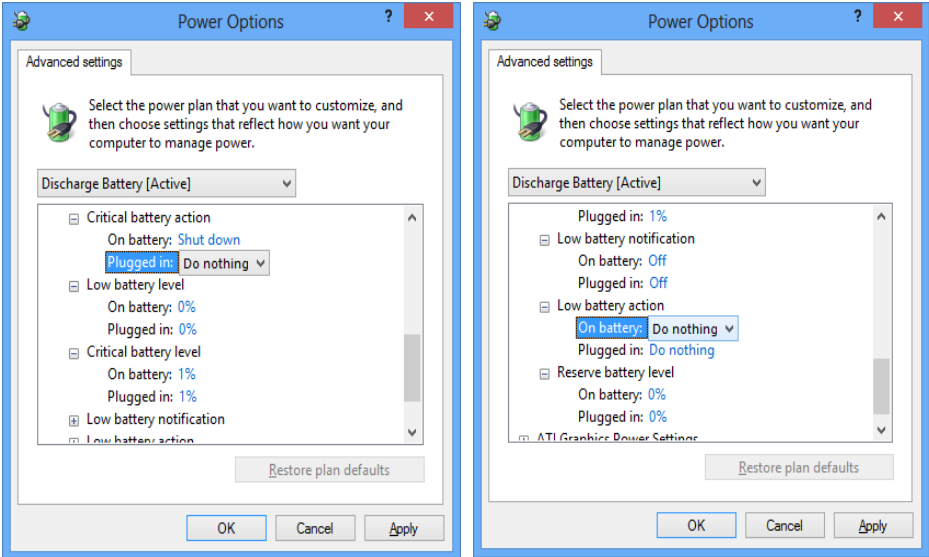


Figure 3 - 13
Power Options
Advanced Settings -
Battery

- Low battery levels = 0%
- Critical battery Levels = 1%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

How do I fully charge the battery?

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?

Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities.

What to Install

You will need to attach an external DVD drive to install the drivers from the *Device Drivers & Utilities + User's Manual* disc. The disc contains the drivers and utilities necessary for the proper operation of the computer. *Table 4 - 1, on page 4 - 3* lists what you need to install and **it is very important that the drivers are installed in the order indicated.**

The procedures for installing drivers for the **PC Camera, Wireless LAN, Bluetooth & WLAN Combo, Trusted Platform (security)** and **3G** modules are provided in *"Modules & Options" on page 7 - 1.*



Driver Installation & Power

When installing drivers make sure your computer is powered by the AC/DC adapter connected to a working power source. Some drivers draw a significant amount of power during the installation procedure, and if the remaining battery capacity is not adequate this may cause the system to shut down and cause system problems (note that there is no safety issue involved here, and the battery will be rechargeable within 1 minute).

Driver Installation

Insert the *Device Drivers & Utilities + User's Manual* disc into an attached optical (DVD) drive and click **Install Drivers/Option Drivers** (button).

4

Follow the instructions to install the driver. Alternatively click **Start**, navigate (**Browse.**) to the executable file and then follow the manual setup instructions.



Figure 4 - 1 - Drivers Installer Screen 1

1. Check the driver installation order from **Table , on page 4 - 3** (the drivers must be installed in this order) which is the same as that listed in the **Drivers Installer** menu below.
2. Click to select the driver you wish to install, (you should note down the drivers as you install them).
3. Follow the instructions for each individual driver installation procedure as listed on the following pages.

Note: If you need to reinstall any driver, you should uninstall the driver first.

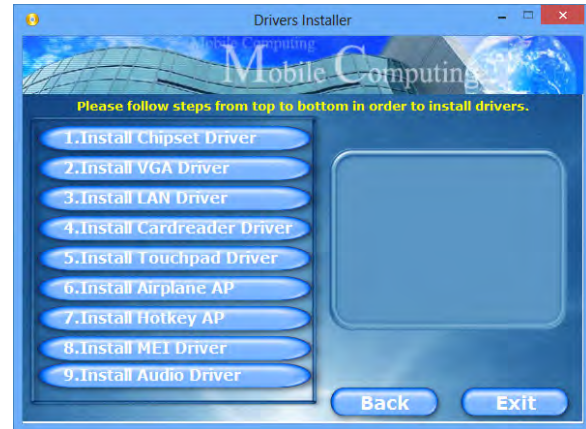


Figure 4 - 2 - Drivers Installer Screen 2

Win 8 System Driver	Page #	Optional	Page #
<i>Chipset</i>	<i>Page 4 - 6</i>	<i>PC Camera Module</i> (no driver installation required)	<i>Page 7 - 2</i>
<i>Video (VGA)</i>	<i>Page 4 - 6</i>	<i>Wireless LAN Module</i>	<i>Page 7 - 9</i>
<i>LAN</i>	<i>Page 4 - 6</i>	<i>Bluetooth & WLAN Combo Module</i>	<i>Page 7 - 17</i>
<i>Card Reader</i>	<i>Page 4 - 6</i>	<i>Trusted Platform (Security) Module</i>	<i>Page 7 - 23</i>
<i>TouchPad</i>	<i>Page 4 - 6</i>	<i>3G Module</i> (no driver installation required)	<i>Page 7 - 37</i>
<i>Airplane</i>	<i>Page 4 - 6</i>		
<i>Hot Key</i>	<i>Page 4 - 6</i>		
<i>MEI Driver</i>	<i>Page 4 - 7</i>		
<i>Audio</i>	<i>Page 4 - 7</i>		

Table 4 - 1- Driver Installation

All drivers provided are for the Windows 8 operating system.

Note that you need to install both the WLAN & Bluetooth drivers for Intel and 3rd party WLAN & Bluetooth Combo modules.

Manual Driver Installation

Click **Browse CD/DVD** (button) in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

4

Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft). See *“Windows Update” on page 4 - 8*.

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver. To do this go to the **Control Panel** in the *Windows OS* and double-click the **Programs and Features** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Go to the **Control Panel**).
2. Double-click **Device Manager (Hardware and Sound > Devices and Printers > Device Manager)**.
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click “+” to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

User Account Control

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue** or **Allow**, and follow the installation procedure as directed.

Windows Security Message

If you receive a *Windows* security message as part of the driver installation process. Just click “*Install this driver software anyway*” or “*Install*” to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of *Windows* you are currently using. All the drivers provided will have already received certification for *Windows*.

New Hardware Found

If you see the message “**New Hardware Found**” during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.



Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

Make sure any modules (e.g. WLAN or Bluetooth) are **ON (i.e. the system is not in Airplane Mode)** before installing the appropriate driver.

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual* disc into your attached CD/DVD drive and click **Install Drivers** (button).

Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

Video (VGA)

1. Click **2.Install VGA Driver > Yes**.
2. Click **Next > Yes > Next > Next**.
3. Click **Finish** to restart the computer.

LAN

1. Click **3.Install LAN Driver > Yes**.
2. Click **Next > Install**.
3. Click **Finish**.

Card Reader

1. Click **4.Install Cardreader Driver > Yes**.
2. Click **Finish** to complete the installation.

TouchPad

1. Click **5.Install Touchpad Driver > Yes**.
2. Click **Next**.
3. Click **Finish > Restart Now** to restart the computer.

Airplane

1. Click **6.Install Airplane AP > Yes**.
2. Click **Next**.
3. Click **Finish** to restart the computer.

Hot Key

1. Click **7.Install Hotkey AP > Yes**.
2. Click **Next > Next**.
3. Click **Finish > Finish** to restart the computer.

MEI Driver

1. Click **8.Install MEI Driver > Yes.**
2. Click **Next > Yes > Next.**
3. Click **Finish.**

Audio

1. Click **9.Install Audio Driver > Yes.**
2. Click **Next.**
3. Click the button to agree to the license and click **Next.**
4. Click **Next > Next > Next.**
5. Click **Finish** to restart the computer.

Note that after installing the audio driver the system will not return to the *Drivers Installer* screen. To install any of the optional drivers listed overleaf, eject the *Device Drivers & Utilities + User's Manual* disc and then reinsert it (or double-click the disc icon in **My Computer**), and click *Option Drivers* (button) to access the optional driver menu.

(see over)

Windows Experience Index

After the drivers are installed follow this procedure to ensure an accurate rating from the *Windows Experience Index* (make sure the AC/DC adapter is plugged in):

1. Go to the **Control Panel**.
2. Click **Performance Information and Tools** (**System and Security** > **System** > **Windows Experience Index**).
3. Click “**Rate this computer/Refresh Now/Rerun the assessment**”.
4. The computer will take a few minutes to assess the system performance.
5. Close the control panel.



Windows Update

After installing all the drivers make sure you enable **Windows Update** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update** make sure you are **connected to the internet**:

1. Go to the **Control Panel**.
2. Click **Windows Update** (System and Security/ Security).
3. Click **Check for updates** (button).
4. The computer will now check for updates (you need to be connected to the internet).
5. Click **Install now** (button) to begin checking for the updates.
6. Click **Install updates** (button) to install the updates.

Optional Drivers

See the pages indicated overleaf for the driver installation procedures for any modules included in your purchase option.



Figure 4 - 3 - Drivers Installer - Option Drivers Menu

Chapter 5: BIOS Utilities

Overview

This chapter gives a brief introduction to the computer's built-in software:

If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in *Setup*. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your distributor/supplier.



BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.



BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Setup* and restore the *Previous Values* with <F2>, or *Optimized Defaults* with <F3>.

UEFI Boot & POST

When UEFI Boot is enabled, then the prompts to press **F2** or **F7** will **not appear**. However you can still press **F2** to enter the setup, or **F7** to choose the preferred boot device, if you press the key immediately the system boots up.

The Setup Utility

Each time you turn on the computer the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run *Setup*.

If there are no problems, the *Setup* prompt will disappear and the system will load the operating system. Once that starts, you can't get into *Setup* without rebooting.

The **Aptio Setup Utility** tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

To enter *Setup*, turn on the computer and press **F2** (give the system a few seconds to enter *Setup*). If the **Boot Logo** is enabled the **F2** on screen will be **highlighted** to illustrate that the system is processing the request during the **POST** (or press **F7** for boot options). If you get a "Keyboard Error", (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The *Setup* main menu will appear.

To see the boot options press **F7** and choose your preferred boot device.

Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized distributor/supplier as soon as possible.

Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) and you can then press **F7** (the **F7** on screen will be **highlighted** to illustrate that the system is processing the request) for boot options.

Press **F2** (give the system a few seconds to enter *Setup*; the **F2** on screen will be highlighted to illustrate that the system is processing the request) to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.



Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

Figure 5 - 1
Navigation Menu

Setup Screens

The following pages contain additional advice on portions of the *Setup*. Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to *Setup*.

Instructions on how to navigate each screen are in the box at the bottom right side of the screen.

```
→←: Select Screen  
↑↓: Select Item  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F3: Optimized Defaults  
F4: Save Changes & Exit  
ESC: Exit
```

If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the upper right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ► next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.

Main Menu

```

Aptio Setup Utility - Copyright (C) 2012 American Megatrends Inc.
Main  Advanced  Security  Boot  Exit

System Date          [Tue 02/27/2013]
System Time          [09:56:26]
Set the Date. Use Tab to
switch between Date elements.

▶ SATA Port 0 TOSHIBA MQ01AB (320.0GB)
▶ SATA Port 4 Not Present

Intel(R) Celeron(R) CPU 1037U @ 1.80GHz

System Memory:      640 KB
Extended Memory:   2048 MB (DDR3)

MB Series:          *****
BIOS Revision:     *****
KBC/EC firmware Revision: *****

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F3: Optimized Defaults
F4: Save Changes & Exit
ESC: Exit

Version ***** Copyright (C) 2012 American Megatrends, Inc.

```

Figure 5 - 2
Main Menu

System Time & Date (Main Menu)

The hour setting uses the 24-hour system (i.e., 00 = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

SATA Port # (Main Menu)

Pressing **Enter** opens the sub-menu to show the configuration of a optical Device/HDD on the computer's SATA Ports.


System/Extended Memory: (Main Menu)

This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

MB Series / BIOS Revision / KBC/EC firmware Revision

This item contains information on the BIOS version etc., and is not user configurable.

Advanced Menu

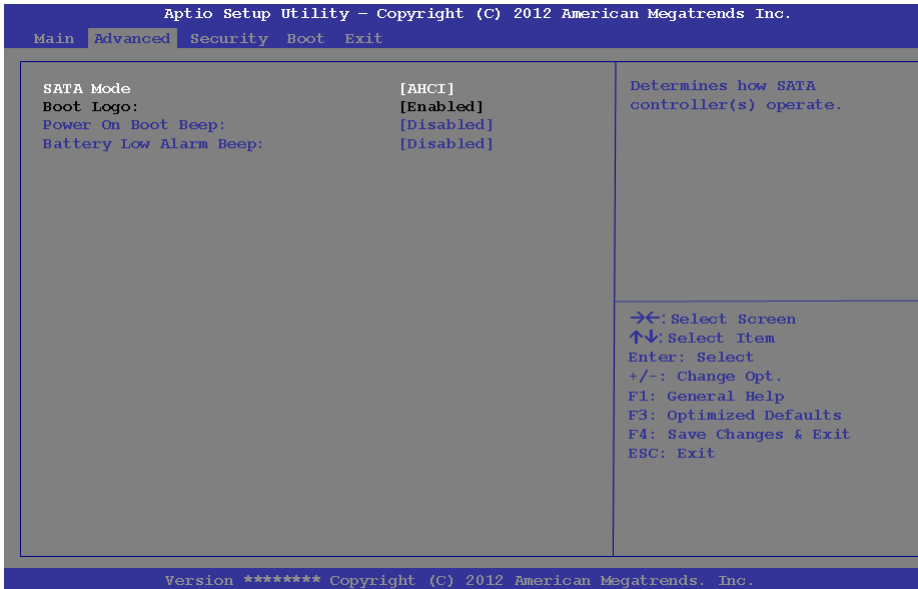

SATA Mode Selection

If you have installed the **Windows** operating system with either **IDE** or **AHCI** mode enabled, **DO NOT** disable the set mode (if you wish to disable the set mode you will need to reinstall the **Windows** OS).

5

Figure 5 - 3
Advanced Menu

SATA Mode (Advanced Menu)

You can configure SATA (Serial ATA) control to operate in **IDE** (native/compatible), **AHCI** (Advanced Host Controller Interface) modes from this menu. The **SATA Mode** should be set **BEFORE installing an operating system**, and after you have backed up all necessary files and data (see sidebar).

Boot Logo (Advanced Menu)

Use this menu item to enable/disable the **Boot Logo** screen at system startup. If you disable the **Boot Logo** you will not see the **F2 Enter Setup** or **F7 Boot Options** prompts on the screen, however you can still press these keys, while the boot screen is displayed, to perform the Enter Setup or Boot Option functions. If you have enabled **UEFI Boot** (see “*UEFI Boot (Boot Menu)*” on page 5 - 12) this option will not be editable.

Power On Boot Beep (Advanced Menu)

Use this menu item to enable/disable the beep as the computer starts up.

Battery Low Alarm Beep (Advanced Menu)

Use this menu item to enable/disable the battery low alarm beep.

Security Menu



Security Menu

The changes you make here affect the access to the Setup utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

Figure 5 - 4
Security Menu

Set Supervisor Password (Security Menu)

You can set a password for access to the **Aptio Setup Utility**. This will not affect access to the computer OS (only the **Aptio Setup Utility**). If you set a supervisor password you can then add a **user password** and **password on boot**.



Password Warning

If you set a boot password (Password on boot is “Enabled”), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Set User Password (Security Menu)

You can set a password for user mode access to the **Aptio Setup Utility**. This will not affect access to the computer OS, (only the *Setup* utility) unless you choose to set a **Password on Boot** (see below). Many menu items in the **Aptio Setup Utility** cannot be modified in user mode. **You can only set the user password after you have set the supervisor password.**

Password on boot (Security Menu)

Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If “*Enabled*” is selected, only users who enter a correct password can boot the system (**see the warning in the sidebar**). The default setting is “*Disabled*”.

Note: To **clear existing passwords** press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

Secure Boot (Security Menu)

Secure Boot prevents unauthorized operating systems and software from loading during the startup process. **Secure Boot** is available as a menu option if you have **Windows 8** set as your operating system, and have **enabled UEFI Boot** (see “**UEFI Boot (Boot Menu)**” on page 5 - 12). Enabling Secure Boot will bring up the **Secure Boot Mode** menu to enable you to configure Secure Boot as **Standard** (with a fixed secure boot policy), or **Custom** (which enables you to make changes to the **Image Execution Policy** and **Key Management** database).

Boot Menu

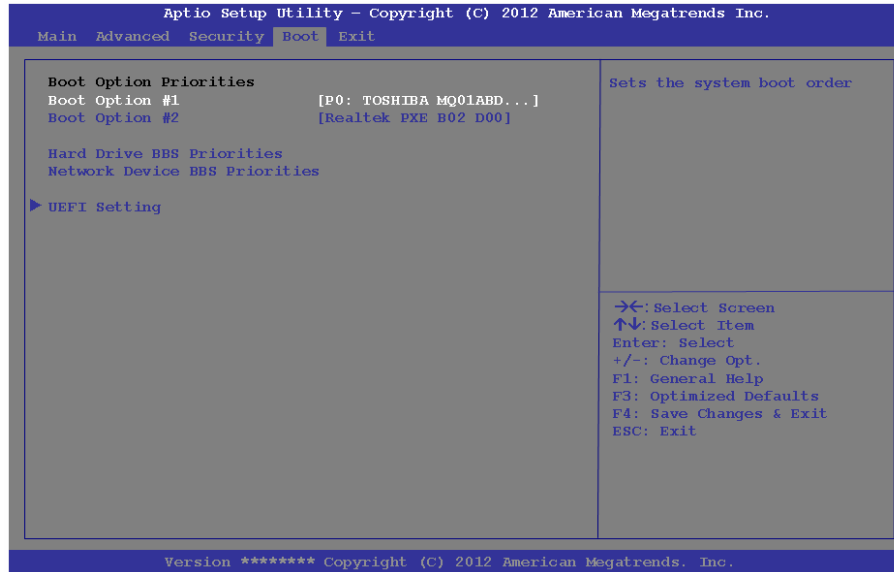


Figure 5 - 5
Boot Menu

When you turn the computer on it will look for an operating system (e.g. **Windows 7**) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot Option Priorities**. Press Enter to select the Boot Option # device menu, use the arrow keys to select a device, and press Enter again to confirm the selection.



BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

Boot Option Priorities (Boot Menu)

Use the arrow keys to move up and down the menu, and press Enter to select a device from the **Boot Option #** list. You can go to either **CD/DVD ROM Drive Priorities** or **Hard Drive BBS Priorities** and use the **+** and **-** keys to move the device's boot priority up and down the list (the selected device will be highlighted in white).

UEFI Boot (Boot Menu)

Enable/disable UEFI Boot from this menu. The Unified Extensible Firmware Interface (UEFI) specification provides a clean interface between operating systems and platform firmware at boot time. In contrast to BIOS, UEFI defines a set of standard boot and runtime services. The *Network Stack* item will be enabled as an option under UEFI Boot.

Exit Menu

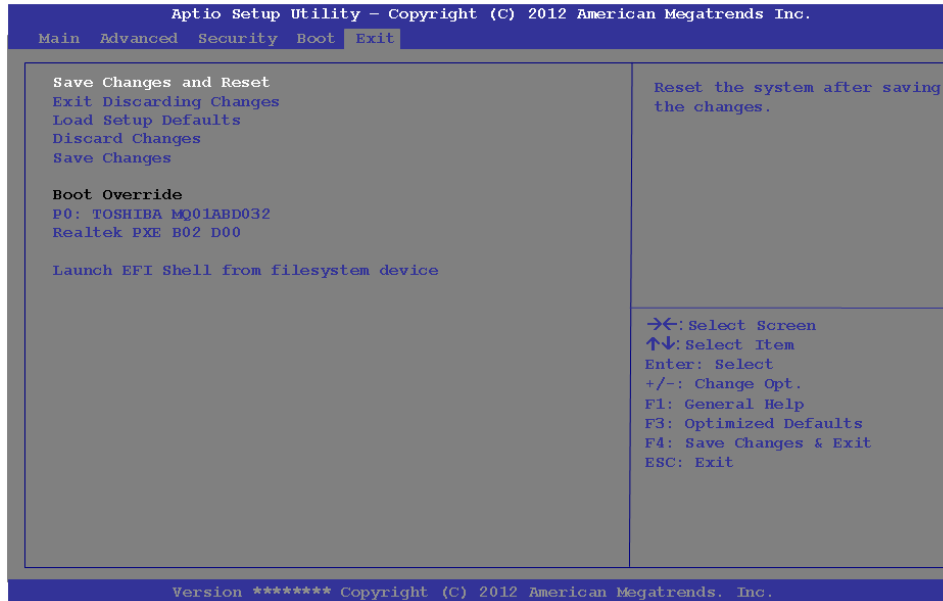


Figure 5 - 6
Exit Menu

Click ***Save Changes and Reset*** to save all changes made. Choosing to ***Discard Changes***, or ***Exit Discarding Changes***, will wipe out any changes you have made to the ***Setup***. You can also choose ***Load Setup Defaults*** to restore the original ***Setup*** defaults and return the ***Setup*** to its original state, and erase any previous changes you have made in a previous session.

Chapter 6: Modules & Options

Overview

This chapter contains information on the following modules, which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

- PC Camera Module
- Wireless LAN Module
- Bluetooth & WLAN Combo Module
- Trusted Platform (Security) Module
- 3G Module



Important Notice

If your purchase option includes both Wireless LAN and 3G modules, then the appropriate antennas will be installed. Note that In order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.

Important Notice - 3G & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3G module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3G module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.



Wireless Device Operation Aboard Aircraft


The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **WLAN & Bluetooth module(s)** are **OFF** if you are using the computer aboard aircraft by putting the system in to **Airplane Mode** (see [Table 1 - 4, on page 1 - 10](#)).

PC Camera Module

When the PC Camera application is run the LED indicator (see [2 Figure 1 - 2 on page 1 - 6](#)) to the left of the camera will be illuminated in **red** for **1.0HD camera only** (this LED will not function with the 300K pixel camera). Note that you need to use the **Camera** app in *Windows 8* to take pictures and capture video. Use the **Fn + F10** key combination (see *“Function/Hot Key Indicators” on page 1 - 10*) to toggle power to the PC Camera module.

PC Camera Audio Setup

If you want to capture video & **audio** with your camera, it is necessary to setup the audio recording options in *Windows*.

1. Go to the **Control Panel**.
2. Click **Sound**  (**Hardware and Sound**) and click **Recording** (tab).
3. Right-click hold and release **Microphone** (Realtek High Definition Audio) and make sure the item is not disabled.
4. Double-click **Microphone** (or select **Properties** from the right-click menu).
5. Click **Levels** (tab), and adjust the **Microphone** and **Microphone Boost** sliders to the level required.
6. Click **OK** and close the control panels.

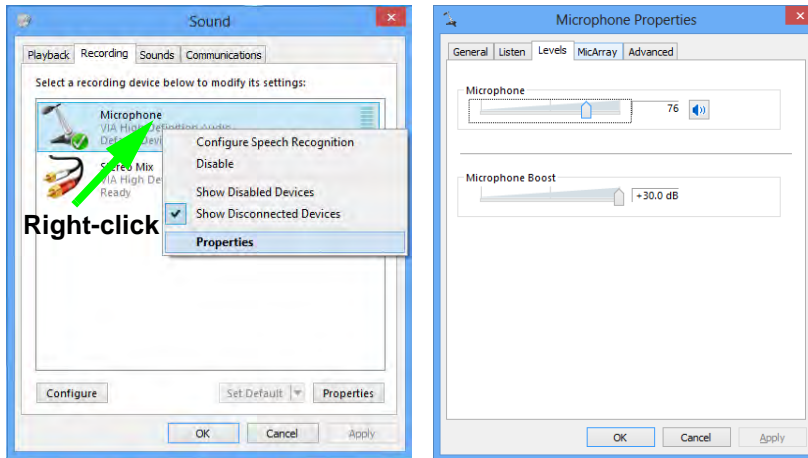


Figure 6 - 1
**Audio Setup for PC
 Camera**

Camera App


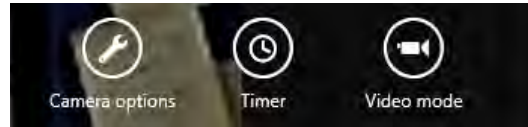

1. Make sure the camera is powered on (use the **Fn + F10** key combination to toggle power to the camera module).
2. Click the **Camera** app icon in the **Start screen** to run the **Camera** app .
3. The camera interface is a translucent app bar with three buttons.

Figure 6 - 2
Camera App Bar




- **Camera options:** Click this button to open a window with three main options:


Figure 6 - 3
Camera Options


Camera Options

- **Resolution** (determined by the camera spec)
- **Audio device** (select microphone to use)
- **Video Stabilization** (a toggle based on spec of the camera)

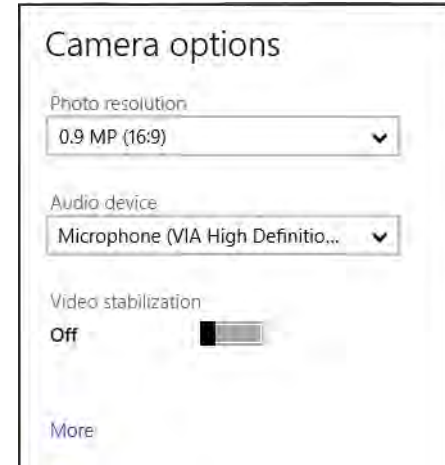

You can also click on **More** to adjust **Brightness**, **Contrast** and **Flicker** (if you find that the video screen in the camera program is flickering, you can try to adjust the setting here).

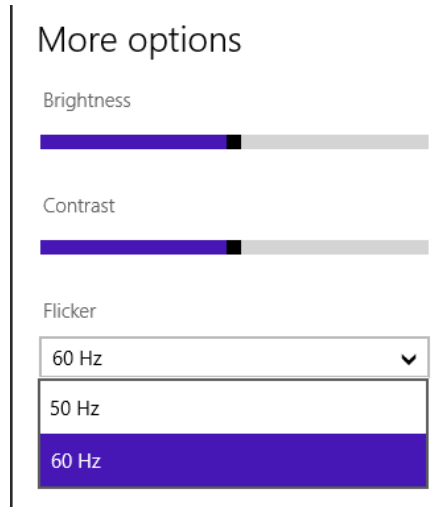



Eliminating Screen Flicker


If you find that the video screen in the camera program is flickering, you can try to adjust the setting in **Flicker** under **More Options**.

6

Figure 6 - 4
More Camera Options


- **Timer:** This button will start a three second countdown before the system takes a still photo or video recording starts.
- **Video Mode:** This button toggles between still photo mode (transparent button ) and video recording mode (highlighted white button ) .

Taking Pictures/Capturing Video

1. Make sure the camera is powered on (use the **Fn + F10** key combination to toggle power to the camera module).
2. Click the **Camera** app icon in the **Start screen** to run the **Camera** app .
3. Click to select the timer if you require a countdown before capture.
4. Click to select either photo or video modes.
5. Click in the main window to take a picture or start video capture (if video capture begins a timer will appear in the bottom right corner of the screen).
6. To stop video capture click the main window again.
7. Captured photos and videos will be saved to a **Camera Roll** folder within the **Picture** folder in **Libraries**.

6

Figure 6 - 5
Libraries - Pictures

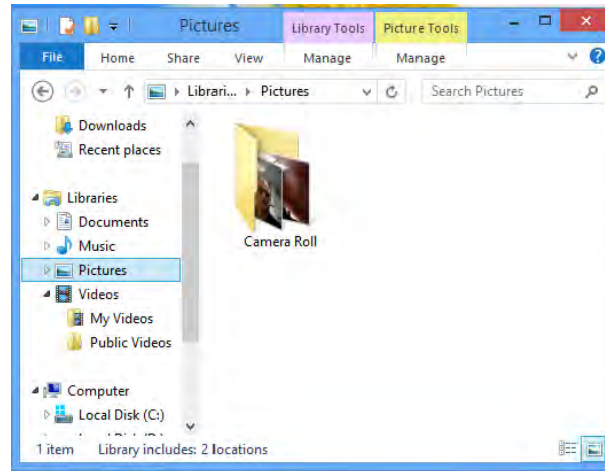

8. A scroll arrow will appear on the left side of the screen after any pictures/videos have been captured.
9. Click the arrows (on either side of the screen) to browse through the captured photos/video, and back to the Camera app.
10. Clicking on a captured photo will bring up an app bar with **Crop** and **Delete** buttons.



Figure 6 - 6
Crop & Delete
Buttons
(for Still Photos)

11. Use the handles to **Crop** any captured picture, and click **OK** to save the changes made.
12. Click **Delete** to delete any captured photo (note that no prompt will appear to confirm the delete).
13. Right-click any captured video to bring up app bar with **Trim** and **Delete** buttons.




Figure 6 - 7
Trim & Delete
Buttons
(for Video Files)

14. Use the buttons at either end of the slider to adjust the video length and click **OK** to save the changes made.

Reducing Video File Size

Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select **Properties**) and the remaining free space on your hard disk (go to **My Computer**, right-click the hard disk, and select **Properties**). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

Note that the *Windows 8* system requires a minimum of **16GB (32-bit)** or **20GB (64-bit)** of free space on the **C: drive** system partition. In order to prevent system problems it is recommended that you move any large sized captured video file to a location other than the **C: drive**, or reduce video resolution (see below).

To Reduce Video Resolution Output Size:

1. Run the **Camera** app.
2. Click the **Video resolution** dropdown and select a lower resolution size in order to reduce the captured file size.
3. Note that reducing video resolution will affect the video quality.

Wireless LAN Module

If you have included an **Intel®** or **3rd Party WLAN** module in your purchase option make sure that the module is on (i.e. the system is not in **Airplane Mode**) before installing the driver.

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 3*.

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **WLAN & Bluetooth module(s)** are **OFF** if you are using the computer aboard aircraft by putting the system in to **Airplane Mode** (see *Table 1 - 3, on page 1 - 10*).

3rd Party 802.11b/g/n Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Choose the language you prefer and click **Next**.
5. Click **Next**.
6. Click **Finish** to restart the computer.
7. The operating system is the default setting for Wireless LAN control in *Windows* (see page [6 - 11](#)).

Intel® WLAN Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click in the tickbox to agree to the **End User License Agreement** and click **Install**.
5. Click **Finish (Yes)** to restart the computer.
6. The operating system is the default setting for Wireless LAN control in *Windows* (see page [6 - 11](#)), however the **WiFi Manual Diagnostics**, **WiFi Event Viewer** and **WiFi Advanced Statistics** apps are installed in the **Start** screen to help analyze WLAN activity.

WLAN Configuration in Windows 8

You can configure a wireless connection using one of the following options, however make sure the Wireless LAN module is turned on (and not in Airplane Mode) before configuration begins.

Charms Bar

1. Go to the **Charms Bar**.
2. Select **Settings** and then click the **WiFi icon** (it should read **Available** under the icon and **Airplane mode** should be **Off**).
3. A list of available access points will appear.

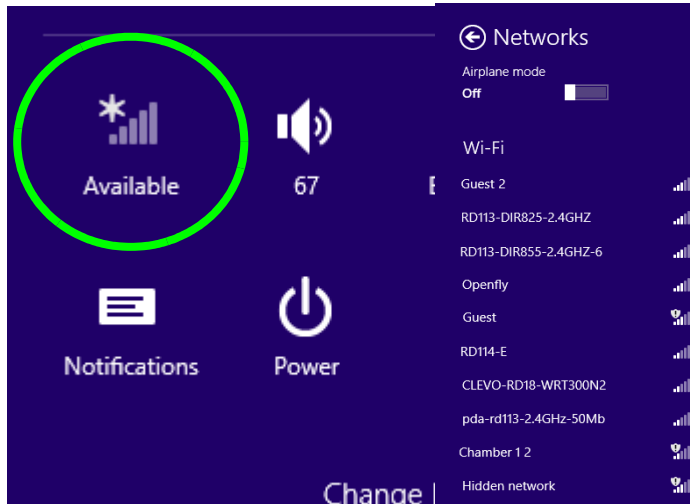




Figure 6 - 8
WiFi Settings
(Charms Bar) &
Networks

Modules & Options

4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to share or connect to devices or not.
7. When you are connected to the network access point it will display the Connected icon .
8. Select any connected network and click **Disconnect**  to disconnect from a connected access point.

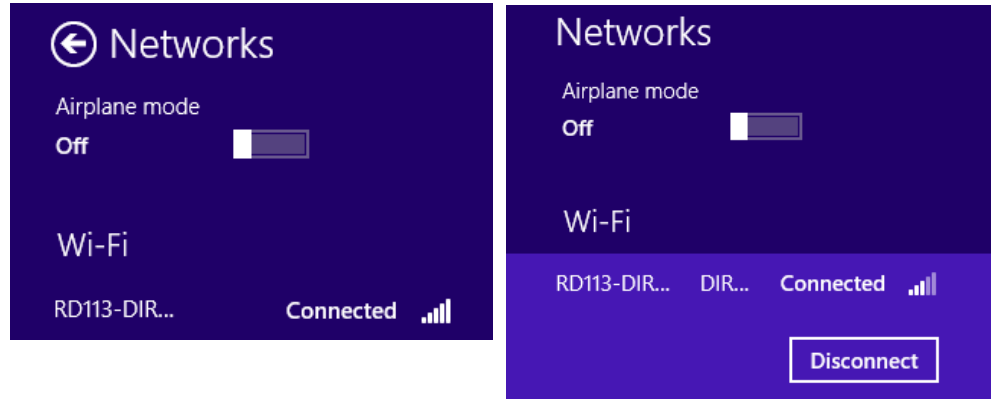


Figure 6 - 9
Networks
Connected /
Disconnect

9. You can click the **Airplane Mode** button to turn the mode On or Off.
10. If you click on **Change PC Settings** (at the bottom of **Settings** in the **Charms Bar**) you can turn **Wireless** or **Airplane Mode** On/Off (see over).

- 11. You need to either use **Airplane Mode**, or to **turn the WLAN module off** aboard aircraft.

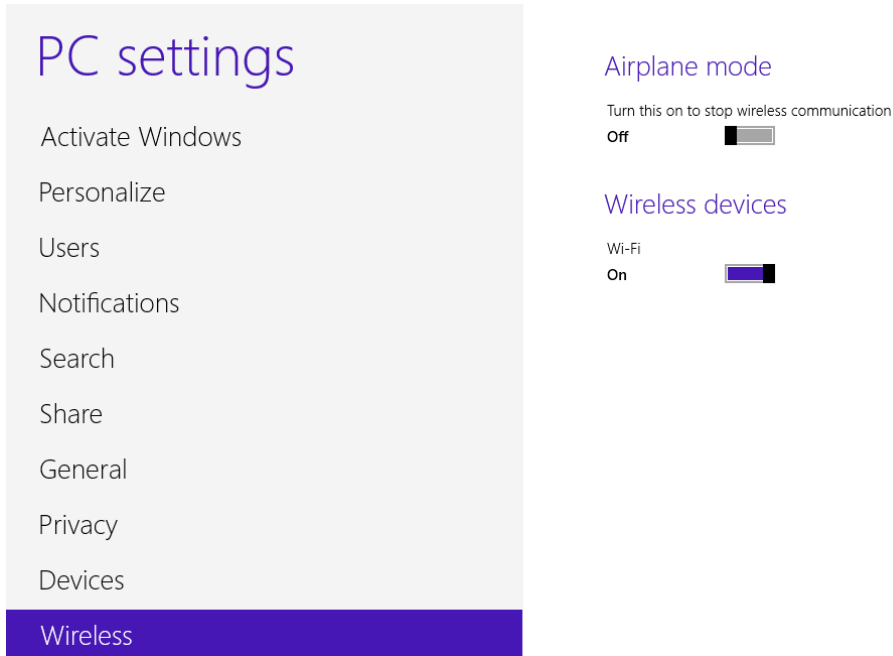





Figure 6 - 10
**PC Settings
(Wireless)**

Desktop Mode

1. Switch to the Windows Desktop (click the app or use the Windows logo key  + **D** key combination).
2. Click the wireless icon  in the notification area of the taskbar.
3. A list of available access points will appear.
4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to share or connect to devices or not.
7. Select any connected network and click **Disconnect** to disconnect from a connected access point.

6

Figure 6 - 11
**Windows Desktop
Taskbar Notification
Area WLAN
Connection**

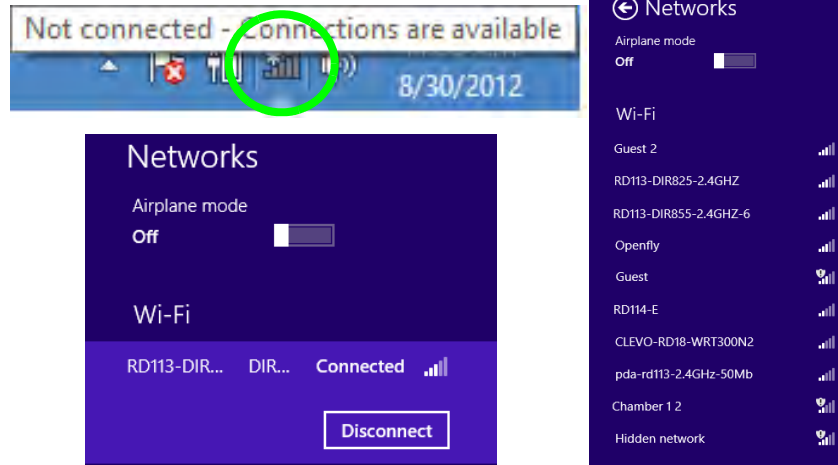

Control Panel

If you are in **Category View** do the following (see over for Icon View):

1. Open the **Control Panel**.
2. Click the **Network and Internet** control panel.
3. Click **Connect to a network**.

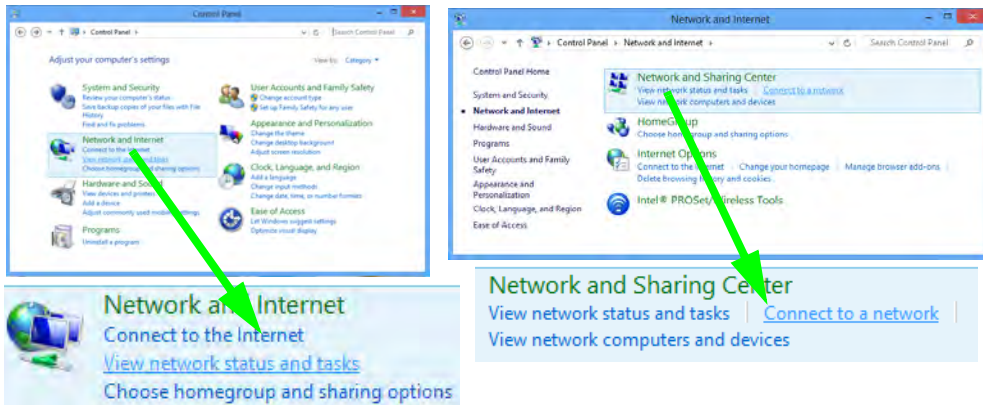


Figure 6 - 12
Network and
Internet Control
Panel

4. A list of available access points will appear.
5. Double-click an access point to connect to it (or click it and click **Connect**).
6. Enter a network security key (password) if required, and click **Next**.
7. You can choose to share or connect to devices or not.
8. Select any connected network and click **Disconnect** to disconnect from a connected access point.

If you are in **Icon View** do the following:

1. Open the **Control Panel**.
2. Click **Network and Sharing Center**.
3. Click **Change Adapter Settings**.
4. Double-click **Wi-Fi**.

Figure 6 - 13
Network and Sharing Center Control Panel



5. A list of available access points will appear.
6. Double-click an access point to connect to it (or click it and click **Connect**).
7. Enter a network security key (password) if required, and click **Next**.
8. You can choose to share or connect to devices or not.
9. Select any connected network and click **Disconnect** to disconnect from a connected access point.

Bluetooth & WLAN Combo Module

If your purchase option includes the **Combination Wireless LAN & Bluetooth module** (either **Intel®** or **3rd Party**) then install the driver as instructed overleaf.

Make sure that the module is on (i.e. the system is not in **Airplane Mode**) before installing the driver.



Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported). Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.



High Speed Bluetooth Data Transfer

The **Combination Wireless LAN & Bluetooth module** supports high speed data transfer. However to achieve such transfer speeds, **both devices must support high speed data transfer.**

To obtain high speed data transfer make sure that both the WLAN and Bluetooth modules are powered on.

Check your Bluetooth compatible device's documentation to confirm it supports high speed data transfer.

3rd Party Bluetooth (V4.0) Combo Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install Combo BT Driver > Yes.**
4. Click **Next.**
5. Click **Finish** to restart the computer.
6. See *“Bluetooth Configuration in Windows 8” on page 6 - 19* for configuration instructions.


Intel Bluetooth Combo Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **2.Install Combo BT Driver > Yes.**
4. Click **Next > Next.**
5. Click in the tickbox to accept the license and click **Next.**
6. Click **Next > Finish.**
7. See *“Bluetooth Configuration in Windows 8” on page 6 - 19* for configuration instructions.

Bluetooth Configuration in Windows 8

You can configure a Bluetooth connection as below, however make sure the Bluetooth module is on (i.e. not in Airplane Mode) before configuration begins.

Desktop Mode

1. Switch to the Windows Desktop (click the App or use the Windows logo key **+** **D** key combination).
 2. Click the notification area of the taskbar and double-click the Bluetooth icon  (or click and select **Show Bluetooth Devices**).
 3. The **Devices** item in **PC Settings** will appear.
- OR

Charms Bar

1. Go to the **Charms Bar**.
2. Select **Settings** and then click **Change PC Settings**.
3. The **Devices** item in **PC Settings** will appear.


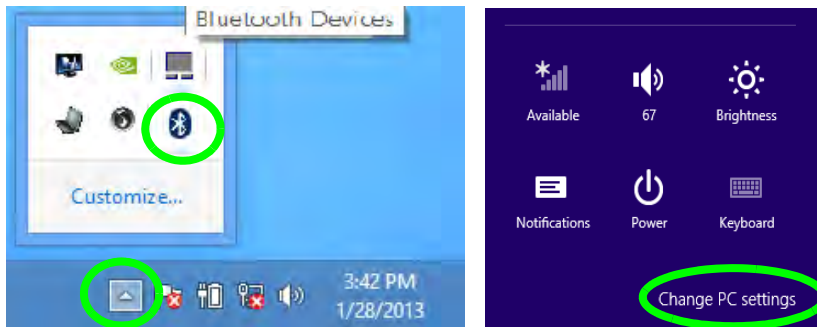


Figure 6 - 14
**Bluetooth Taskbar
 Icon & Change PC
 Settings (Charms
 Bar -Settings)**

Modules & Options


4. Click **Add a Device**.
5. Double-click the device you want to pair with the computer.

Figure 6 - 15
PC Settings
(Devices) - Add A
Device)

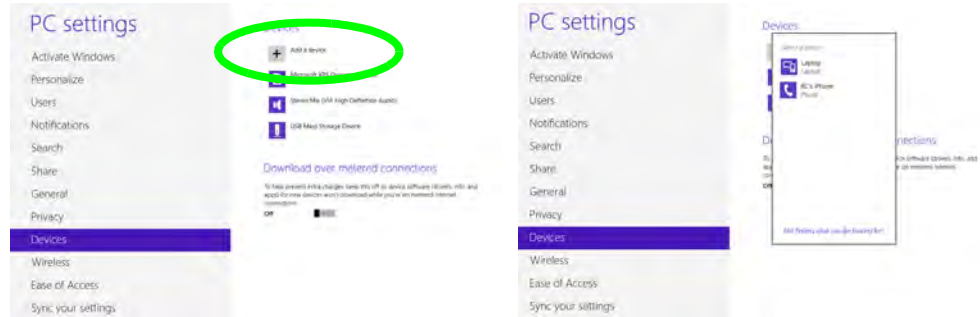

6. On first connection the computer will provide you with a pairing code to be entered onto the device.

Figure 6 - 16
Enter the Passcode

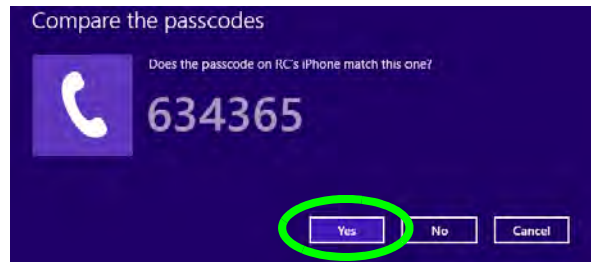

7. Enter the code into your Bluetooth enabled device and click **Yes** on the computer to complete the pairing.

- 8. You need to either use **Airplane Mode**, or to **turn the Bluetooth module off** aboard aircraft.

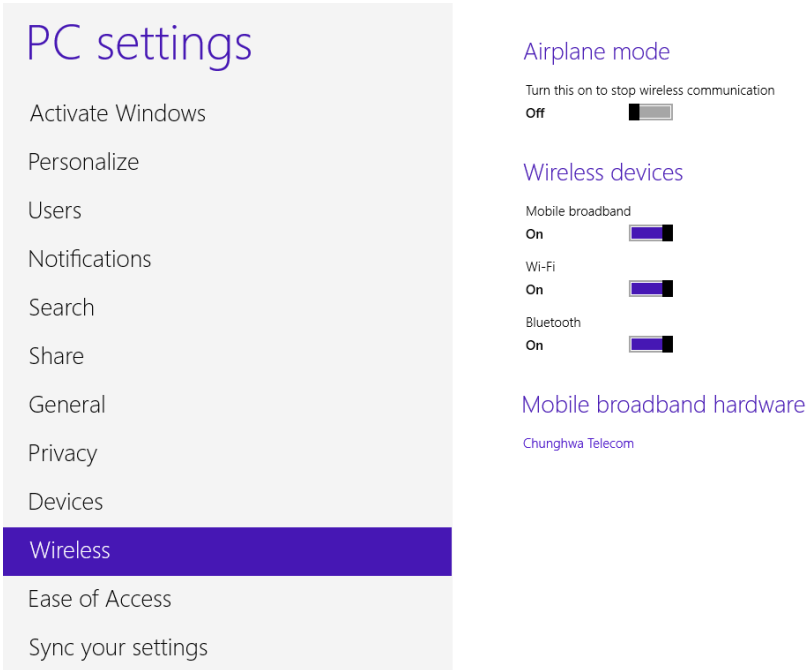




Figure 6 - 17
PC Settings
(Wireless)

To Make your Computer Discoverable to Bluetooth Devices

1. Switch to the Windows Desktop (click the app or use the Windows logo key  + **D** key combination).
2. Click the notification area of the taskbar, click the Bluetooth icon  and click **Open Settings**.
3. Click **Options**, and make sure that **Allow Bluetooth devices to find this computer** check box (**Discovery**) has a tick inside it.
4. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Connections**) has a tick inside it, if you want to be notified when a Bluetooth device wants to connect.

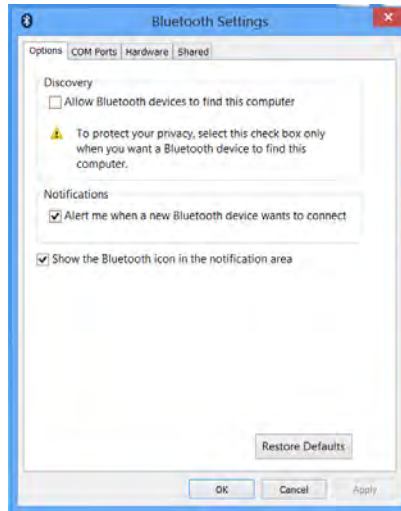


Figure 6 - 18
Bluetooth Settings

Trusted Platform (Security) Module

If your purchase **option** includes the **TPM security chip**, this allows you to create and manage digital certificates for user and platform authentication. This type of security is usually administered within large enterprises and organizations, and therefore requires implementation by a system administrator before users can access security features.

Individual users can use the TPM as an authentication with the fingerprint reader.

Make sure you have administrator's rights to your computer, and have a *Windows* password enabled for full security protection. In addition **Make sure you prepare a removable media (e.g. a USB flash drive) to store passwords etc. before beginning the TPM initialization process.**

Before setting up the TPM functions you must initialize the security platform.

Enabling & Activating TPM

1. Restart the computer.
2. Enter the **Aptio Setup Utility** pressing **F2** during the POST/startup.
3. Use the arrow keys to select the **Security** menu.
4. Select **TPM Configuration** and press Enter to access the sub-menu.
5. Press Enter to access the **Security Device Support** menu and select **Enable** to display the full **TPM configuration** menu.
6. Select **TPM State**, press Enter and select **Enabled** to change the TPM state to enabled. You will then need to press **F4** to save the changes and restart the computer.

Figure 6 - 19
TPM State
(Enabled)



7. As the computer restarts press **F2** to enter the BIOS again and go to the **TPM Configuration** menu.

- Select **Pending operation**, press Enter and select the option you require (if you are initializing TPM you should select **Enable Take Ownership**). You will then need to press **F4** to save the changes and restart the computer.

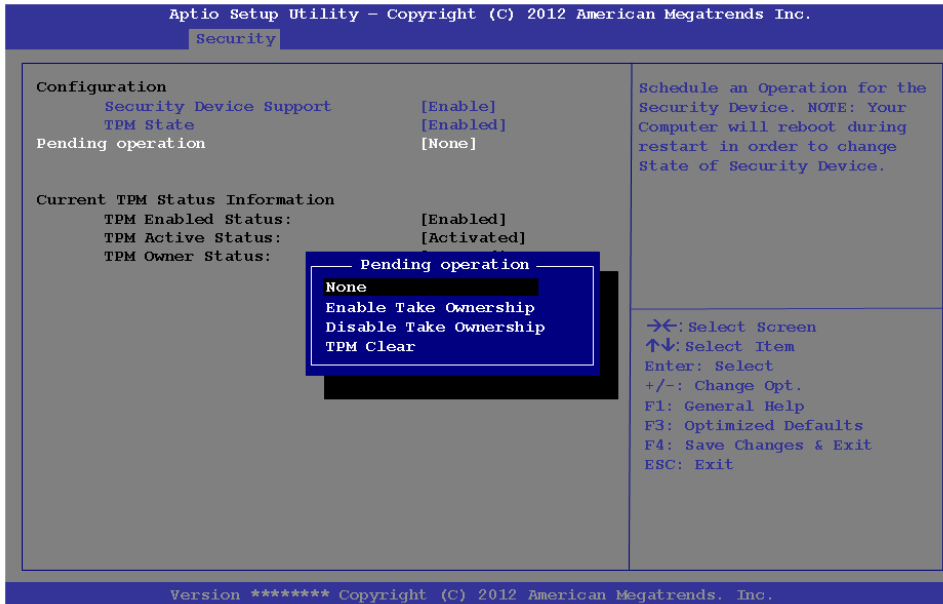


Figure 6 - 20
Pending operation
(Enable Take
Ownership)

- You can now **install the TPM driver** (see ***“Trusted Platform Module (TPM) Driver Installation”*** on page 6 - 26) and then initialize the TPM.

Trusted Platform Module (TPM) Driver Installation

1. Make sure you have enabled and activated the TPM in the BIOS before installing the driver (if you do not do see the note below).
2. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
3. Click **Option Drivers** (button).
4. Click **3.Install TPM Driver > Yes**.
5. Click **Install > Next**.
6. Click the button to accept the license and click **Next**.
7. Click **Next > Next > Install**.
8. Click **Finish > Yes** to restart the computer.

Initializing TPM


1. Run the application from the **Manage Security Platform** item in **All Apps** (see [Figure 1 - 18 on page 1 - 25](#)), and click **User Settings** (tab) and click **Yes**. Alternatively go to the desktop and right-click the icon  in the notification area of the taskbar, and select **Security Platform Initialization** (or click the **Security Platform State** taskbar bubble).
2. The **Quick Initialization** method will automatically be selected for you (if you need to use advanced settings provided by your network administrator then select **Advanced Initialization**).
3. You will need to use a removable media (e.g. a USB Flash Drive) to store passwords and data (keep the media in a safe place until required).
4. Select the drive you want to use from the drop-down menu and click **Next**.




Figure 6 - 21
**Security Platform
Quick Initialization
Wizard**

Modules & Options



Help

Go to the desktop and right-click the icon  in the notification area of the taskbar to bring up the menu to select **Help** or **How to use the Security Platform Features**.

You can also click the **Help** button in any of the Infineon Security Platform Settings Tool tabs to bring up specific help topics on each tab.

Security Platform Help is also available from the **Start** screen in **Windows 8**.

5. Choose the **Security Platform Features** you want to use by clicking the appropriate tickbox.
6. Enter a **Basic User Password** (and re-type to confirm it) and click **Next**.

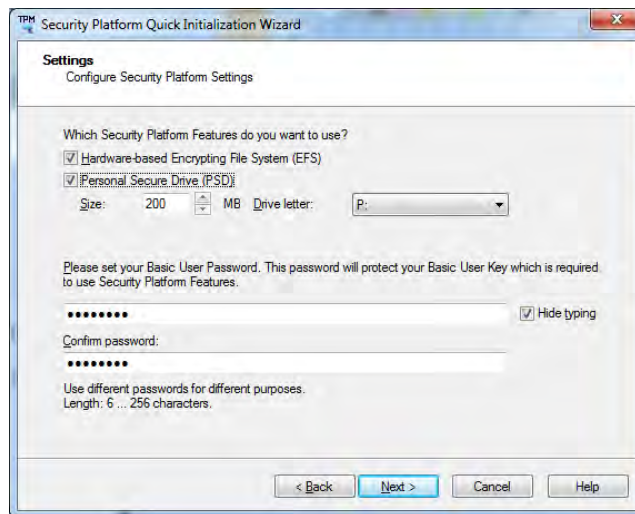




Figure 6 - 22
Settings

7. Click **Next** to confirm the settings.
8. The computer will then initialize the settings.
9. Click **Finish**.
10. Click the tabs and control panels to adjust the settings.
11. Go to the desktop and double-click the icon  in the taskbar notification area to access the **Infineon Security Platform Settings Tool**, or right-click the icon  and select a menu item.

Infineon Security Platform Settings Tool

The Infineon Security Platform Settings Tool allows you to manage and check the TPM state, manage your password information, and to backup and restore the TPM data. As TPM is usually administered within large enterprises and organizations, your system administrator will need to assist you in managing the information here.



Menus


Note that not all the menus pictured here will be available for access. The menu items that appear will be dependent on your configuration settings etc. (see the **Help** file for full details).

Figure 6 - 23
Infineon Security Platform Settings Tool

User Settings

This page allows the settings to be configured for the currently logged in Infineon Security Platform user including the ability to change the password, configure secure e-mail, file and folder encryption and Enhanced Authentication. You can also import or delete certificates protected by the security platform.

Figure 6 - 24
**Infineon Security
Platform Settings
Tool (User Settings)**

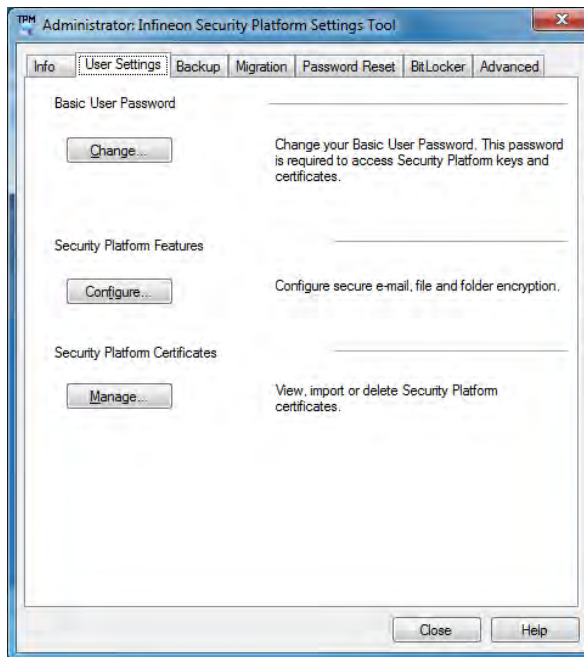

Backup

Here you can configure backup and restore operations. Backup files contain the computer identification and user identification information which is used to match the machine name and user name with the current machine and user during restoration.

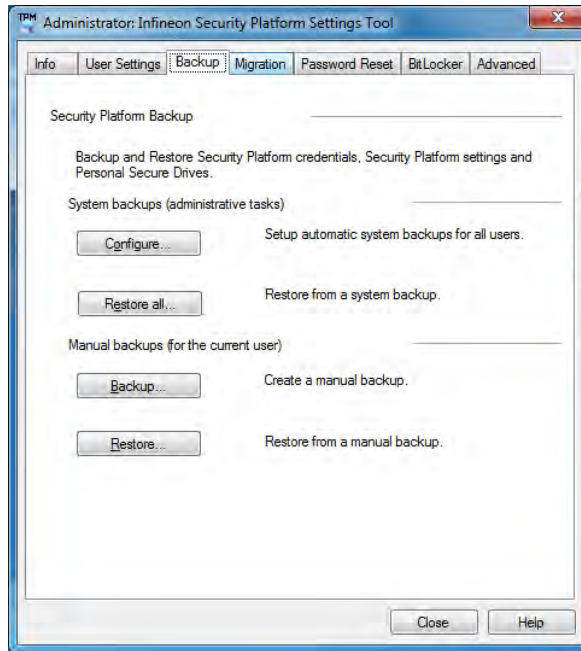


Figure 6 - 25
Infineon Security Platform Settings Tool (Backup)

Migration

The Migration tab is used to help securely transfer keys and certificates from one platform to another.

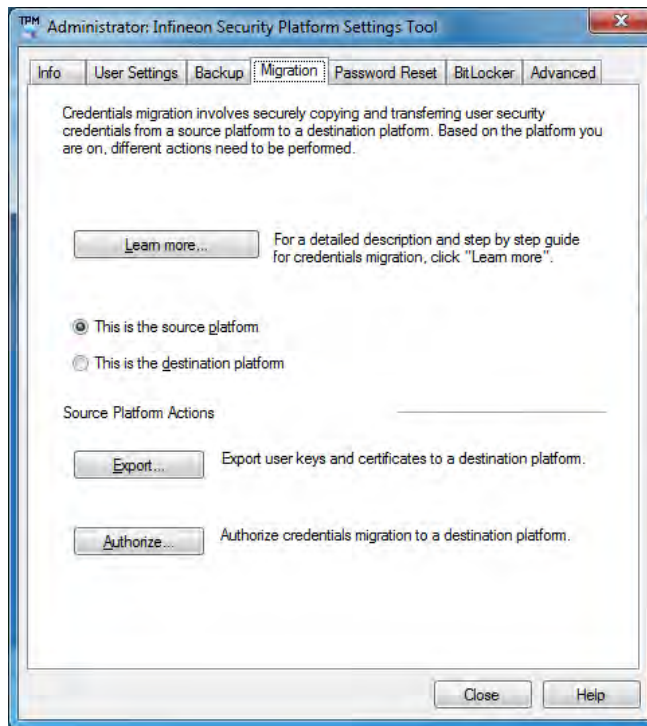


Figure 6 - 26
**Infineon Security
Platform Settings
Tool (Migration)**

Password Reset

Use Password Reset to reset basic user passwords when required.


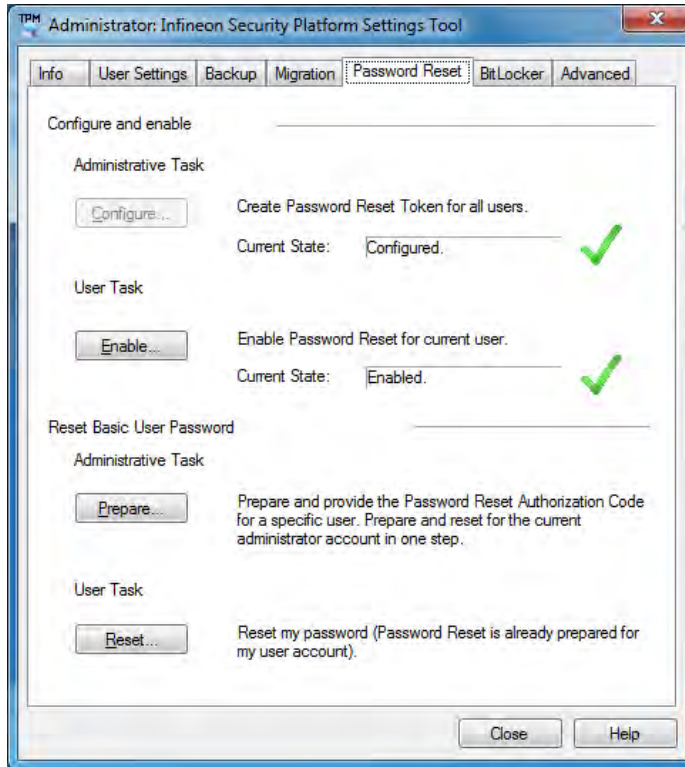


Figure 6 - 27
Infineon Security Platform Settings Tool (Password Reset)

BitLocker

BitLocker Drive Encryption can be used in conjunction with the TPM to encrypt data on the disk and is done via the **Microsoft BitLocker Control Panel Applet**. Click **Configure** and select a drive to be encrypted and then follow the Wizard to begin the encryption process.

Figure 6 - 28
**Infineon Security
Platform Settings
Tool
(BitLocker)**

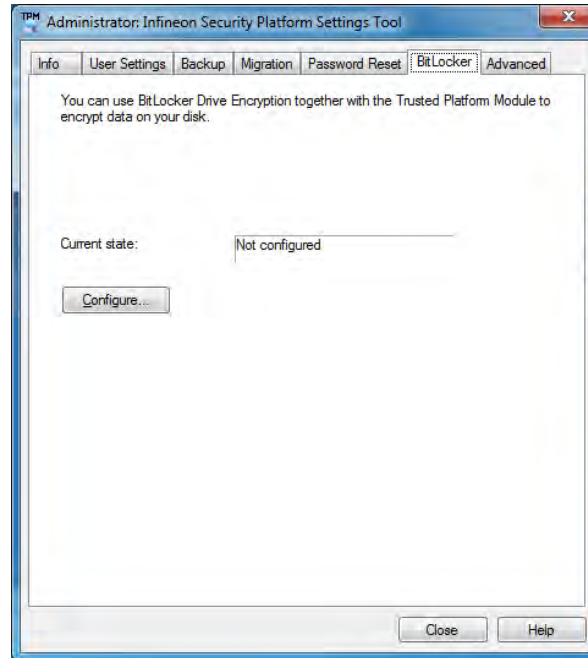

Access the Microsoft **BitLocker Drive Encryption** control panel applet from the **Windows** control panel (**System and Security**).


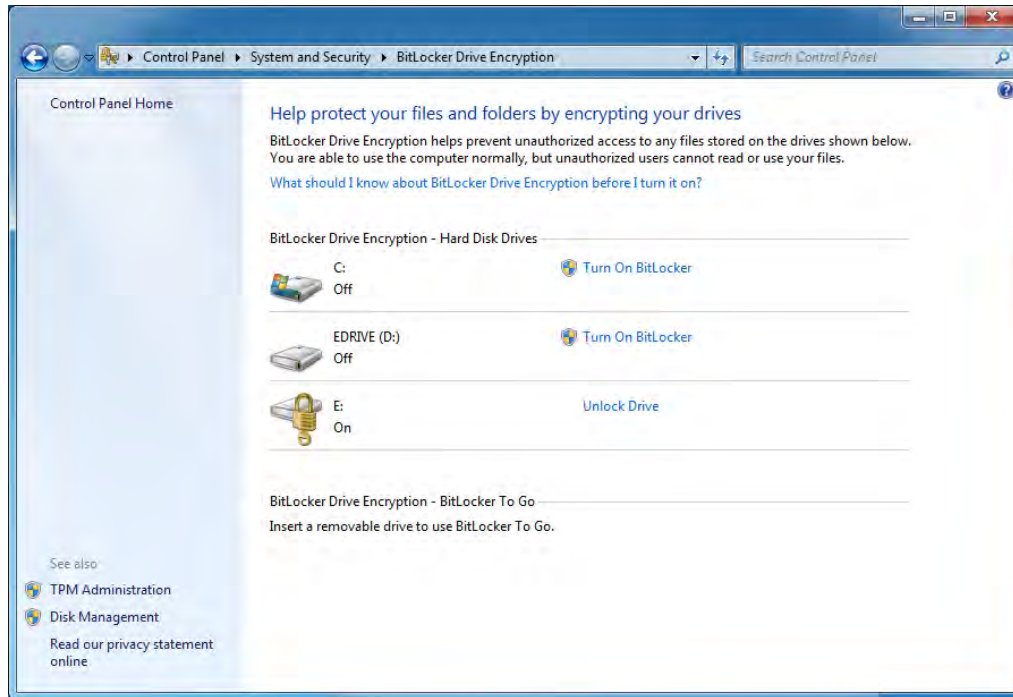


Figure 6 - 29
BitLocker Drive Encryption

Advanced

Configure all the Security Platform owner and policy settings from the Advanced tab. The settings that can be changed are for the local computer only.

Figure 6 - 30
**Infineon Security
Platform Settings
Tool
(Advanced)**

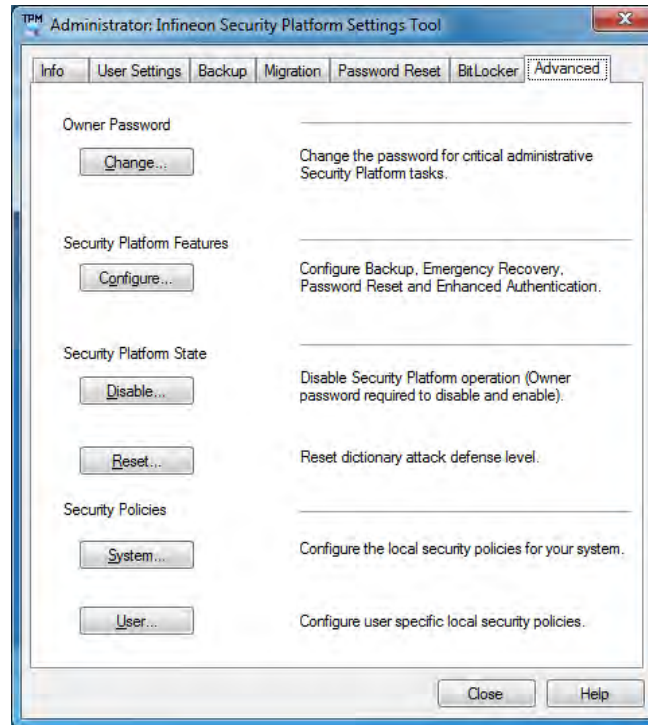

3G Module

If you have included an **optional UMTS/HSPA+** based 3G Module (Universal Mobile Telecommunications System or High Speed Packet Access) module (see **“Communication” on page D - 4** for specification details) in your purchase option, **you do not require a driver/application installation for Windows 8**. Follow the instructions overleaf to install the USIM card (which will be provided by your service provider), and then **use the Charms Bar Wireless icon to access the 3G network** in the same manner as the WLAN (see page **6 - 39**).



Important Notice

If your purchase option includes both Wireless LAN and 3G modules, then the appropriate antennas will be installed. Note that In order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.

Important Notice - 3G & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3G module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3G module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.



Power Safety Warning

Before you undertake any installation procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

USIM Card Orientation

Note that the USIM card's readable side (with the gold-colored contacts) should face upwards as illustrated.

3G Module USIM Card Installation

Follow the instructions below to install the USIM card (which will be provided by your service provider).

1. Turn **off** the computer, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow, and hold it in place.
4. Remove the battery **3**.
5. Insert the USIM card **4** (at the rear of the battery compartment) as illustrated below until it clicks fully into position, and replace the battery.

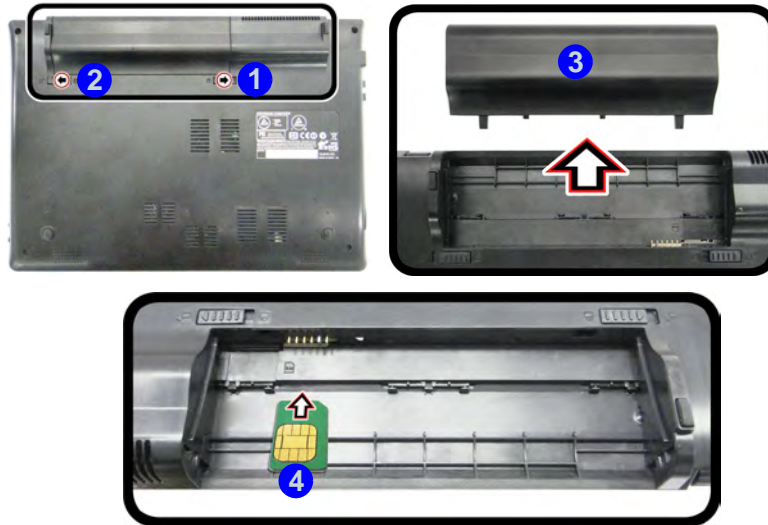


Figure 6 - 31
**Battery Removal &
USIM Card Insertion**

3G Configuration in Windows 8

You can configure a 3G connection as below, however make sure the system is not in Airplane Mode before configuration begins.

Charms Bar

1. Go to the **Charms Bar**.
2. Select **Settings** and then click the **WiFi icon** (it should read **Available** under the icon and **Airplane mode** should be **Off**).
3. A list of available access points will appear.


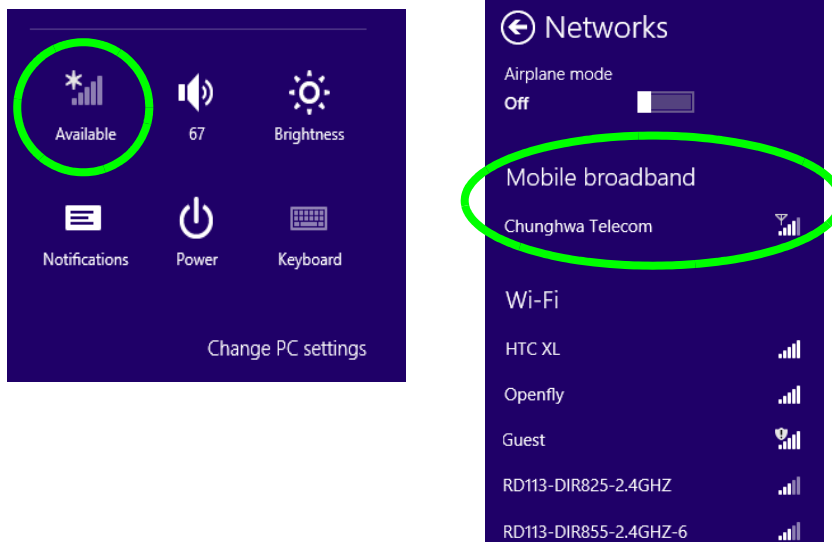


Figure 6 - 32
WiFi Settings
(Charms Bar) &
Networks (with
Mobile Broadband)

Modules & Options


- Any 3G service provider (connection information is usually stored on the USIM card) will appear under Mobile Broadband.
- Double-click any connection icon under Mobile Broadband (or click and click **Connect**).


Figure 6 - 33
**Mobile Broadband
(Connect)**

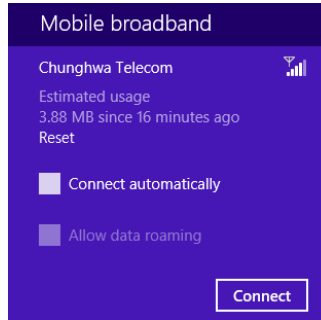


- The system will connect to your network.
- A **Connected** will appear alongside the 3G connection (click the connection to view the timer which indicates your connected time for the current session).


Figure 6 - 34
**Mobile Broadband
(Disconnect)**

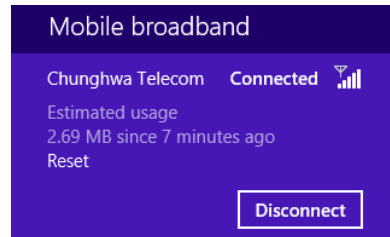


- You can then access the internet, download e-mail etc. as per any internet connection.
- To disconnect you can select the connection and click **Disconnect** .
- You need to either use **Airplane Mode**, or to **turn the Mobile Broadband module off** aboard aircraft.

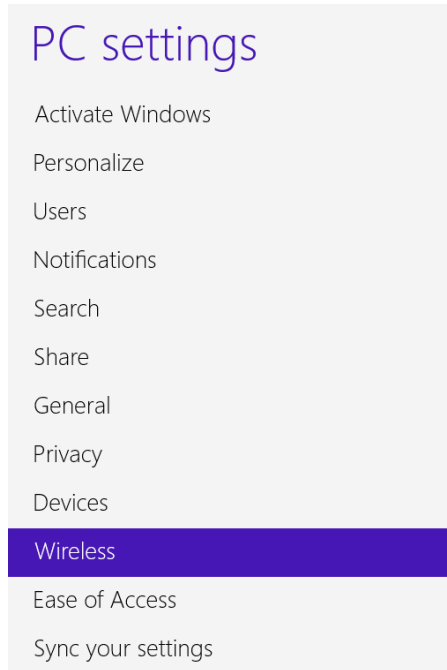



Airplane mode

Turn this on to stop wireless communication
Off 

Wireless devices

Mobile broadband
On 

Wi-Fi
On 

Bluetooth
On 

Mobile broadband hardware

Chunghwa Telecom



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited.

Make sure the system is in **Airplane Mode** if you are using the computer aboard aircraft.

Figure 6 - 35
**PC Settings
(Wireless)**



EM820W 3G Module PIN Code & Power-Saving

Note that there may be some issues when a PIN Code is set for the EM820W 3G module (if you are unsure of your module version contact your distributor/supplier) in *Windows 8*, Mobile Broadband has been turned off, and the system has resumed from a power-saving state. **To prevent any issues it is recommended that you simply do not enable a PIN for the EM820W 3G module.** The following provides instructions for disabling the PIN code; for specific instructions on resolving the issue where “**Insert a SIM**” appears in the connection see *“Resolving the “Insert a SIM” issue with the 3G Module (Windows 8)” on page 7 - 12.*

Disabling a PIN code for a 3G Module

1. Go to the **Charms Bar**.
2. Select **Settings** and then click the **WiFi icon**.
3. Right-click the 3G connection and select **View connection properties**.

Figure 6 - 36
WiFi Settings
(Charms Bar) &
Right-Click
Connection to View
Properties

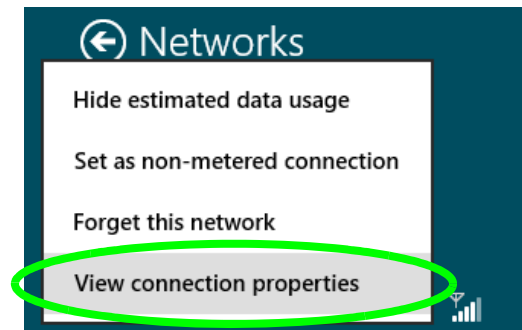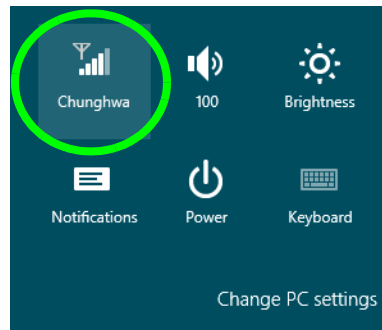

4. Click **Security** (tab) and click **Disable PIN**.
5. Enter the PIN number and click **Disable PIN** and click **OK** to confirm.
6. **It is recommended that you do not Enable a PIN for the EM820W 3G module.**

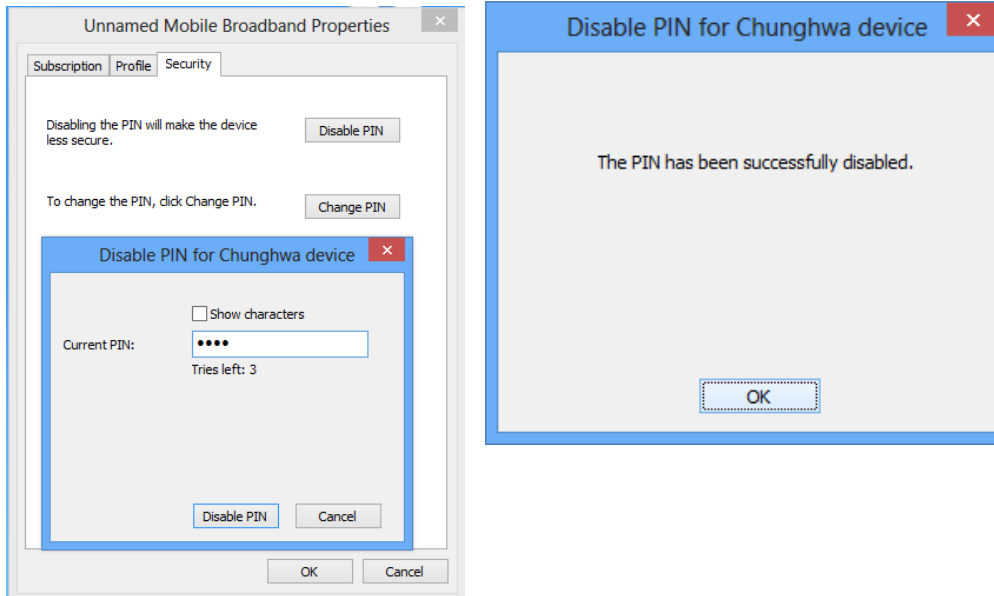


Figure 6 - 37
Disable PIN

Chapter 7: Troubleshooting

Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power & Communication Indicators** (see *“LED Indicators” on page 1 - 7*) to see the computer’s power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your *Power Options* (see *“Power-Saving States” on page 3 - 6*), the **Fn + F4** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn + F8 and F9** keys to adjust the brightness.
- **Display Choice** - Press **Fn + F7** to make sure the system is not set to “external only” display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive (this is a common cause of the message *“Invalid system disk - Replace the disk, and then press any key” / “Remove disks or other media. Press any key to restart”*).

Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.
- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.
- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Supervisor** password for the BIOS (see *“The Setup Utility” on page 5 - 2*).
- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc.(even if just brief notes).



Warranty

The CPU is not a user serviceable part. Opening this compartment, or accessing the CPU in any way, may violate your warranty.

Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.
- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note:** You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.
- Keep a "**Bootable CD-ROM/DVD-ROM/USB storage device**" (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).


Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.
- Don't open your computer or undertake any repair or upgrade work if you are not comfortable with what you are doing.
- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".
- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.
- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).

Troubleshooting


- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.
- Don't over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.

Problems and Possible Solutions



Problem	Possible Cause - Solution
<p>You turned on the power but it doesn't work.</p>	<p><i>Battery missing / incorrectly installed.</i> Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.</p>
<p>The battery LED power indicator , is blinking orange.</p>	<p><i>Low Battery.</i> Plug in the DC power source. If the computer doesn't start up immediately, turn it off then on again.</p>
<p>You are losing battery power too quickly.</p>	<p><i>The system is using too much power.</i> If your OS has a <i>Power Options</i> scheme (see "Power Plans" on page 3 - 4) check its settings. You may also be using a <i>peripheral device/USB device</i> that is drawing a lot of power.</p>
<p>Actual battery operating time is shorter than expected.</p>	<p><i>The battery has not been fully discharged before being recharged.</i> Make sure the battery is fully discharged and recharge it completely before reusing (see "Battery Information" on page 3 - 13).</p> <p><i>Power Options have been disabled.</i> Go to the Control Panel in <i>Windows</i> and re-enable the options.</p> <p><i>A peripheral device/USB device is consuming a lot of power.</i> Turn off/remove the unused device to save power.</p>

Troubleshooting

Problem	Possible Cause - Solution
The computer feels too hot .	<p>Make sure the computer is properly ventilated and the Vent/Fan intakes are not blocked. If this doesn't cool it down, put the system into Hibernate mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see "Overheating" on page 1 - 14). Make sure you're using the correct adapter.</p> <p>Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vent/Fan intakes to be blocked.</p>
Nothing appears on screen.	<p><i>The system is in a power saving mode.</i> Toggle the sleep/resume key combination, Fn + F4 (see "Configuring the Power Buttons" on page 3 - 8).</p> <p><i>The screen controls need to be adjusted.</i> Toggle the screen control key combinations Fn + F8/F9. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls.</p> <p><i>The computer is set for a different display.</i> Toggle the screen display key combination, Fn + F7. If an external monitor is connected, turn it on.</p> <p><i>The screen saver is activated.</i> Press any key or touch the TouchPad.</p>
No image appears on the external monitor I have plugged in and powered on.	<p><i>You haven't installed the video driver and configured it appropriately from the Control Panel.</i> See Appendix C for instructions on installing and configuring the video driver.</p>

Problem	Possible Cause - Solution
You forget the boot password .	<i>If you forget the password, you may have to discharge the battery of the CMOS. Contact your service representative for help.</i>
<div style="text-align: center;">  <p>Password Warning</p> <p>If you choose to set a boot password, NEVER forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.</p> </div>	
The sound cannot be heard or the volume is very low .	<i>The volume might be set too low. Check the volume control in the Volume Control Panel in the Windows notification area, or use the key combination Fn + F5 and F6 (see “Function/Hot Key Indicators” on page 1 - 10) to adjust.</i>
Unwelcome numbers appear when typing.	<i>Num Lock is turned ON (see “Function/Hot Key Indicators” on page 1 - 10).</i>
I am sliding my finger up and down on the right side of the Touchpad to scroll a Window and the Touchpad does not respond .	<i>There are different Touchpad versions available on this computer, and this version requires tapping/holding to scroll. Either tap repeatedly, or hold the finger down, at the top or bottom right of the Touchpad (depending on the scrolling direction required) to scroll the window.</i>

Troubleshooting

Problem	Possible Cause - Solution
 <h3>Other Keyboards</h3> <p>If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot keys unique to the system's regular keyboard may not work.</p>	
The system freezes or the screen goes dark.	<i>The system's power saving features have timed-out.</i> Use the AC/DC adapter, press the sleep (Fn + F4) key combination, or press the power button if no LEDs are lit.
The system never goes into a power saving mode .	Power Options features are not enabled. Go to the Windows Power Options menu and enable the features you prefer (see "Power-Saving States" on page 3 - 6). Make sure you have enabled Hibernate mode from the control panel.
The Wireless LAN/Bluetooth modules cannot be detected.	<i>The modules are off as the computer is in Airplane Mode.</i> Check the LED indicator  to see if it is in Airplane Mode (see "LED Indicators" on page 1 - 7). Use the Fn + F11 key combination to toggle Airplane Mode on/off (see Table 1 - 3, on page 1 - 10).
The PC Camera module cannot be detected.	<i>The module is off.</i> Press the Fn + F10 key combination in order to enable the module (see "Function/Hot Key Indicators" on page 1 - 10). Run the camera application to view the camera picture.

Problem	Possible Cause - Solution
The Wireless LAN/Bluetooth modules cannot be configured.	The driver(s) for the module(s) have not been installed. Make sure you have installed the driver for the appropriate module (see the instructions for the appropriate module in <i>“Modules & Options” on page 6 - 1</i>).
A file cannot be copied to/from a connected Bluetooth device.	<i>The transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported).</i> If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process has been completed
I cannot obtain high speed Bluetooth data transfer.	<i>To obtain high speed Bluetooth data transfer take into account the following:</i> <ul style="list-style-type: none"> • To achieve high speed transfer speeds, both devices must support high speed data transfer (i.e both the computer and the Bluetooth compatible device you are connecting to). • Check your Bluetooth compatible device’s documentation to confirm it supports high speed data transfer, and for configuration information.

Resolving the “Insert a SIM” issue with the 3G Module (Windows 8)

1. If a PIN was set for the EM820W 3G module, you have then switched **Mobile broadband off** (or put the system in **Airplane Mode**) under **Wireless** in **PC Settings**, and the system has just resumed from a power-saving state the following error may occur.

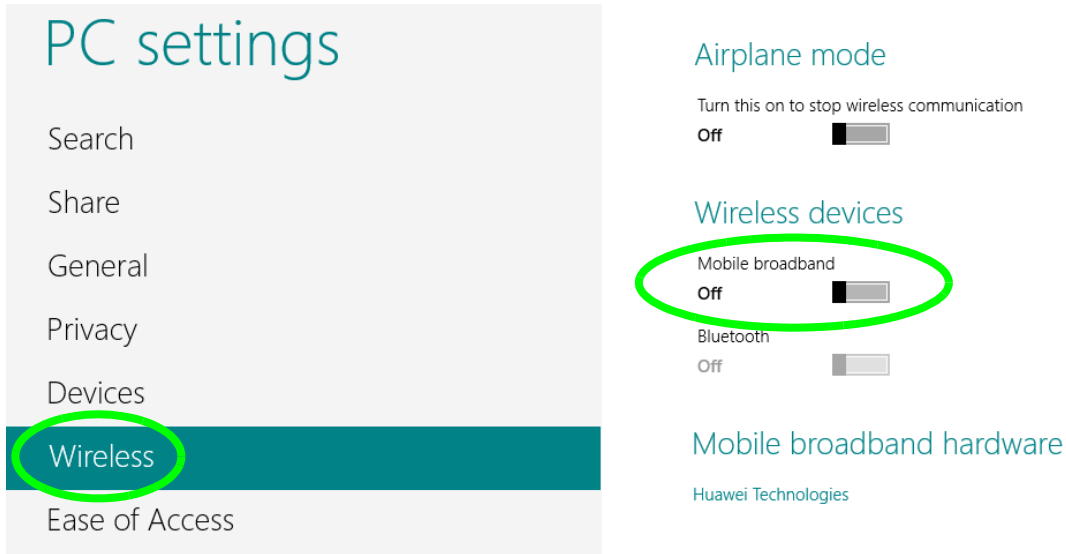


Figure 7 - 1 - PC Settings (Charms Bar) - Wireless (Mobile Broadband Off)

2. On resuming from the power-saving state the standard procedure would be to go to **PC Settings** in the **Charms Bar** and turn on Mobile broadband under **Wireless > Wireless Devices**.

3. Go to the **Charms Bar**.
4. Select **Settings** and you will then note that the **WiFi icon** will read **Unavailable**.
5. Standard procedure would be to click the connection and enter the PIN number to unlock the connection.
6. In this instance you will note that the **Mobile broadband** connection will read **Insert a SIM**.

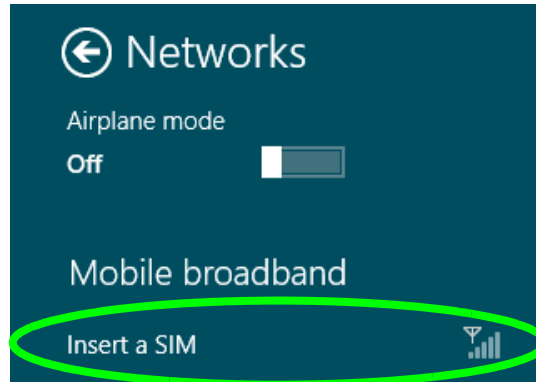


Figure 7 - 2 - Mobile Broadband (Insert a SIM)







7. In this case you will need to **restart the computer**.
8. After system restart you can then connect to the Mobile Broadband as normal.
9. **To fully resolve this issue it is recommended that you do not Enable a PIN for the EM820W 3G module.**




Appendix A: Interface (Ports & Jacks)

Overview

The following chapter will give a quick description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

Notebook Ports and Jacks

Item	Description
Card Reader Port 	The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device.
DC-In Jack 	Plug the supplied AC/DC adapter into this jack to power your computer.
External Monitor Port 	This port allows you to connect an external monitor, or Flat Panel Display, to get dual video or simultaneous display on the LCD and external monitor/FPD.
HDMI-Out Port 	The HDMI-Out (High-Definition Multimedia Interface) is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device by means of a HDMI cable. Note that HDMI carries both audio and video signals.
Headphone-Out Jack 	Headphones or speakers may be connected through this jack. Note: Set your system's volume to a reduced level before connecting to this jack.
Microphone-In Jack 	Plug an external microphone in to this jack to record on your computer.

Item	Description
RJ-45 LAN Jack 	This port supports LAN (Network) functions. Note: Broadband (e.g. ADSL) modems usually connect to the LAN port.
Security Lock Slot 	To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.
USB 2.0/1.1 Ports 	These USB 2.0 compatible ports (USB 2.0 is fully USB 1.1 compliant) are for low-speed peripherals such as keyboards, mice or scanners, and for high-speed peripherals such as external HDDs, digital video cameras or high-speed scanners etc. Devices can be plugged into the computer, and unplugged from the computer, without the need to turn the system off (if the power rating of your USB device is 500mA or above, make sure you use the power supply which comes with the device).

Interface (Ports & Jacks)

A

Appendix B: Control Center

Overview

The following chapter will give a quick description of the functions of the **Control Center**. The **Control Center** gives quick access to frequently used controls, power management features and enables you to quickly turn modules on/off. Click the **Control Center** icons to toggle the appropriate function, or hold the mouse button down and move the slider where applicable. Certain functions will automatically be adjusted when a power mode is selected. The **Control Center** in *Windows 8* works under the **Desktop** app and not under the Start screen.



Figure B - 1 - Control Center

Control Center

Power Modes

You can set a **Power Mode** by clicking the appropriate icon at the top of the **Control Center**. Each power mode will affect screen brightness, Touchpad and PC camera power etc.

You can click a **Control Center** icon to set an overall power mode and then click individual icons in the **Control Center** to power on/off the Touchpad and PC camera.









Modes		Power Saving	Entertainment	Quiet	Performance	User Defined
Icon						
Power Plan		Power Saver	Power Saving	Power Saving	High Performance	User Defined
Power Conservation Mode		Energy Star	Energy Star	Energy Star	Performance	
Brightness		10	100	40	100	
PC Camera		OFF	OFF	ON	ON	
TouchPad		ON	ON	ON	ON	

Table B - 1- Power Modes

Power Status

The **Power Status** icon will show whether you are currently powered by the battery, or by the AC/DC adapter plugged in to a working power outlet. The power status bar will show the current battery charge state.

Brightness

The **Brightness** icon will show the current screen brightness level. You can use the slider to adjust the screen brightness or the **Fn + F8/F9** key combinations, or use the **Fn+ F2** key combination to turn off the LED backlight (press any key to turn it on again). Note that screen brightness is also effected by the **Power Mode** selected (see [Table B - 1, on page B - 2](#)).

Volume

The **Volume** icon will show the current volume level. You can use the slider to adjust the Volume or the **Fn + F5/F6** key combinations, or use the **Fn+ F3** key combination to mute the volume.



Power Conservation

This system supports **Energy Star** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity (see [“Power Conservation Modes” on page 3 - 11](#)). Click either the **Performance**, **Balanced** or **Energy Star** button.




Control Center

Sleep

Click the **Sleep** button to bring up the **Hibernate**  or **Sleep**  buttons, and click either button to have the computer enter the appropriate power-saving mode (see *“Power-Saving States” on page 3 - 6*).

Display Switch

Click the **Display Switch** button to access the menu (or use the  + **P** key combination) and select the appropriate attached display mode (see page *C - 9*).


Time Zone

Clicking the **Time Zone** button will access the **Date and Time Windows** control panel.

Desktop Background

Clicking the **Desktop Background** button will allow you to change the desktop background picture.

TouchPad/PC Camera

Click either of these buttons to toggle the TouchPad or camera module's power status. A crossed out icon will appear over the top left of the icon  when it is off. Note that the power status of the camera module is also effected by the **Power Mode** selected (see *Table B - 1, on page B - 2*).

Caps Lock/Scroll Lock/ Number Lock

Click the button to toggle the appropriate lock mode.

Appendix C: Intel Video Driver Controls

The basic settings for configuring the LCD are outlined in “*Video Features*” on [page 1 - 28](#).

Intel Video Driver Installation

Make sure you install all the drivers in the order indicated in [Table 4-1, on page 4-3](#).

Video

1. Insert the *Device Drivers & Utilities + User’s Manual disc* into your external optical device drive.
2. Click **2.Install VGA Driver > Yes**.
3. Click **Next > Yes > Next > Next**.
4. Click **Finish** to restart the computer.

Dynamic Video Memory Technology

Intel® DVMT automatically and dynamically allocates as much system memory (RAM) as needed to the video system (**the video driver must be installed**). DVMT returns whatever memory is no longer needed to the operating system.



DVMT Notes

DVMT is not local video memory.

DVMT is not user-configurable.

DVMT will not function in MS-DOS. DOS uses the legacy memory indicated.

Intel® Graphics & Media Control Panel

Advanced video configuration options are provided by the **Intel® Graphics and Media Control Panel**. To access the control panel see below and overleaf:

1. Click the **Intel® Graphics and Media Control Panel** icon in the **Start** screen.

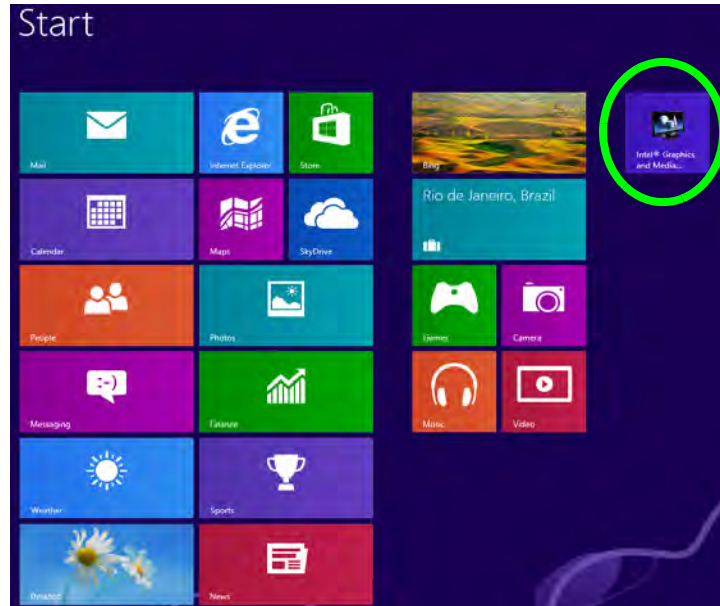


Figure C - 1
Start Screen
Intel® G&M Control
Panel

(see over)

OR

2. Click **Advanced settings** in the **Screen Resolution** control panel in *Windows*.
3. Click the **Intel(R)...** tab and click **Graphics Properties** (button).

OR

4. Right-click the **Desktop** app and select **Graphics Properties** from the menu.

OR

5. Double-click the **Intel® Graphics and Media Control Panel** in *Windows* (Control Panel).
6. Choose the application mode (**Basic, Advanced or Wizard**) required (see sidebar).



Application Mode

Note that all figures pictured, and instructions outlined here are based on the **Advanced Application Mode**.

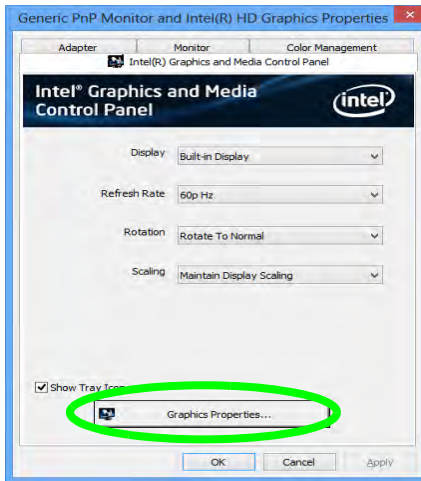


Figure C - 2
Intel® G&M
Control Panel

C

Intel Video Driver Controls



Options & Support

Click **Options & Support** and select an item from the sub-menu to bring up the help and support topics.

You will need to be connected to the Internet to access the key resource links.

Multiple Display

At least one other display must be attached in order to view multiple display selection options.

You may make changes to any of the graphics properties by clicking the appropriate menu tab on the left of the menu and adjusting the settings on the right.



Figure C - 3

Intel® G&M

Control Panel Tabs

Display Devices & Options

Besides the built-in LCD you can also use an external monitor/flat panel display/TV connected to the external monitor port or to the HDMI-Out port (High-Definition Multimedia Interface) as your display device. The table below outlines the display options.



Attaching Displays

When you first attach an external display you may find that the desktop does not occupy the full screen area. Use either the display's auto adjust/configure controls, or the Intel(R) G&M control panel to configure the full screen display.

Intel Display Mode	Description
Single Display	One of the connected displays is used as the display device
Clone Displays	Both connected displays output the same view and may be configured independently
Extended Desktop	Both connected displays are treated as separate devices, and act as a virtual desktop

Table C - 1
Display Modes



Multiple Display

At least one other display must be attached in order to view **Multiple Display** selection options.

General Settings

Click **General Settings** to access settings the options for any attached display.

Attaching Other Displays

If you prefer to use a monitor or flat panel display, connect it to the external monitor port or HDMI-Out port on the computer.

To Clone Displays:

1. Attach your display to the external monitor port or HDMI-Out port, and turn it on.
2. Go to the **Intel(R) G&M** control panel and click **Display > Multiple Displays**.
3. Click **Operating Mode** and select **Clone Displays** from the menu.
4. Click **Apply**, and **OK** to confirm the settings change.
5. You can switch the **Primary/Secondary Display** from the menu.



Figure C - 4

Display > Multiple Displays (Clone)

To Enable Extended Desktop:

1. Attach your display to the external monitor port or HDMI-Out port, and turn it on.
2. Go to the **Intel(R) G&M** control panel and click **Display > Multiple Displays**.
3. Click **Operating Mode** and select **Extended Desktop** from the menu.
4. Click **Apply**, and **OK** to confirm the settings change.



Click the appropriate monitor icon and drag it to match the physical arrangement you wish to use (e.g. the secondary display may be extended left/right/above/below the primary display).

Click General Settings to make any adjustments required.



Display Settings Extended Desktop

You can have different Colors, Screen Area and Monitor Refresh Rates for each display device **provided your monitor can support them**.

You can drag the monitor icons to match the physical layout of your displays. Icons and programs may also be dragged between the displays.

Figure C - 5
Display > Multiple
Displays (Extended)


Intel Video Driver Controls

Display Profiles

You can save display settings to be loaded at any time.


1. Go to the **Intel(R) G&M** control panel and click **Display**.
2. Configure the General Settings, Multiple Displays, Color Enhancement, Custom Resolution & Monitor/TV Settings to your preferences.
3. Click **Apply**, and **OK** to confirm the settings change.
4. Click the **Save** button at the top of the General Settings, Multiple Displays or Color Enhancement menus (under **Display Profiles**).
5. Type a name for the **Profile** and click **OK**.
6. The **Profile** will be listed under **Display Profiles**.
7. Select the profile from the pull-down menu and click **Apply**, and **OK** to confirm the settings change.

Figure C - 6
Intel® G&M
Profiles

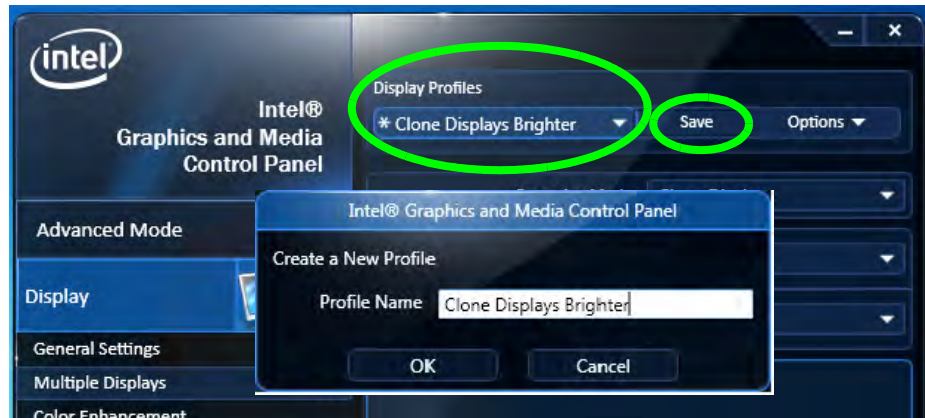

To Configure Displays from Devices (Charms Bar)

1. Attach your external display to the external monitor port/HDMI-Out port, and turn it on.
2. Go the **Charms Bar** and select **Devices**.
3. Click **Second Screen**.
4. Click on any one of the options from the menu to select Duplicate, Extend or a Single display.

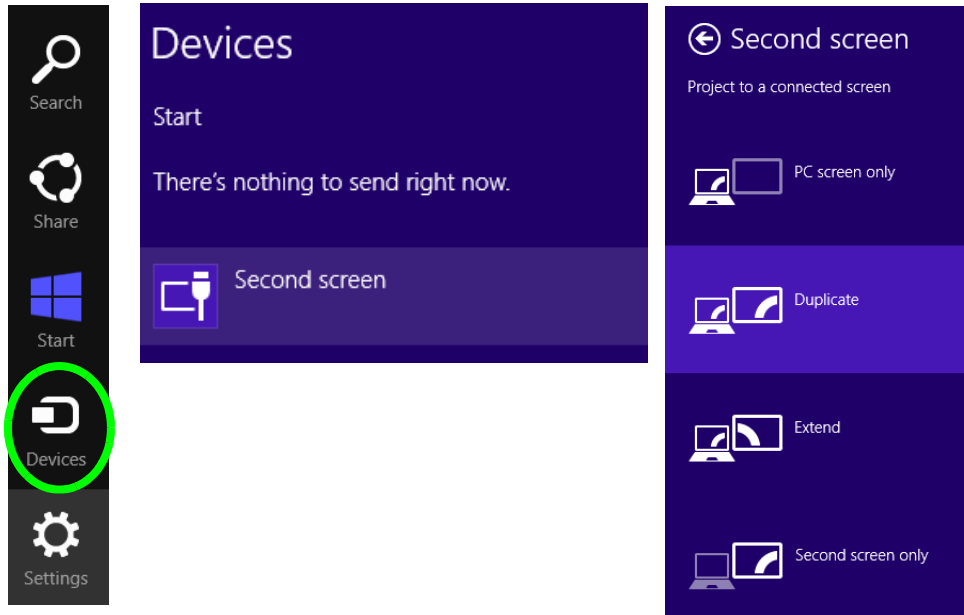

Windows Logo Key + P Key Combination

You can use the **Windows Logo Key + P** key combination to quickly bring up the **Second Screen** menu.

You can also use the **Display Switch** button in the **Control Center** to access the menu and select the appropriate attached display mode.

You can also use the **Fn + F7** key combination to quickly access the **Second Screen** menu in **Windows 8**.

Figure C - 7
Second Screen
(Devices)

Configuring an External Display In Windows

1. Attach your external display to the external monitor port/HDMI-Out port, and turn it on.
2. Go to the **Screen resolution** control panel (see page 1 - 32) in the Desktop app.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.

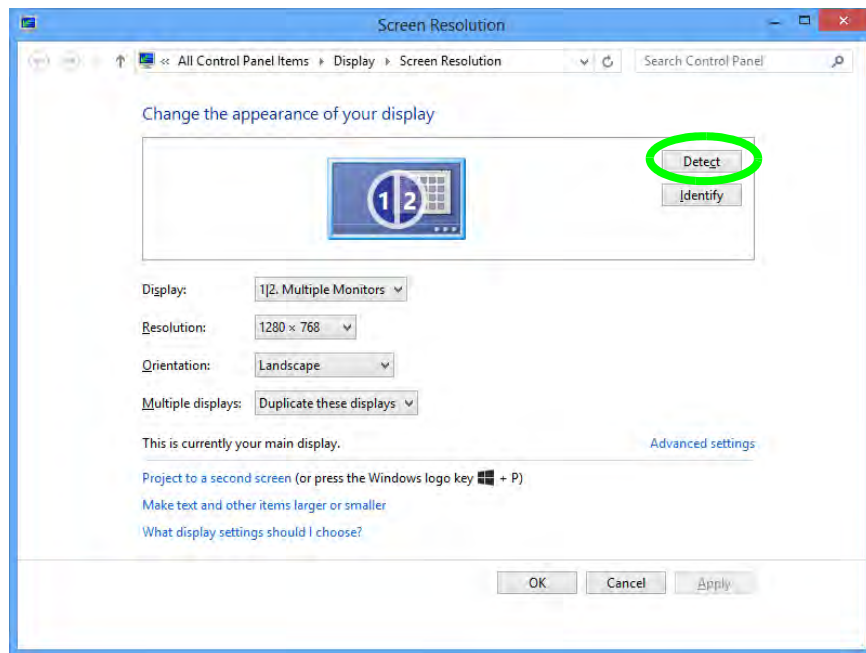


Figure C - 8
Screen Resolution
Multiple Displays

5. You can configure the displays from the **Multiple Displays** menu.

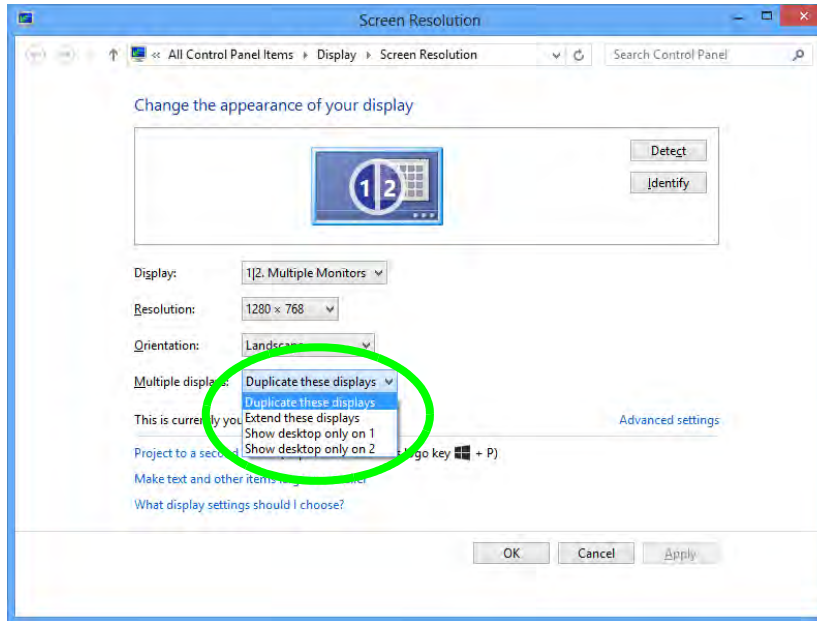


Figure C - 9
**Screen Resolution
Multiple Display
Options**

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.



Volume Adjustment

The sound volume level can be set using the volume control in the **Settings** menu in the **Charms Bar**.

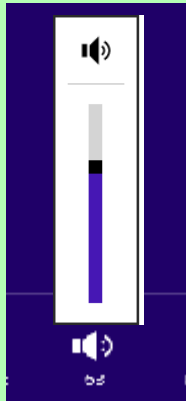



Figure C - 10

Sound - HDMI Device (set Default)

HDMI Audio Configuration

HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals. In some cases it will be necessary to go to the **Sound** control panel and manually configure the HDMI audio output as per the instructions below.

1. Go to the **Control Panel**.
2. Click **Sound** (Hardware and Sound) and click **Playback** (tab)
3. Depending on your display, the playback device may be selected, however in some cases you may need to select the audio device and click **Set Default** (button).
4. Double-click the device to access the control panel tabs illustrated overleaf.

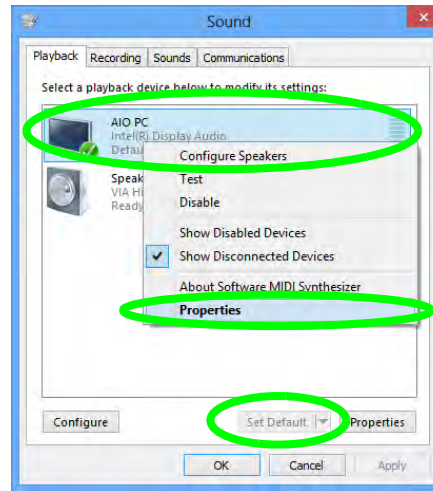

5. Adjust the HDMI settings from the control panel tabs.
6. Click **OK** to close the **Sound** control panel.

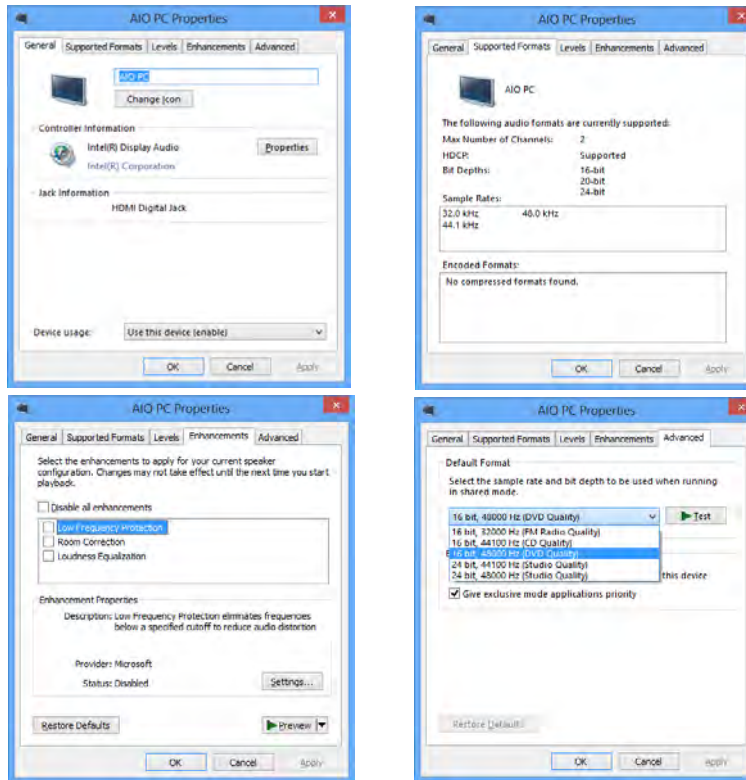


Figure C - 11
HDMI Device
Properties





Other Applications

If you are using a third party application to play DVDs etc. from any attached DVD device, you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- To play audio sources through your external display's (TV or LCD) speakers you will need to go to the audio configuration control panel on the display and configure the audio input accordingly (see your display device manual).

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in *“Attaching Other Displays” on page C - 6.*
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Appendix D: Specifications



Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/speeds and CD/DVD device types) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your distributor/supplier for details.

Specifications

Processor	Memory	Storage
<p>Intel® Celeron® 847 Processor 1.10 GHz, 2MB L3 Cache & 1333MHz FSB, TDP 17W, 22nm (22 Nanometer) Process Technology</p> <p>Intel® Celeron® 1007U Processor 1.50 GHz, 2MB L3 Cache & 1600MHz FSB, TDP 17W, 22nm (22 Nanometer) Process Technology</p> <p>Intel® Celeron® 1017U Processor 1.60 GHz, 2MB L3 Cache & 1600MHz FSB, TDP 17W, 22nm (22 Nanometer) Process Technology</p> <p>Intel® Celeron® 1037U Processor 1.80 GHz, 2MB L3 Cache & 1600MHz FSB, TDP 17W, 22nm (22 Nanometer) Process Technology</p>	<p>Single Channel DDR3 Data Channel</p> <p>Two 204 Pin SO-DIMM Sockets Supporting DDRIII (DDR3) 1333MHz/1600MHz (Real Operational Frequency Depends on Processor) Memory</p> <p>Memory Expandable up to 8GB (Using 2GB/4GB/8GB Modules)</p>	<p>One Changeable 2.5" 9.5 mm (h) SATA (Serial) Hard Disk Drive</p> <p>One mSATA SSD (Solid State Drive) with SATA Interface (Factory Option)</p>
Core Logic	Video Adapter	Audio
<p>Intel® NM70 Express Chipset</p>	<p>Intel® HD Graphics (<i>847 Processor integrated</i>)</p> <p>Dynamic Frequency</p> <p>Intel® DVMT Shared Memory Architecture up to 1748MB</p> <p>Microsoft DirectX®10.1 Compatible</p>	<p>High Definition Audio Compliant Interface</p> <p>Built-In Microphone</p> <p>2 * Built-In Speakers</p>
Display	<p>Intel® HD Graphics (<i>1007U / 1017U / 1037U Processor integrated</i>)</p> <p>Dynamic Frequency</p> <p>Intel® DVMT Shared Memory Architecture up to 1748MB</p> <p>Microsoft DirectX®11 Compatible</p>	Keyboard & Pointing Device
<p>11.6" (19.46cm) HD (1366 * 768) 16:9 Panel (3.6mm thick panel)</p>		<p>Isolated Keyboard</p> <p>Built-in TouchPad with Multi-Gesture and Scrolling Functionality</p>
		Interface
		<p>Three USB 2.0 Ports</p> <p>One HDMI™ Out Port</p> <p>One External Monitor Port</p> <p>One Headphone-Out Jack</p> <p>One Microphone-In Jack</p> <p>One RJ-45 LAN Jack</p> <p>One DC-in Jack</p>

Card Reader	Combo WLAN (802.11b/g/n) and Bluetooth v4.0 + LE Half Mini-Card Module with PCIe & USB Interface (Factory Option) Intel® Centrino® Wireless-N 105 (1*1 802.11 b/g/n) Half Mini-Card PCIe WLAN Module (Factory Option) Intel® Centrino® Wireless-N 135 (1*1 802.11 b/g/n+) Half Mini-Card PCIe WLAN & Bluetooth 3.0 Combo Module (Factory Option) 3G Module - UMTS/HSPA+-based 3G (Full Size Mini-Card) Module (Factory Option) 300K Pixels / 1.0HD USB PC Video Camera Module (Factory Option)	BIOS
<p>Embedded Multi-In-1 Card Reader</p> <ul style="list-style-type: none"> - MMC/ RS MMC - SD/ Mini SD / SDHC / SDXC - MS/ MS Pro/ MS Duo <p>Note: RS MMC/ Mini SD/ MS Duo Cards require a PC adapter</p>	Operating Systems	<p>One 48Mb SPI Flash ROM AMI™ BIOS</p>
Slot	<p>Windows® 8</p>	Power Management
<p>Two Mini-Card Slots (USB & PCIe)</p> <p>Slot 1: for WLAN Combo Half Mini-Card Module with PCIe & USB Interface</p> <p>Slot 2: for mSATA SSD (Solid State Drive) Module (Full Size Mini-Card) with SATA Interface</p> <p>OR</p> <p>for UMTS/HSPA+ based (3G) Module (Full Size Mini-Card) with USB Interface</p>	Security	<p>Wake On LAN Wake On USB</p>
Communication	<p>Kensington Lock BIOS Password</p>	Power
<p>10Mb/100Mb Base-TX Ethernet LAN</p> <p>802.11b/g/n Wireless LAN Half Mini-Card Module (Factory Option)</p>		<p>Full Range AC/DC Adapter AC input 100 - 240V, 50 - 60Hz, DC Output 19V, 2.1A (40 Watts)</p>
		Battery
		<p>Removable 4 Cell Smart Lithium-Ion Battery Pack 32.56WH</p> <p>Removable 4 Cell Smart Lithium-Ion Battery Pack 41.44WH (Factory Option)</p>
		Design Feature
		<p>Painted Style LCD Back Cover</p>



Specifications

LED Indicators

Power/Suspend, Battery, HDD/ODD,
Airplane Mode, Camera (for 1.0HD
Cameras only)

Environmental Spec

Temperature

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Dimensions & Weight

287mm (w) * 207mm (d) * 13.9 - 25.9mm (h) -
(Height Excludes Battery Area)

1.6kg with Battery