

## ASSEMBLY GUIDE STONE AIO HEIGHT ADJUST STAND




Stone height adjust stand for use with Stone AIO PC M770/M780.



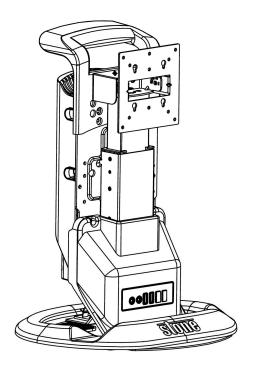

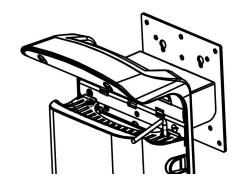


Using the tool provided remove the screw(s) holding the rear panel in position, these are located at the top.

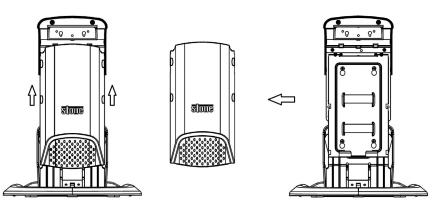




Slide the rear panel upwards to release it then lift away from the unit.

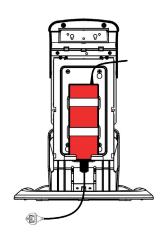




Using the Velcro fasteners secure the power supply unit onto the back of the height adjust stand and connect the AC power cable.

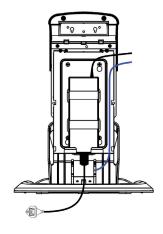



Route the front panel USB and Audio cables alongside the power supply unit as demonstrated by the blue cable.

At this point you can also add any other cables you require such as LAN or peripherals (keyboard/mouse) to the cable management system.

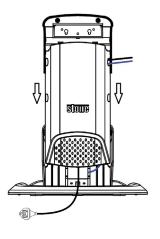






Now replace the rear panel ensuring that all of the cables which you require are threaded through one of the openings provided so that you can connect them to the Stone AIO PC.

## ASSEMBLY GUIDE STONE AIO HEIGHT ADJUST STAND



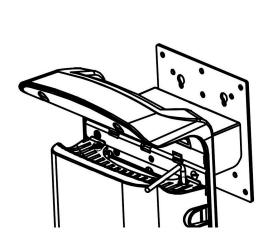

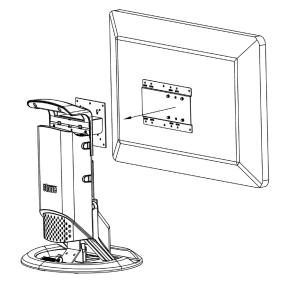

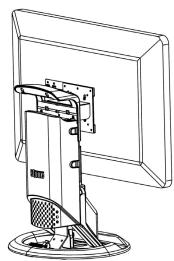




Replace the screws which hold the rear panel in position using the tool provided.




Mount the PC unit onto the height adjust stand VESA bracket ensuring the four T bolts slot into position correctly.

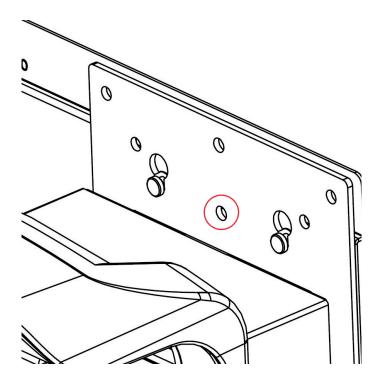



Using the tool and screw provided lock the AlO PC to the height adjust stand via the opening marked in the image.

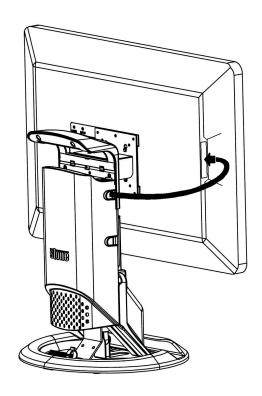



Connect the cables from the height adjust stand to the PC unit (power, audio, USB, LAN, keyboard and mouse as required).